

# Variable speed drives Altivar 312

For 3-phase motors from 0.25 to 20 HP

Catalogue

April **2014**




# Variable speed drives Altivar 312

- Brochure ..... page 3
- Selection guide ..... page 13
- Catalogue ..... page 17

# Altivar 312 range

Designed for robustness and compatibility with the control system architectures of your machines

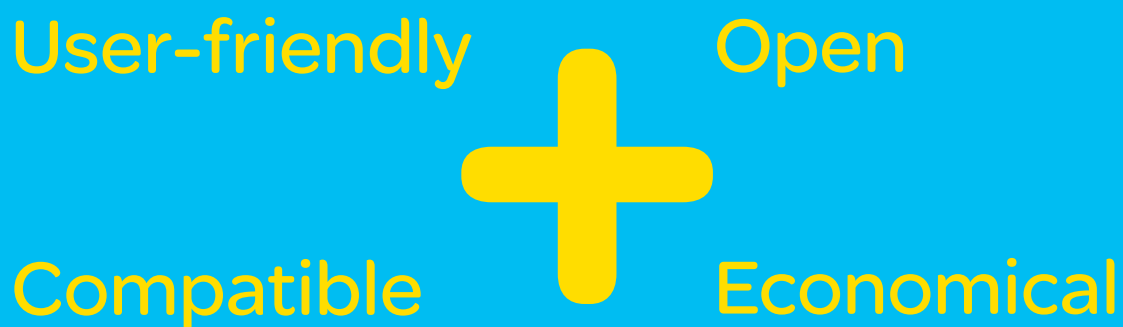

## Enhanced communication:

- CANopen Daisy Chain, DeviceNet, Profibus DP

## Simplified user interface:

- Intuitive navigation
- Local control on the front panel

Numerous application-specific functions

Auto-tuning for maximum performance

Integrated EMC filter

Rugged for use in all environments

# Increased performance for industrial machines



- Materials handling and packaging
- Packing
- Textile machines
- Special machines
- Pumps and fans



Up to 30 % more performance  
compared to the market average





1TB-2

# Special functions for each type of machine



## Materials handling

- +/- speed
- Brake sequence
- Motor switching
- Management of limit switches
- Switching frequency up to 16 kHz
- Current limitation
- Linear ramps, S, U or customised
- Second ramp



## Packaging and packing

- Brake sequence
- Output contactor control
- Accessible DC bus



## Special machines

- Current limitation
- Catch on the fly
- Controlled stop on loss of line supply
- Derated operation



## Textile machines

- 16 preset speeds
- +/-10V bipolar input reference
- PI regulator



## Pumps, ventilation

- PI regulator and reference, automatic/manual
- Automatic restart
- Stop modes in the event of a fault
- Limitation of low speed operating time
- Detection of current, torque and thermal state thresholds of drive and motor

## Other options

- Protection of machine by locking parameters
- Multiple assignment of logic inputs
- Saving a set of parameters
- Management of external faults
- Display of parameters: current, power, torque, speed, frequency, etc.



50 application-specific functions listed in the catalogue



# Simplicity to boost the performance of your machines

## Local control on the front panel

Ergonomically designed button for simple navigation

Run/Stop commands on the device

Snap-lock seal



Universal communication tools and networks for your control system architectures via the RJ45 port.

## Increased productivity

- Reduced design and installation costs thanks to the SoMove software workshop
- Auto-tuning saves setup time and optimises performance
- Full mechanical and software compatibility with the Altivar 31 in event of replacement
- The compact size means smaller enclosures (integrated EMC filter and side-by-side mounting without derating)

## Remote HMI terminals




- Same as Altivar 61 and 71
- Plain text in your language



- Same as Altivar 12
- LED display

# Communication with your control system architectures

One connection, one software tool to programme the PLC and configure the drives

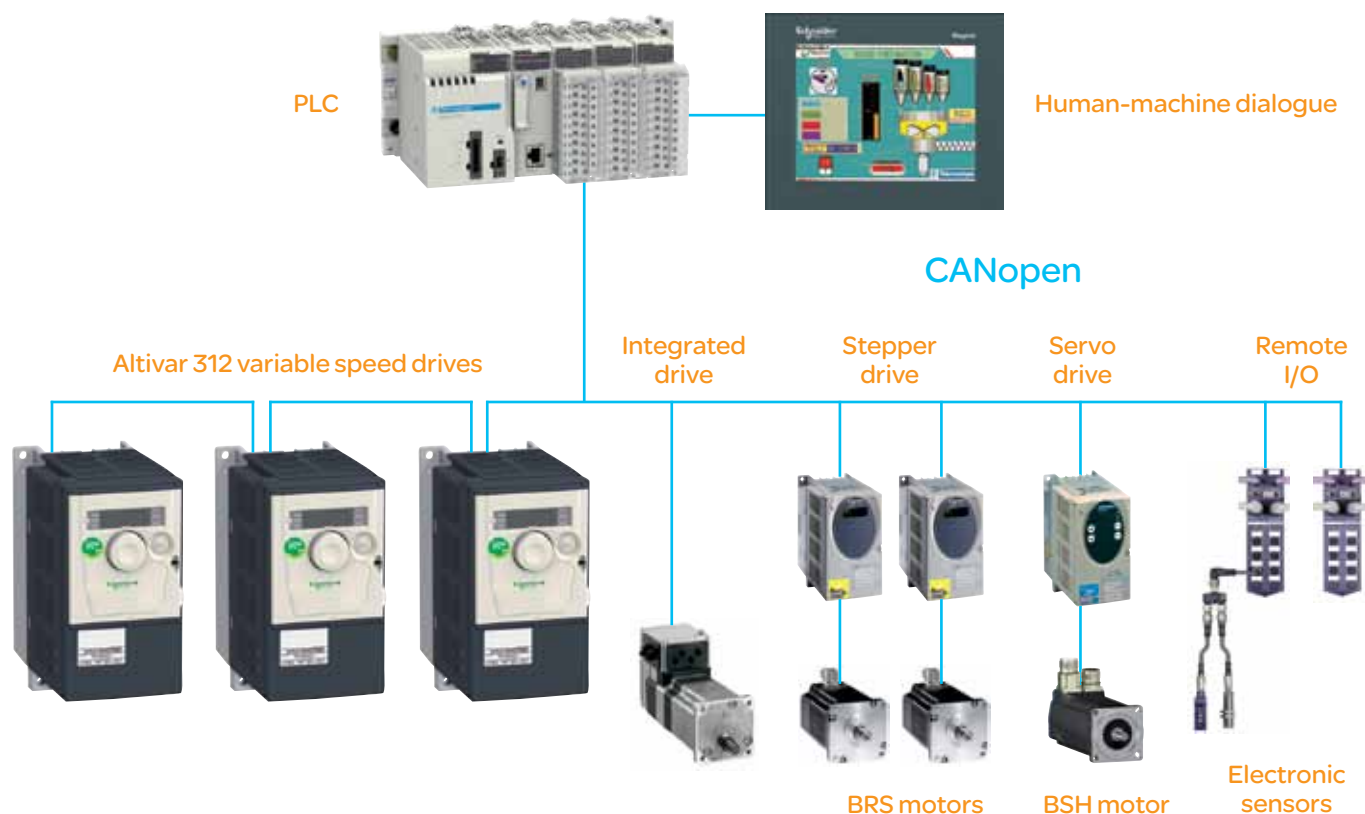

**Altivar 312 integrates transparently into your architectures and communicates with all control system products:**

- Modbus and CANopen are integrated as standard
- Option cards: CANopen Daisy Chain, DeviceNet, Profibus DP
- Gateways for Ethernet/Modbus and Fipio/Modbus



**A global range with universal product references:**

Altivar 312 accompanies your machines wherever they travel in the world.



# User-friendliness expressed through dialogue

## A common platform

Duplicate the configuration using the many common tools available for Altivar and Lexium series 2: Simple Loader, Multi-Loader, graphic interface, SoMove software workshop, Bluetooth interface and mobile phone software.

## Preparation of files

The SoMove software workshop enables the design office to prepare the files for drive configuration. 2 methods for loading the configuration:

- Direct from PC to drive using a USB/RJ45 cable
- Without a PC, via an SD memory card using Multi-Loader

## Equipment testing


The SoMove software workshop serves as a dynamic debugging tool for your machine. The oscilloscope function is extremely useful when making adjustments.

## Multi-Loader configuration tool

The configurations of several drives are stored on a standard SD memory card. Simply load it directly into your PC or insert into the Multi-Loader, which can be used as a card reader.

## Simple Loader duplication tool

Copy the settings from a configured drive and duplicate on all your machines.

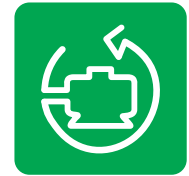

SoMove  
Software workshop



**Save Time**  
when setting up the device: using Multi-Loader, you can select and transfer the required file in a matter of seconds.



# A wide range of products meeting safety and international standards

## A robust legacy

- Excellent resistance to harsh environments (50°)
- Coated cards as standard (IEC 60721-3-3 Classes 3C2 and 3S2)
- Excellent resistance to power supply and motor interference

## Large voltage range

- Single-phase 200 to 240 V with an integrated C2 EMC filter and optional C1 filter
- Three-phase 200 to 240 V
- Three-phase 380 to 500 V with integrated C2 EMC filter
- Three-phase 525 to 600 V

## Compliance with specific requirements

- Integrated Class 2 EMC filter for radiated and conducted emissions
- Local control integrated in the drive (programmable)
- DIN rail mounting
- UL Type 1 kit

## Standards and certifications

CSA, EC/EN 61800-5-1, IEC/EN 61800-3 (environments 1 and 2, C1 to C3), CE, UL, C-Tick, NOM, GOST




# Search, visualize, and download

Use your PC to quickly access detailed and comprehensive information on all our products

Visit: [www.schneider-electric.com/ca](http://www.schneider-electric.com/ca)

Products and Services > Automation and Control > Motion & Drives > Altivar 312 > Click the model number that interests you

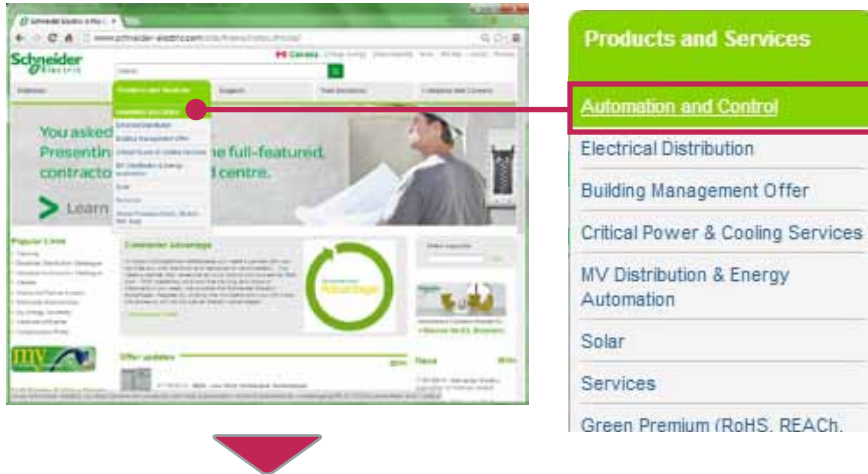


Products and Services > Automation and Control > Motion & Drives > Altivar 312 > Click the model number that interests you



Products and Services > Automation and Control > Motion & Drives > Altivar 312 > Click the model number that interests you



- ★ To learn more about
- Alltivar 312 Home Page
- Overview
  - Description
  - Benefits
  - Applications
- Downloads
  - Documents
- Support
  - Contact Us

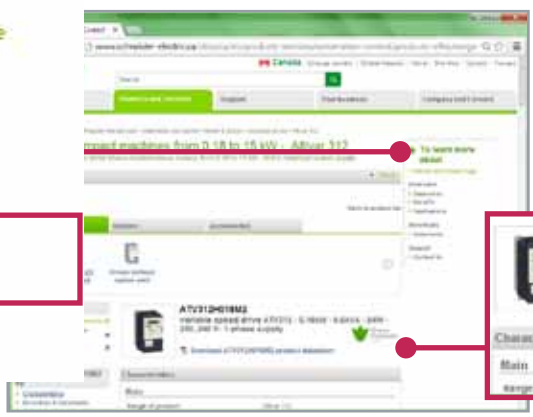

**ATV312H016M2**  
variable speed drive ATV312 - 0.18kW - 0.6kVA - 24V - 256..340 V- 1-phase supply

Download ATV312H016M2 product datasheet

**Characteristics:**

**Main**

|                  |              |
|------------------|--------------|
| Range of product | Alltivar 312 |
|------------------|--------------|



Dynamic Catalogues



Certificates



Product data sheet  
Includes technical characteristics and dimensions

You can get this information in one single pdf file.




Technical Publications



SoMove Lite Software



# IP 20 or IP 21 variable speed drives for asynchronous and synchronous motors

| Type of machine                                       | Simple machines   | Pumps and fans (building (HVAC)) (1)   |   |   |
|---|---|--|---|---|
|   |                          |                                    |            |   |
| <b>Power range for 50...60 Hz (kW/HP) line supply</b> | <b>0.18...4/0.25...5</b>  | <b>0.18...15/0.25...20</b>   | <b>0.75...75/1...100</b>  |   |
| Single-phase 100...120 V (kW/HP)                      | 0.18...0.75/0.25...1  | –  | –   |   |
| Single-phase 200...240 V (kW/HP)                      | 0.18...2.2/0.25...3   | 0.18...2.2/0.25...3  | –   |   |
| Three-phase 200...230 V (kW/HP)                       | –   | –  | –   |   |
| Three-phase 200...240 V (kW/HP)                       | 0.18...4/0.25...5   | 0.18...15/0.25...20  | 0.75...30/1...40  |   |
| Three-phase 380...480 V (kW/HP)                       | –   | –  | 0.75...75/1...100   |   |
| Three-phase 380...500 V (kW/HP)                       | –   | 0.37...15/0.5...20   | –   |   |
| Three-phase 500...600 V (kW/HP)                       | –   | –  | –   |   |
| Three-phase 525...600 V (kW/HP)                       | –   | 0.75...15/1...20   | –   |   |
| Three-phase 500...690 V (kW/HP)                       | –   | –  | –   |   |
| <b>Degree of protection</b>                           | IP 20   | IP 21  |   |   |
| <b>Type of cooling (2)</b>                            | Heatsink or base plate  | Heatsink   |   |   |
| <b>Drive</b>  | Output frequency  | 0.1...400 Hz   | 0.1...500 Hz  | 0.5...200 Hz  |
| Type of control                                       | Asynchronous motor  | Standard (voltage/frequency) Performance (sensorless flux vector control) Pump/fan (Kn <sup>2</sup> quadratic ratio) | Standard (voltage/frequency) Performance (sensorless flux vector control) Energy saving ratio | Sensorless flux vector control Voltage/frequency ratio (2 points) Energy saving ratio |
|   | Synchronous motor   | –  | –   | –   |
|   | Transient overtorque  | 150...170% of the nominal motor torque   | 170...200% of the nominal motor torque  | 120% of the nominal motor torque  |
| <b>Functions</b>                                      |   |  |   |   |
| Number of functions                                   | 40  | 50   | 50  |   |
| Number of preset speeds                               | 8   | 16   | 7   |   |
| Number of I/O   |   |  |   |   |
| Analog inputs   | 1   | 3  | 2   |   |
| Logic inputs  | 4   | 6  | 3   |   |
| Analog outputs  | 1   | 1  | 1   |   |
| Logic outputs   | 1   | –  | –   |   |
| Relay outputs   | 1   | 2  | 2   |   |
| <b>Communication</b>                                  | Integrated  | Modbus   | Modbus and CANopen  | Modbus, METASYS N2, APOGEE FLN, BACnet  |
|   | Available as an option  | –  | CANopen Daisy Chain, DeviceNet, PROFIBUS DP, Modbus TCP, Fipio                                | LONWORKS  |
| <b>Cards (available as an option)</b>                 | –   | –  | –   | –   |
| <b>Dialogue tools</b>                                 |   |  |   |   |
|   | IP 54 or IP 65 remote terminal  | IP 54 or IP 65 remote terminal IP 54 remote graphic display terminal   | IP 54 or IP 65 remote graphic display terminal  |   |
| <b>Configuration tools</b>                            | Setup software  | SoMove   | PCSoft for ATV 212  |   |
|   | Configuration tools   | Simple Loader, Multi-Loader  | Multi-Loader  |   |
| <b>Standards and certifications</b>                   |   |  |   |   |
|   | IEC 61800-5-1<br>IEC 61800-3 (environments 1 and 2, categories C1 to C3, cat. C1 with option for ATV 212) | –  | –   |   |
|   | CE, UL, CSA, C-Tick, NOM, GOST  | CE, UL, CSA, DNV, C-Tick, NOM, GOST  | EN 55011: Group 1, class A and class B with option card.<br>CE, UL, CSA, C-Tick, NOM          |   |
| <b>References</b>                                     | <b>ATV 12</b>   | <b>ATV 312</b>   | <b>ATV 212</b>  |   |

(1) Heating, Ventilation and Air Conditioning



More technical information on [www.schneider-electric.com](http://www.schneider-electric.com)

**Pumps and fans  
(industrial)**



**Complex machines**



**0.37...800/0.5...900**

–  
0.37...5.5/0.5...7.5  
–  
0.75...90/1...125  
0.75...630/1...900  
–  
2.2...7.5/3...10  
–  
2.2...800/3...800

IP 20

Heatsink or water-cooled system

0.1...500 Hz for the entire range  
0.1...599 Hz up to 37 kW/50 HP at 200...240 V ~ and 380...480 V ~  
Sensorless flux vector control  
Voltage/frequency ratio (2 or 5 points)  
Energy saving ratio

Vector control without speed feedback  
120% of the nominal motor torque for 60 seconds

> 100  
8  
2...4  
6...20  
1...3  
0...8  
2...4

Modbus and CANopen

Modbus TCP Daisy Chain, Modbus/Uni-Telway, EtherNet/IP (RSTP), DeviceNet, PROFIBUS DP V0 and V1, INTERBUS, CC-LINK, LonWORKS, METASYS N2, APOGEE FLN, BACnet, Profinet, EtherCAT

I/O extension cards, "Controller Inside" programmable card, multi-pump cards, encoder interface cards

IP 54 or IP 65 remote graphic display terminal

SoMove

Simple Loader, Multi-Loader

IEC 61800-5-1  
IEC 61800-3 (environments 1 and 2, categories C1 to C3), IEC 61000-4-2/4-3/4-4/4-5/4-6/4-11

CE, UL, CSA, DNV, C-Tick, NOM, GOST

**ATV 61**

**0.37...630/0.5...700**

–  
0.37...5.5/0.5...7.5  
–  
0.37...75/0.5...100  
0.75...500/1...700  
–  
1.5...7.5/2...10  
–  
1.5...630/2...700

Heatsink, base plate or water-cooled system

0.1...500 Hz for the entire range  
0.1...599 Hz up to 37 kW/50 HP at 200...240 V ~ and 380...480 V ~  
Flux vector control with or without sensor  
Voltage/frequency ratio (2 or 5 points)  
ENA System

Vector control with or without speed feedback  
220% of the nominal motor torque for 2 seconds  
170% for 60 seconds

> 150  
16  
2...4  
6...20  
1...3  
0...8  
2...4

Modbus TCP Daisy Chain, Modbus/Uni-Telway, EtherNet/IP (RSTP), DeviceNet, PROFIBUS DP V0 and V1, INTERBUS, CC-LINK, Profinet, EtherCAT

Interface cards for incremental, resolver, SinCos, SinCos Hiperface®, EnDat® or SSI encoders, I/O extension cards, Controller Inside programmable card

**ATV 71**

(2) The type of cooling depends on the model.



More technical information on [www.schneider-electric.com](http://www.schneider-electric.com)

# IP 54 or IP 55 variable speed drives for asynchronous and synchronous motors

| Type of machine                                       |                        | Simple machines   | Pumps and fans (building HVAC)) (1)   |
|---|------------------------|---|---|
|   |                        |                         |   |
| <b>Power range for 50...60 Hz (kW/HP) line supply</b> |                        | <b>0.18...15/0.25...20</b>  | <b>0.75...75/1...100</b>  |
| Single-phase 200...240 V (kW/HP)                      |                        | 0.18...2.2/0.25...3   | –   |
| Three-phase 380...480 V (kW/HP)                       |                        | –   | 0.75...75/1...100   |
| Three-phase 380...500 V (kW/HP)                       |                        | 0.37...15/0.5...20  | –   |
| <b>Degree of protection</b>                           |                        | IP 55   | IP 55   |
| <b>Variants</b>                                       |                        | Enclosure user-definable up to 4 kW/5 HP: Vario switch disconnecter, LEDs, selector switch, potentiometer | –   |
| <b>Drive</b>  | Output frequency       | 0.1...500 Hz  | 0.1...200 Hz  |
|   | Type of control        | Sensorless flux vector control<br>Voltage/frequency ratio   | Sensorless flux vector control<br>Voltage/frequency ratio (2 points)<br>Energy saving ratio |
|   |                        | –   | –   |
|   | Transient overtorque   | 170...200% of the nominal motor torque  | 120% of the nominal motor torque for 60 seconds   |
| <b>Functions</b>                                      |                        |   |   |
| Number of functions                                   |                        | 50  | 50  |
| Number of preset speeds                               |                        | 16  | 7   |
| Number of I/O   | Analog inputs          | 3   | 2   |
|   | Logic inputs           | 6   | 3   |
|   | Analog outputs         | 1   | 1   |
|   | Logic outputs          | –   | –   |
|   | Relay outputs          | 2   | 2   |
| <b>Communication</b>                                  | Integrated             | Modbus and CANopen  | Modbus, METASYS N2, APOGEE FLN, BACnet  |
|   | Available as an option | Modbus TCP, Fipio, PROFIBUS DP, DeviceNet   | LonWorks  |
| <b>Cards (available as an option)</b>                 |                        | –   | –   |
| <b>Dialogue tools</b>                                 |                        | IP 65 remote terminal   | IP 54 or IP 65 remote graphic display terminal  |
| <b>Configuration tools</b>                            | Setup software         | SoMove  | PCSoft for ATV 212 drive  |
|   | Configuration tool     | Simple Loader   | Multi-Loader  |
| <b>Standards and certifications</b>                   |                        | IEC 61800-5-1, IEC 61800-3 (environments 1 and 2, categories C1 to C3)<br>CE, UL, CSA, C-Tick, GOST       |   |
| <b>References</b>                                     |                        | <b>ATV 31C</b>  | <b>ATV 212W</b>   |
| <b>Catalogues</b>                                     |                        | "Altivar 31C variable speed drives"<br>(1) Heating, Ventilation and Air Conditioning                      | "Altivar 212 variable speed drives"   |



**Pumps and fans  
(industrial)**

**Complex machines**



0.75...90/1...125

0.75...75/1...100

0.75...90/1...125

0.75...75/1...100

IP 54

– Equipped with a Vario switch disconnecter

– Equipped with a Vario switch disconnecter

0.1...599 Hz from 0.75 to 45 kW/1...60 HP  
0.1...500 Hz from 55...90 kW/75...125 HP

0.1...599 Hz from 0.75 to 37 kW/1...50 HP  
0.1...500 Hz from 45 to 75 kW/60...100 HP

Sensorless flux vector control  
Voltage/frequency ratio (2 or 5 points)  
Energy saving ratio

Sensorless flux vector control  
Voltage/frequency ratio (2 or 5 points)  
ENA System

Vector control without speed feedback  
110% of the nominal motor torque for 60 seconds

Vector control with or without speed feedback  
220% of the nominal motor torque for 2 seconds  
170% for 60 seconds

>100

>150

8

16

2...4

2...4

6...20

6...20

1...3

1...3

0...8

0...8

2...4

2...4

Modbus and CANopen

Modbus TCP Daisy Chain, Modbus/Uni-Telway, EtherNet/IP (RSTP), DeviceNet, PROFIBUS DP V0 and V1, INTERBUS, CC-LINK, LONWORKS, METASYS N2, APOGEE FLN, BACnet, Profinet, EtherCAT

Modbus TCP Daisy Chain, Modbus/Uni-Telway, EtherNet/IP (RSTP), DeviceNet, PROFIBUS DP V0 and V1, INTERBUS, CC-LINK, Profinet, EtherCAT

I/O extension cards, "Controller Inside" programmable card, multi-pump cards, encoder interface cards

Interface cards for incremental, resolver, SinCos, SinCos Hiperface®, EnDat® or SSI encoders, I/O extension cards, Controller Inside programmable card

IP 54 or IP 65 remote graphic display terminal

SoMove

Simple Loader, Multi-Loader

IEC 61800-5-1, IEC 61800-3 (environments 1 and 2, categories C1 to C3), IEC 61000-4-2/4-3/4-4/4-5/4-6/4-11

CE, UL, CSA, DNV, C-Tick, NOM, GOST

**ATV 61W**

**ATV 61E5**

**ATV 71W**

**ATV 71E5**

"Altivar 71 variable speed drives"



More technical information on [www.schneider-electric.com](http://www.schneider-electric.com)



# Variable speed drives

## Altivar 312

---

- **Presentation** ..... page 18
- **Altivar 312 variable speed drives**
  - **Characteristics** ..... page 20
  - **References** ..... page 26
- **Options**
  - **Communication buses and networks** ..... page 28
  - **Dialogue tools** ..... page 34
  - **Configuration tools** ..... page 35
  - **Braking resistors** ..... page 40
  - **Line chokes** ..... page 42
  - **Additional EMC input filters** ..... page 44
  - **Output filters and motor chokes** ..... page 46
- **SoMove setup software** ..... page 36
- **Dimensions** ..... page 52
- **Schemes** ..... page 58
- **Mounting and installation recommendations** ..... page 60
- **Motors starters** ..... page 62
- **Functions** ..... page 64



Application: packaging



Application: material handling

### Presentation

The Altivar 312 drive is a frequency inverter for 200...600 V three-phase asynchronous motors from 0.25 to 20 HP.

The Altivar 312 drive is robust, compact and easy to install. Its integrated functions are particularly suitable for the requirements of applications involving simple industrial machines.

By taking account of constraints on product setup and use right from the design stage, we are able to offer a reliable, cost-effective solution to manufacturers of simple machines and installers.

With its various communication cards that are available as options, the Altivar 312 drive integrates perfectly in the main control system architectures.

Examples of solutions provided:

- Numerous options for loading, editing and saving drive configurations using various tools, such as the SoMove setup software, remote display terminals and the Simple Loader and Multi-Loader configuration tools.
- Adaptation to industrial communication buses and networks by simply replacing the drive control I/O card with one of the communication cards
- User interface identical to the Altivar 12 range of variable speed drives, making setup easy and enabling those using it to adapt quickly.

### Applications

The Altivar 312 drive incorporates functions that are suitable for the most common applications, including:

- Material handling (small conveyors, hoists, etc.)
- Packing and packaging machines (small bagging machines, labelling machines, etc.)
- Special machines (mixers, kneaders, textile machines, etc.)
- Pumps, compressors, fans

### Functions

The Altivar 312 drive has six logic inputs, three analog inputs, one logic/analog output and two relay outputs.

The main functions available are as follows:

- Motor and drive protection
- Linear, S, U or customized acceleration and deceleration ramps
- Local control of the speed reference using the navigation button
- +/- speed
- 16 preset speeds
- PI regulator and references
- 2-wire/3-wire control
- Brake sequence
- Automatic catching a spinning load with speed detection and automatic restart
- Fault configuration and stop type configuration
- Saving the configuration in the drive

Several functions can be assigned to one logic input.

### An optimized offer

The Altivar 312 range of variable speed drives covers motor power ratings from 0.25 HP to 20 HP with four types of power supply:

- 200 V...240 V single-phase, 0.25 HP to 3 HP (**ATV 312H●●●M2**)
- 200 V...240 V three-phase, 0.25 HP to 20 HP (**ATV 312H●●●M3**)
- 380 V...500 V three-phase, 0.5 HP to 20 HP (**ATV 312H●●●N4**)
- 525 V...600 V three-phase, 1 HP to 20 HP (**ATV 312H●●●S6**)

Several drives can be mounted side by side to save space.

The Altivar 312 drive integrates the Modbus and CANopen communication protocols as standard. The protocols can be accessed via the RJ45 connector on the underside of the drive.


In addition to the Modbus and CANopen protocols that can be accessed as standard, the Altivar 312 drive can be connected to the main industrial communication buses and networks by replacing the drive's control I/O card with one of the communication cards that are available as options: CANopen Daisy chain, DeviceNet and PROFIBUS DP. The Modbus TCP network and the Fipio bus are also accessible via dedicated gateways.

See page 28.



ATV 312H037M3

ATV 312HD15N4

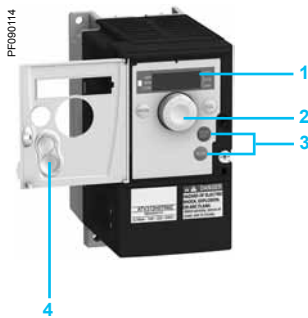

ATV 312H075M2  
front panel door open



Remote display  
terminal with cover closed



Remote display terminal with  
cover open: RUN, FWD/REV  
and STOP/RESET keys  
accessible



Remote graphic display  
terminal



Multi-Loader  
configuration tool



Simple Loader  
configuration tool

### An optimized offer (continued)

The entire range complies with international standards IEC 61800-5-1, IEC 61800-2 and IEC 61800-3, and UL, CSA, C-Tick, NOM and GOST certifications. It has been developed to meet the requirements of environmental directives (RoHS) and those of the European Directives to obtain the CE mark.

### EMC electromagnetic compatibility

The incorporation of EMC filters in **ATV 312H●●●M2** and **ATV 312H●●●N4** drives and compliance with EMC requirements simplify installation and provide a very economical means of ensuring devices meet the criteria to receive the CE mark. This filter can be disconnected via a jumper or a moveable wire with tag. The **ATV 312H●●●M3** and **ATV 312H●●●S6** drives are designed without an EMC filter.

Filters are available as an option and can be installed by the customer to reduce the emission levels of **ATV 312H●●●M2**, **ATV 312H●●●M3** and **ATV 312H●●●N4** drives. See page 44.

### External accessories and options

External accessories and options can be used with Altivar 312 drives:

- UL Type 1 conformity kits, plates for direct mounting on 35 mm  $\text{U}$  rails, etc.
- Braking resistors, line chokes, additional EMC input filters, output filters, etc.

### Dialogue and configuration tools

#### Human-Machine interface

The 4-digit display **1** displays drive states, faults and parameter values. The navigation button **2** is used to move around the menus, modify values and change the motor speed in local mode. The RUN and STOP/RESET keys **3** are used to control motor starting and stopping in local mode. These two keys can be made accessible on the front panel by removing the cover **4** from the door.

#### HMI terminals



The Altivar 312 drive can be connected to a remote display terminal or a remote graphic display terminal, which are available as options. The remote display terminal can be mounted on an enclosure door with IP 54 or IP 65 degree of protection. It provides access to the same functions as the Human-Machine interface. The remote graphic display terminal, with its "full text" display in the user's language, provides a user-friendly interface for configuration, debugging or maintenance. See page 34.

#### SoMove setup software

The SoMove setup software is used to configure, adjust and debug the Altivar 312 drive with the Oscilloscope function, and also for maintenance of this drive, like all other Schneider Electric drives and starters. It can be used with a direct connection or a Bluetooth® wireless connection. See page 35.

#### Simple Loader and Multi-Loader tools

The Simple Loader tool enables one powered-up drive's configuration to be duplicated on another powered-up drive. The Multi-Loader tool enables configurations to be copied from a PC or a powered-up drive and duplicated on another powered-up drive. See page 35.

| Environmental characteristics   |   |    |  |
|---|---|----|--|
| <b>Conformity to standards</b>  |   |    | Altivar 312 drives have been developed to conform to the strictest international standards and the recommendations relating to electrical industrial control devices (IEC), in particular:<br>IEC 61800-5-1 (low voltage), IEC 61800-3 (EMC immunity and conducted and radiated EMC emissions).  |
| EMC immunity  |   |    | IEC 61800-3, Environments 1 and 2 (EMC requirement and specific test methods)<br>IEC 61000-4-2 level 3 (electrostatic discharge immunity test)<br>IEC 61000-4-3 level 3 (radio-frequency radiated electromagnetic field immunity test)<br>IEC 61000-4-4 level 4 (electrical fast transient/burst immunity test)<br>IEC 61000-4-5 level 3 (surge immunity test) |
| Conducted and radiated EMC emissions for drives   | ATV 312H●●●●●   |    | IEC 61800-3, Environments: 2 (industrial power supply) and 1 (public power supply), restricted distribution  |
|   | ATV 312H018M2...HU15M2<br>ATV 312H037N4...HU40N4  |    | IEC 61800-3 category C2<br>With additional EMC filter (1):<br>■ IEC 61800-3 category C1  |
|   | ATV 312HU22M2,<br>ATV 312HU55N4...HD15N4  |    | IEC 61800-3 category C3<br>With additional EMC filter (1):<br>■ IEC 61800-3 category C2<br>■ IEC 61800-3 category C1   |
|   | ATV 312H018M3...HD15M3  |    | With additional EMC filter (1):<br>■ IEC 61800-3 category C2   |
| <b>CE marking</b>   |   |    | The drives are marked CE in accordance with the European low voltage (2006/95/EC) and EMC (2004/108/EC) directives   |
| <b>Product certification</b>  |   |    | UL, CSA, NOM, GOST, C-Tick and DNV   |
| <b>Degree of protection</b>   |   |    | IP 31 and IP 41 on upper part and IP 21 on connection terminals  |
| <b>Vibration resistance</b>   | Drive not mounted on  rail |    | Conforming to IEC 60068-2-6: 1.5 mm peak to peak from 3 to 13 Hz, 1 gn from 13 to 150 Hz   |
| <b>Shock resistance</b>   |   |    | 15 gn for 11 ms conforming to IEC 60068-2-27   |
| <b>Maximum ambient pollution</b><br>Definition of insulation  |   |    | Degree 2 conforming to IEC 61800-5-1   |
| <b>Environmental conditions</b><br>Use  |   |    | IEC 60721-3-3 classes 3C2 and 3S2  |
| <b>Relative humidity</b>  |   | %  | 5...95 non condensing, no dripping water, conforming to IEC 60068-2-3  |
| <b>Ambient air temperature</b><br>around the device   | Operation   | °C | - 10...+ 50 without derating<br>- 10...+ 60 with derating removing the protective cover on top of the drive (see derating curves, page 60430/4)  |
|   | Storage   | °C | - 25...+ 70  |
| <b>Maximum operating altitude</b>   | ATV 312H●●●●●   | m  | 1000 without derating  |
|   | ATV 312H●●●●M2  | m  | Up to 2000 for single-phase supplies and corner grounded distribution networks, derating the current by 1% for each additional 100 m   |
|   | ATV 312H●●●●M3<br>ATV 312H●●●●N4<br>ATV 312H●●●●S6  | m  | Up to 3000 metres for three-phase supplies, derating the current by 1% for each additional 100 m   |
|   |   |    |  |
| <b>Operating position</b><br>Maximum permanent angle in relation to the normal vertical mounting position |   |    |   |

(1) See table on page 45 to check the permitted cable lengths.




| Drive characteristics  |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|--|--|---|---|--|----------------------|--------------------------------|-----------------|--------------------------|-----------------------|-----------------|-------------------------|-----------------------|-----------------|-------------------------|-----------------------|-----------------|-------------------------|-----------------------|
| Output frequency range   |  | Hz  | 0...500   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Switching frequency  |  | kHz   | Nominal switching frequency: 4 kHz without derating in continuous operation. Adjustable during operation from 2...16 kHz<br>Above 4 kHz, derate the nominal drive current. The nominal motor current should not exceed this value. See derating curves on page 60430/4  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Speed range  |  |   | 1...50  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Transient overtorque   |  |   | 170...200% of nominal motor torque (typical value)  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Braking torque   | With braking resistor  | ATV 312H●●●●●   | 100% of nominal motor torque continuously and up to 150% for 60 s   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | Without braking resistor   | ATV 312H018M2   | 150% of nominal motor torque (typical value)  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  |  | ATV 312H037M2...H075M2<br>ATV 312H018M3...H075M3<br>ATV 312H037N4...H075N4<br>ATV 312H075S6 | 100% of nominal motor torque (typical value)  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  |  | ATV 312HU11M2, HU15M2<br>ATV 312HU11M3, HU15M3<br>ATV 312HU11N4, HU15N4<br>ATV 312HU15S6    | 50% of nominal motor torque (typical value)   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  |  | ATV 312HU22M2<br>ATV 312HU22M3...HD15M3<br>ATV 312HU22N4...HD15N4<br>ATV 312HU22S6...HD15S6 | 30% of nominal motor torque (typical value)   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Maximum transient current  |  |   | 150% of the nominal drive current for 60 seconds (typical value)  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Motor control profiles   |  |   | <ul style="list-style-type: none"> <li>■ Standard ratio (voltage/frequency)</li> <li>■ Performance ratio (sensorless flux vector control)</li> <li>■ Pump/fan ratio (Kn<sup>2</sup> quadratic ratio)</li> <li>■ Energy saving ratio (specifically for ventilation)</li> </ul>   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Frequency loop gains   |  |   | Factory-set with speed loop stability and gain<br>Possible options for machines with high resistive torque or high inertia, or for machines with fast cycles  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Slip compensation  |  |   | Automatic whatever the load. Can be inhibited or adjusted   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Electrical power characteristics   |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Power supply   | Voltage  | V   | 200 - 15% ... 240 + 10% single-phase for ATV 312●●●●●M2<br>200 - 15% ... 240 + 10% three-phase for ATV 312●●●●●M3<br>380 - 15% ... 500 + 10% three-phase for ATV 312●●●●●N4<br>525 - 15% ... 600 + 10% three-phase for ATV 312●●●●●S6   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | Frequency  | Hz  | 50...60 + 5%  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Prospective short-circuit current I <sub>sc</sub>                            | ATV 312●●●●●M2   | A   | ≤ 1000 (I <sub>sc</sub> at the connection point) for single-phase power supply  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | ATV 312H018M3...HU40M3<br>ATV 312H037N4...HU40N4<br>ATV 312H075S6...HU40S6                           | A   | ≤ 5000 (I <sub>sc</sub> at the connection point) for three-phase power supply   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | ATV 312HU55M3...HD15M3<br>ATV 312HU55N4...HD15N4<br>ATV 312HU55S6...HD15S6                           | A   | ≤ 22000 (I <sub>sc</sub> at the connection point) for three-phase power supply  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Drive supply voltage and output voltage                                      |  |   | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th></th> <th>Drive supply voltage</th> <th>Drive output voltage for motor</th> </tr> </thead> <tbody> <tr> <td>ATV 312H●●●●●M2</td> <td>V 200...240 single-phase</td> <td>200...240 three-phase</td> </tr> <tr> <td>ATV 312H●●●●●M3</td> <td>V 200...240 three-phase</td> <td>200...240 three-phase</td> </tr> <tr> <td>ATV 312H●●●●●N4</td> <td>V 380...500 three-phase</td> <td>380...500 three-phase</td> </tr> <tr> <td>ATV 312H●●●●●S6</td> <td>V 525...600 three-phase</td> <td>525...600 three-phase</td> </tr> </tbody> </table> |  | Drive supply voltage | Drive output voltage for motor | ATV 312H●●●●●M2 | V 200...240 single-phase | 200...240 three-phase | ATV 312H●●●●●M3 | V 200...240 three-phase | 200...240 three-phase | ATV 312H●●●●●N4 | V 380...500 three-phase | 380...500 three-phase | ATV 312H●●●●●S6 | V 525...600 three-phase | 525...600 three-phase |
|  | Drive supply voltage   | Drive output voltage for motor  |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| ATV 312H●●●●●M2  | V 200...240 single-phase   | 200...240 three-phase   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| ATV 312H●●●●●M3  | V 200...240 three-phase  | 200...240 three-phase   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| ATV 312H●●●●●N4  | V 380...500 three-phase  | 380...500 three-phase   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| ATV 312H●●●●●S6  | V 525...600 three-phase  | 525...600 three-phase   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Connection characteristics   |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| (drive terminals for line supply, motor output, DC bus and braking resistor) |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Drive terminals  |  |   | L1, L2, L3, U, V, W, PC/–, PA/+, PB   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Maximum wire size and tightening torque                                      | ATV 312H018M2...H075M2<br>ATV 312H018M3...HU15M3   |   | 2.5 mm <sup>2</sup> (AWG 14)<br>0.8 Nm  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | ATV 312HU11M2...HU22M2<br>ATV 312HU22M3...HU40M3<br>ATV 312H037N4...HU40N4<br>ATV 312H075S6...HU40S6 |   | 5 mm <sup>2</sup> (AWG 10)<br>1.2 Nm  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | ATV 312HU55M3, HU75M3<br>ATV 312HU55N4, HU75N4<br>ATV 312HU55S6, HU75S6                              |   | 16 mm <sup>2</sup> (AWG 6)<br>2.5 Nm  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  | ATV 312HD11M3, HD15M3<br>ATV 312HD11N4, HD15N4<br>ATV 312HD11S6, HD15S6                              |   | 25 mm <sup>2</sup> (AWG 3)<br>4.5 Nm  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
|  |  |   |   |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |
| Electrical isolation   |  |   | Electrical isolation between power and control (inputs, outputs, power supplies)  |  |                      |                                |                 |                          |                       |                 |                         |                       |                 |                         |                       |                 |                         |                       |

| Electrical control characteristics  |  |
|---|--|
| <b>Available internal supplies</b>  | Protected against short-circuits and overloads: <ul style="list-style-type: none"> <li>■ One 10 V <math>\pm</math> (0/+ 8%) supply for the reference potentiometer (2.2 to 10 k<math>\Omega</math>), maximum current 10 mA</li> <li>■ One 24 V <math>\pm</math> supply (min. 19 V, max. 30 V) for the control logic inputs, maximum current 100 mA</li> </ul>  |
| <b>Analog inputs</b>  | Sampling time < 8 ms<br>Resolution: 10 bits<br>Accuracy: $\pm$ 4.3%<br>Linearity: $\pm$ 0.2% of the maximum scale value<br>Use: <ul style="list-style-type: none"> <li>■ 100 m maximum with shielded cable</li> <li>■ 25 m maximum with unshielded cable</li> </ul>  |
| AI1   | One 0...10 V $\pm$ analog voltage input, impedance 30 k $\Omega$ , maximum safe voltage 30 V   |
| AI2   | One $\pm$ 10 V bipolar voltage analog input, impedance 30 k $\Omega$ , maximum safe voltage 30 V   |
| AI3   | One X-Y mA analog current input, X and Y programmable from 0 to 20 mA, with impedance 250 $\Omega$   |
| <b>Analog voltage outputs or analog current outputs configurable as logic outputs</b> | 2 analog outputs: <ul style="list-style-type: none"> <li>■ 1 analog voltage output (AOV)</li> <li>■ 1 analog current output (AOC) configurable as a logic output.</li> </ul> These 2 analog outputs cannot be used at the same time  |
| AOV   | 0...10 V $\pm$ analog voltage output, min. load impedance 470 $\Omega$<br>8-bit resolution, accuracy $\pm$ 1%, linearity $\pm$ 0.2% of the maximum scale value   |
| AOC   | 0...20 mA analog current output, max. load impedance 800 $\Omega$<br>8-bit resolution, accuracy $\pm$ 1%, linearity $\pm$ 0.2%<br>The AOC analog output can be configured as a 24 V logic output, max. 20 mA, min. load impedance 1.2 k $\Omega$<br>Refresh time < 8 ms  |
| <b>Relay outputs</b>  |  |
| R1A, R1B, R1C   | 1 relay logic output, one N/C contact and one N/O contact with common point<br>Minimum switching capacity: 10 mA for 5 V $\pm$<br>Maximum switching capacity: <ul style="list-style-type: none"> <li>■ On resistive load (<math>\cos \varphi = 1</math> and L/R = 0 ms): 5 A for 250 V <math>\sim</math> or 30 V <math>\pm</math></li> <li>■ On inductive load (<math>\cos \varphi = 0.4</math> and L/R = 7 ms): 2 A for 250 V <math>\sim</math> or 30 V <math>\pm</math></li> </ul> Sampling time < 8 ms<br>Switching: 100,000 operations |
| R2A, R2B  | 1 relay logic output, one N/C contact, contact open on fault.<br>Minimum switching capacity: 10 mA for 5 V $\pm$<br>Maximum switching capacity: <ul style="list-style-type: none"> <li>■ On resistive load (<math>\cos \varphi = 1</math> and L/R = 0 ms): 5 A for 250 V <math>\sim</math> or 30 V <math>\pm</math></li> <li>■ On inductive load (<math>\cos \varphi = 0.4</math> and L/R = 7 ms): 2 A for 250 V <math>\sim</math> or 30 V <math>\pm</math></li> </ul> Sampling time < 8 ms<br>Switching: 100,000 operations               |
| <b>LI logic inputs</b>  |  |
| LI1...LI6   | 6 programmable logic inputs, compatible with PLC level 1, standard IEC/EN 61131-2<br>Impedance 3.5 k $\Omega$<br>24 V $\pm$ internal or 24 V $\pm$ external power supply (min. 19 V, max. 30 V)<br>Max. current: 100 mA<br>Sampling time < 4 ms<br>Multiple assignment makes it possible to configure several functions on one input (example: LI1 assigned to forward and preset speed 2, LI3 assigned to reverse and preset speed 3)   |
| Positive logic (Source)   | State 0 if < 5 V or logic input not wired<br>State 1 if > 11 V   |
| Negative logic (Sink)   | State 0 if > 19 V or logic input not wired<br>State 1 if < 13 V  |
| CLI position  | Connection to PLC output (see diagram on page 60430/2)   |
| <b>Maximum I/O wire size and tightening torque</b>                                    | 2.5 mm <sup>2</sup> (AWG 14)<br>0.6 Nm   |

| Electrical control characteristics (continued)   |                                     |               |  |
|--|-------------------------------------|---------------|--|
| <b>Acceleration and deceleration ramps</b>       |                                     |               | Ramp profiles: <ul style="list-style-type: none"> <li>■ Linear, can be adjusted separately from 0.1 to 999.9 s</li> <li>■ S, U or customized</li> </ul> Automatic adaptation of deceleration ramp time if braking capacities exceeded, possible inhibition of this adaptation (use of a braking resistor)                    |
| <b>Braking to a standstill</b>                   |                                     |               | By DC injection: <ul style="list-style-type: none"> <li>■ By a command on a logic input (LI1 to LI6)</li> <li>■ Automatically as soon as the estimated output frequency drops to &lt; 0.5 Hz, period adjustable from 0 to 30 s or continuous, current adjustable from 0 to 1.2 In</li> </ul>                                 |
| <b>Main drive protection and safety features</b> |                                     |               | Thermal protection against overheating<br>Protection against short-circuits between motor phases<br>Input phase loss protection, for three-phase supply<br>Protection against motor phase breaks<br>Overcurrent protection between motor output phases and earth<br>Line supply overvoltage and undervoltage safety features |
| <b>Motor protection</b><br>(see page 60432/15)   |                                     |               | Thermal protection integrated in the drive by continuous calculation of the I <sup>2</sup> t   |
| <b>Dielectric strength</b>                       | Between earth and power terminals   | ATV 312H●●●M2 | 2040 V ---   |
|  |                                     | ATV 312H●●●M3 |  |
|  |                                     | ATV 312H●●●N4 | 2410 V ---   |
|  |                                     | ATV 312H●●●S6 | 2550 V ---   |
|  | Between control and power terminals | ATV 312H●●●M2 | 2880 V ~   |
|  |                                     | ATV 312H●●●M3 |  |
| ATV 312H●●●N4                                    |                                     | 3400 V ~      |  |
|  | ATV 312H●●●S6                       | 3600 V ~      |  |
| <b>Signalling</b>                                |                                     |               | Display coded by one 4-digit display (messages, values) and 5 status LEDs (current mode, CANopen bus)  |
| <b>Frequency resolution</b>                      | Display units                       | <b>Hz</b>     | 0.1  |
|  | Analog inputs                       | <b>Hz</b>     | Resolution = ((high speed - low speed)/1024)<br>Min. value = 0.1   |
| <b>Time constant on a change of reference</b>    |                                     | <b>ms</b>     | 5  |

| Communication port characteristics |                                       |  |
|------------------------------------|---------------------------------------|--|
| <b>Available protocols</b>         |                                       | Modbus and CANopen protocols integrated in the drive.<br>Both these protocols can be accessed via a single RJ45 connector on the underside of the drive. |
| <b>Modbus protocol</b>             |                                       |  |
| <b>Structure</b>                   | Connector                             | RJ45   |
|                                    | Physical interface                    | RS 485   |
|                                    | Transmission mode                     | RTU  |
|                                    | Transmission speed                    | Configurable via the Human-Machine interface, remote display terminals or SoMove setup software: 4800, 9600 or 19200 bps                                 |
|                                    | Number of subscribers                 | 31   |
|                                    | Address                               | 1 to 247, configurable via the Human-Machine interface, remote display terminals or SoMove setup software  |
| <b>Services</b>                    | Functional profiles                   | CiA 402  |
|                                    | Messaging                             | Read Holding Registers (03)<br>Write Single Register (06)<br>Write Multiple Registers (16)<br>Read Device Identification (43)                            |
|                                    | Communication monitoring              | Configurable   |
|                                    |                                       |  |
| <b>CANopen protocol</b>            |                                       |  |
| <b>Structure</b>                   | Connector                             | RJ45   |
|                                    | Network management                    | Slave  |
|                                    | Transmission speed                    | Configurable via the Human-Machine interface, remote display terminals or SoMove setup software: 10, 20, 50, 125, 250, 500 kbps or 1 Mbps                |
|                                    | Number of subscribers                 | 127  |
|                                    | Address (Node ID)                     | 1 to 127, configurable via the Human-Machine interface, remote display terminals or SoMove setup software  |
| <b>Services</b>                    | Number of PDOs (Process Data Objects) | 2 PDOs:<br>■ PDO 1: cannot be configured<br>■ PDO 6: can be configured   |
|                                    | PDO modes                             | PDO 1: asynchronous<br>PDO 6: asynchronous, Sync, cyclic asynchronous  |
|                                    | Number of SDOs (Service Data Objects) | 1 receive SDO and 1 transmit SDO   |
|                                    | Functional profiles                   | CiA 402  |
|                                    | Communication monitoring              | Node guarding and Heartbeat, Boot-up messages, Emergency messages, Sync and NMT  |
|                                    |                                       |  |
| <b>Diagnostics</b>                 | Using LEDs                            | On Human-Machine interface   |
| <b>Description file</b>            |                                       | An eds file is available on our website <a href="http://www.schneider-electric.com">www.schneider-electric.com</a>                                       |

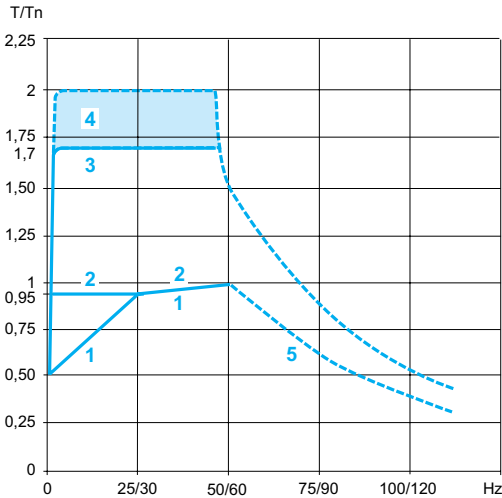

### Torque characteristics (typical curves)

The curves opposite define the available continuous torque and transient overtorque for both force-cooled and self-cooled motors. The only difference is in the ability of the motor to provide a high continuous torque at less than half the nominal speed.

- 1 Self-cooled motor: continuous useful torque (1)
- 2 Force-cooled motor: continuous useful torque
- 3 Transient overtorque for 60 s
- 4 Transient overtorque for 2 s
- 5 Torque in overspeed at constant power (2)

### Special uses

#### Use with a motor with a different power rating to that of the drive

The device can power any motor which has a lower rating than that for which the drive was designed.

For motor ratings slightly higher than that of the drive, check that the current taken does not exceed the continuous output current of the drive.

#### Testing on a low power motor or without a motor

In a testing or maintenance environment the drive can be checked without having to switch to a motor with the same rating as the drive (particularly useful in the case of high power drives). This use requires deactivation of motor phase loss detection.

#### Use of motors in parallel

The drive rating must be greater than or equal to the sum of the currents and powers of the motors to be controlled.

In this case, it is necessary to provide external thermal protection for each motor using probes or thermal overload relays.

If three or more motors are connected in parallel, it is advisable to install a motor choke between the drive and the motors.

See page 46.

#### Motor switching at the drive output


Switching can be carried out with the drive locked or unlocked. In the case of switching on-the-fly (drive unlocked), the motor is controlled and accelerated until it reaches the reference speed smoothly following the acceleration ramp.

This use requires configuration of automatic catching a spinning load ("catch on the fly") and activation of the function which manages the presence of an output contactor.

**Note:** Depending on the drive rating, downstream ferrite suppressors may be required between the drive and the output contactor (see page 46).

**Typical applications:** loss of safety circuit at drive output, bypass function, switching of motors connected in parallel.

**Recommendations for use:** synchronize control of the output contactor with that of a freewheel stop request from the drive on a logic input.

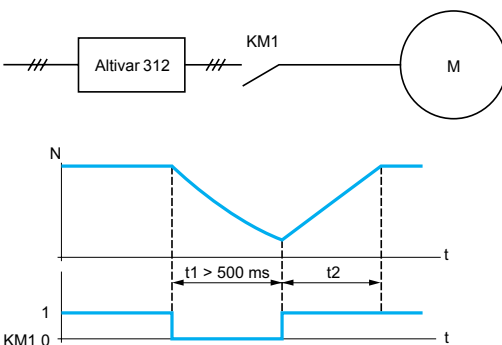

KM1: contactor

t1: KM1 opening time (motor freewheeling)

t2: acceleration with ramp

N: speed

Example of loss of output contactor

(1) For power ratings  $\leq 250$  W, less derating is required (20% instead of 50% at very low frequencies).

(2) The nominal motor frequency and the maximum output frequency can be adjusted from 40 to 500 Hz. The mechanical overspeed characteristics of the selected motor must be checked with the manufacturer.





ATV 312H075M2



ATV 312HU15N4



ATV 312HU30N4



ATV 312HU75N4

| Drives (frequency range from 0.5 to 500 Hz)  |      |             |                            |       |                |                               |   |                                 |   |        |
|--|------|-------------|----------------------------|-------|----------------|-------------------------------|---|---------------------------------|---|--------|
| Motor  |      | Line supply |                            |       |                | Altivar 312                   |   |                                 | Reference   | Weight |
| Power indicated on rating plate (1)  | kW   | HP          | Max. line current (2), (3) |       | Apparent power | Max. prospective line Isc (4) | Max. continuous output current (In) (1) | Max. transient current for 60 s | Power dissipated at maximum output current (In) (1) |        |
|  |      |             | at U1                      | at U2 |                |                               |   |                                 |   |        |
| <b>Single-phase supply voltage: 200...240 V 50/60 Hz, with integrated EMC filter (3) (5) (6)</b> |      |             |                            |       |                |                               |   |                                 |   |        |
| 0.18   | 0.25 | 3.0         | 2.5                        | 0.6   | 1              | 1.5                           | 2.3                                     | 24                              | ATV 312H018M2                                       | 1.500  |
| 0.37   | 0.5  | 5.3         | 4.4                        | 1     | 1              | 3.3                           | 5                                       | 41                              | ATV 312H037M2                                       | 1.500  |
| 0.55   | 0.75 | 6.8         | 5.8                        | 1.4   | 1              | 3.7                           | 5.6                                     | 46                              | ATV 312H055M2                                       | 1.500  |
| 0.75   | 1    | 8.9         | 7.5                        | 1.8   | 1              | 4.8                           | 7.2                                     | 60                              | ATV 312H075M2                                       | 1.500  |
| 1.1  | 1.5  | 12.1        | 10.2                       | 2.4   | 1              | 6.9                           | 10.4                                    | 74                              | ATV 312HU11M2                                       | 1.800  |
| 1.5  | 2    | 15.8        | 13.3                       | 3.2   | 1              | 8                             | 12                                      | 90                              | ATV 312HU15M2                                       | 1.800  |
| 2.2  | 3    | 21.9        | 18.4                       | 4.4   | 1              | 11                            | 16.5                                    | 123                             | ATV 312HU22M2                                       | 3.100  |
| <b>Three-phase supply voltage: 200...240 V 50/60 Hz, without EMC filter (3) (7)</b>              |      |             |                            |       |                |                               |   |                                 |   |        |
| 0.18   | 0.25 | 2.1         | 1.9                        | 0.7   | 5              | 1.5                           | 2.3                                     | 23                              | ATV 312H018M3                                       | 1.300  |
| 0.37   | 0.5  | 3.8         | 3.3                        | 1.3   | 5              | 3.3                           | 5                                       | 38                              | ATV 312H037M3                                       | 1.300  |
| 0.55   | 0.75 | 4.9         | 4.2                        | 1.7   | 5              | 3.7                           | 5.6                                     | 43                              | ATV 312H055M3                                       | 1.300  |
| 0.75   | 1    | 6.4         | 5.6                        | 2.2   | 5              | 4.8                           | 7.2                                     | 55                              | ATV 312H075M3                                       | 1.300  |
| 1.1  | 1.5  | 8.5         | 7.4                        | 3     | 5              | 6.9                           | 10.4                                    | 71                              | ATV 312HU11M3                                       | 1.700  |
| 1.5  | 2    | 11.1        | 9.6                        | 3.8   | 5              | 8                             | 12                                      | 86                              | ATV 312HU15M3                                       | 1.700  |
| 2.2  | 3    | 14.9        | 13                         | 5.2   | 5              | 11                            | 16.5                                    | 114                             | ATV 312HU22M3                                       | 1.700  |
| 3  | –    | 19.1        | 16.6                       | 6.6   | 5              | 13.7                          | 20.6                                    | 146                             | ATV 312HU30M3                                       | 2.900  |
| 4  | 5    | 24.2        | 21.1                       | 8.4   | 5              | 17.5                          | 26.3                                    | 180                             | ATV 312HU40M3                                       | 2.900  |
| 5.5  | 7.5  | 36.8        | 32                         | 12.8  | 22             | 27.5                          | 41.3                                    | 292                             | ATV 312HU55M3                                       | 6.400  |
| 7.5  | 10   | 46.8        | 40.9                       | 16.2  | 22             | 33                            | 49.5                                    | 388                             | ATV 312HU75M3                                       | 6.400  |
| 11   | 15   | 63.5        | 55.6                       | 22    | 22             | 54                            | 81                                      | 477                             | ATV 312HD11M3                                       | 10.500 |
| 15   | 20   | 82.1        | 71.9                       | 28.5  | 22             | 66                            | 99                                      | 628                             | ATV 312HD15M3                                       | 10.500 |
| <b>Three-phase supply voltage: 380...500 V 50/60 Hz, with integrated EMC filter (3) (5) (6)</b>  |      |             |                            |       |                |                               |   |                                 |   |        |
| 0.37   | 0.5  | 2.2         | 1.7                        | 1.5   | 5              | 1.5                           | 2.3                                     | 32                              | ATV 312H037N4                                       | 1.800  |
| 0.55   | 0.75 | 2.8         | 2.2                        | 1.8   | 5              | 1.9                           | 2.9                                     | 37                              | ATV 312H055N4                                       | 1.800  |
| 0.75   | 1    | 3.6         | 2.7                        | 2.4   | 5              | 2.3                           | 3.5                                     | 41                              | ATV 312H075N4                                       | 1.800  |
| 1.1  | 1.5  | 4.9         | 3.7                        | 3.2   | 5              | 3                             | 4.5                                     | 48                              | ATV 312HU11N4                                       | 1.800  |
| 1.5  | 2    | 6.4         | 4.8                        | 4.2   | 5              | 4.1                           | 6.2                                     | 61                              | ATV 312HU15N4                                       | 1.800  |
| 2.2  | 3    | 8.9         | 6.7                        | 5.9   | 5              | 5.5                           | 8.3                                     | 79                              | ATV 312HU22N4                                       | 3.100  |
| 3  | –    | 10.9        | 8.3                        | 7.1   | 5              | 7.1                           | 10.7                                    | 125                             | ATV 312HU30N4                                       | 3.100  |
| 4  | 5    | 13.9        | 10.6                       | 9.2   | 5              | 9.5                           | 14.3                                    | 150                             | ATV 312HU40N4                                       | 3.100  |
| 5.5  | 7.5  | 21.9        | 16.5                       | 15    | 22             | 14.3                          | 21.5                                    | 232                             | ATV 312HU55N4                                       | 6.500  |
| 7.5  | 10   | 27.7        | 21                         | 18    | 22             | 17                            | 25.5                                    | 269                             | ATV 312HU75N4                                       | 6.500  |
| 11   | 15   | 37.2        | 28.4                       | 25    | 22             | 27.7                          | 41.6                                    | 397                             | ATV 312HD11N4                                       | 11.000 |
| 15   | 20   | 48.2        | 36.8                       | 32    | 22             | 33                            | 49.5                                    | 492                             | ATV 312HD15N4                                       | 11.000 |
| <b>Three-phase supply voltage: 525...600 V 50/60 Hz, without EMC filter (3) (8)</b>              |      |             |                            |       |                |                               |   |                                 |   |        |
| 0.75   | 1    | 2.8         | 2.4                        | 2.5   | 5              | 1.7                           | 2.6                                     | 36                              | ATV 312H075S6                                       | 1.700  |
| 1.5  | 2    | 4.8         | 4.2                        | 4.4   | 5              | 2.7                           | 4.1                                     | 48                              | ATV 312HU15S6                                       | 1.700  |
| 2.2  | 3    | 6.4         | 5.6                        | 5.8   | 5              | 3.9                           | 5.9                                     | 62                              | ATV 312HU22S6                                       | 2.900  |
| 4  | 5    | 10.7        | 9.3                        | 9.7   | 5              | 6.1                           | 9.2                                     | 94                              | ATV 312HU40S6                                       | 2.900  |
| 5.5  | 7.5  | 16.2        | 14.1                       | 15    | 22             | 9                             | 13.5                                    | 133                             | ATV 312HU55S6                                       | 6.200  |
| 7.5  | 10   | 21.3        | 18.5                       | 19    | 22             | 11                            | 16.5                                    | 165                             | ATV 312HU75S6                                       | 6.200  |
| 11   | 15   | 27.8        | 24.4                       | 25    | 22             | 17                            | 25.5                                    | 257                             | ATV 312HD11S6                                       | 10.000 |
| 15   | 20   | 36.4        | 31.8                       | 33    | 22             | 22                            | 33                                      | 335                             | ATV 312HD15S6                                       | 10.000 |

(1) These values are given for a nominal switching frequency of 4 kHz, for use in continuous operation. The switching frequency is adjustable from 2 to 16 kHz. Above 4 kHz, derate the nominal drive current. The nominal motor current should not exceed this value. See derating curves on page 59.  
 (2) Typical value for a 4-pole motor and a maximum switching frequency of 4 kHz, with no line choke for max. prospective line Isc (4).  
 (3) Nominal supply voltage, min. U1, max. U2: 200 (U1)...240 V (U2), 380 (U1)...500 V (U2), 525 (U1)...600 V (U2).  
 (4) If line Isc is greater than the values in the table, add line chokes (see page 43).  
 (5) Drives supplied with category C2 or C3 integrated EMC filter. This filter can be disconnected.  
 (6) If a communication card is used, it takes the place of the control I/O card. To reduce installation costs, the drive can be ordered without a control I/O card. To do this, simply add a B at the end of the reference. For example: ATV 312H075N4 becomes ATV 312H075N4B. The communication card must be ordered separately (see page 28).  
 (7) EMC filter available as an option (see page 45).  
 (8) Mandatory line choke to be ordered separately (see page 43).

PF080870



VW3 A9 804

### Accessories

| Description  | For drives                                      | Sold in lots of   | Reference         | Weight kg |
|--|---|-------------------|-------------------|-----------|
| <b>Plates for mounting on <math>\perp</math> rail,</b><br>width 35 mm  | ATV 312H018M2...H075M2                          | –                 | <b>VW3 A9 804</b> | 0.290     |
|  | ATV 312H018M3...H075M3                          | –                 |                   |           |
|  | ATV 312HU11M2, HU15M2                           | –                 | <b>VW3 A9 805</b> | 0.385     |
|  | ATV 312HU11M3...HU22M3                          | –                 |                   |           |
|  | ATV 312H037N4...HU15N4<br>ATV 312H075S6, HU15S6 | –                 |                   |           |
| <b>UL Type 1 conformity kits</b><br>Mechanical device for fixing to the lower part of the drive.<br>For direct connection of cables to the drive via tubes or cable glands | ATV 312H018M2...H075M2                          | –                 | <b>VW3 A31812</b> | 0.400     |
|  | ATV 312H018M3...H075M3                          | –                 | <b>VW3 A31811</b> | 0.400     |
|  | ATV 312HU11M3, HU15M3                           | –                 | <b>VW3 A31813</b> | 0.400     |
|  | ATV 312HU11M2, HU15M2                           | –                 | <b>VW3 A31814</b> | 0.500     |
|  | ATV 312HU22M3                                   | –                 |                   |           |
|  | ATV 312H037N4...HU15N4                          | –                 |                   |           |
|  | ATV 312H075S6, HU15S6                           | –                 |                   |           |
|  | ATV 312HU22M2                                   | –                 | <b>VW3 A31815</b> | 0.500     |
|  | ATV 312HU30M3, HU40M3                           | –                 |                   |           |
|  | ATV 312HU22N4...HU40N4                          | –                 |                   |           |
|  | ATV 312HU22S6, HU40S6                           | –                 |                   |           |
|  | ATV 312HU55M3, HU75M3                           | –                 | <b>VW3 A31816</b> | 0.900     |
| ATV 312HU55N4, HU75N4<br>ATV 312HU55S6, HU75S6   | –   |                   |                   |           |
| ATV 312HD11M3, HD15M3  | –   | <b>VW3 A31817</b> | 1.200             |           |
| ATV 312HD11N4, HD15N4<br>ATV 312HD11S6, HD15S6   | –   |                   |                   |           |

DA526506



TM200 RSRCEMC

|   |               |    |                      |   |
|---|---------------|----|----------------------|---|
| <b>Shielding connection clamps</b><br>Attachment and earthing of the cable shielding<br>Pack of 25 clamps including:<br>■ 20 clamps for Ø 4.8 mm cable<br>■ 5 clamps for Ø 7.9 mm cable | ATV 312H●●●●● | 25 | <b>TM200 RSRCEMC</b> | – |
|---|---------------|----|----------------------|---|

### Documentation

| Description  | Reference | Weight kg |
|--|-----------|-----------|
| <ul style="list-style-type: none"> <li>■ Technical documentation (programming manuals, installation manuals, quick reference guides)</li> <li>■ SoMove lite setup software</li> <li>■ Catalogues</li> <li>■ Brochures</li> </ul> |           |           |


### Replacement parts

| Description                     | For drives            | Reference          | Weight kg         |
|---------------------------------|-----------------------|--------------------|-------------------|
| <b>ATV 312 control I/O card</b> | ATV 312H●●●●●         | <b>VW3 A312 01</b> | 0.200             |
| <b>Fans</b>                     | ATV 312HU11M2, HU15M2 | <b>VZ3 V3 101</b>  | 0.200             |
|                                 | ATV 312HU11M3, HU22M3 |                    |                   |
|                                 | ATV 312H037N4, HU15N4 |                    |                   |
|                                 | ATV 312H075S6, HU15S6 |                    |                   |
|                                 | ATV 312HU22M2         |                    |                   |
|                                 | ATV 312HU22M2         | <b>VZ3 V3 102</b>  | 0.200             |
|                                 | ATV 312HU30M3, HU40M3 |                    |                   |
|                                 | ATV 312HU22N4, HU40N4 |                    |                   |
|                                 | ATV 312HU22S6, HU40S6 |                    |                   |
|                                 | ATV 312HU55M3, HU75M3 |                    |                   |
| ATV 312HU55M3, HU75M3           | <b>VZ3 V3 103</b>     | 0.200              |                   |
| ATV 312HU55N4, HU75N4           |                       |                    |                   |
| ATV 312HU55S6, HU75S6           |                       |                    |                   |
| ATV 312HD11M3, HD15M3           |                       |                    |                   |
| ATV 312HD11M3, HD15M3           |                       |                    | <b>VZ3 V3 104</b> |
| ATV 312HD11N4, HD15N4           |                       |                    |                   |
| ATV 312HD11S6, HD15S6           |                       |                    |                   |


PF080847




VZ3 V3 101

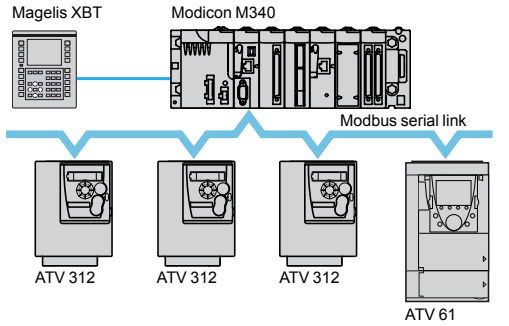

Example of configuration on Modbus serial link

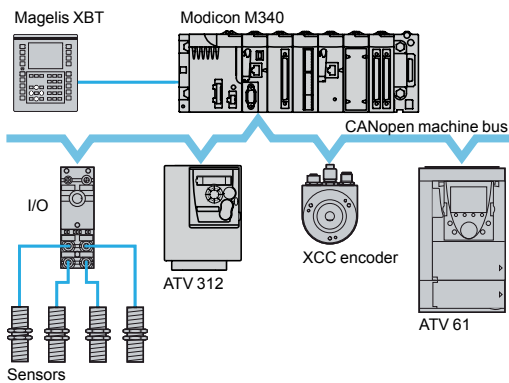

Example of configuration on CANopen machine bus

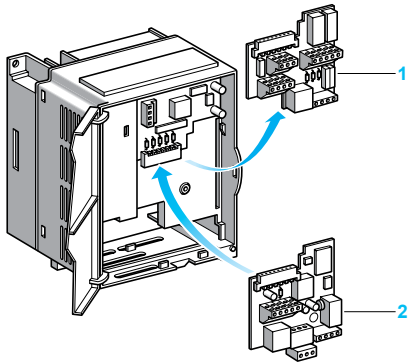

Example of installation of a communication card (1)

### Presentation

The Altivar 312 drive is designed to meet the configuration requirements found in the main industrial communication installations.

It includes the Modbus and CANopen communication protocols as standard. It can also be connected to other industrial communication buses and networks using one of the communication cards or modules that are available as options.

### Standard configuration

The Altivar 312 drive is equipped with a control I/O card **1** which integrates:

- I/O terminals, comprising:
  - Six logic inputs: LI1 to LI6
  - Three analog inputs: AI1 to AI3
  - Two analog outputs: AOV and AOC (2)
  - Two relay outputs: R1 and R2
- A Modbus/CANopen communication port, that is accessed on an RJ45 connector

The Modbus/CANopen communication port is specifically for controlling the drive via a PLC or another type of controller.

It is also used for connecting dialogue and configuration tools:

- Remote display terminal
- Remote graphic display terminal
- SoMove setup software
- Simple Loader and Multi-Loader configuration tools

### Communication cards for industrial applications

Several communication cards for industrial applications **2** are available as options. These cards are used in place of the drive's control I/O card **1** (1)

The following communication cards are available:

- CANopen Daisy chain card (optimized solution for daisy chain connection to CANopen machine bus, see page 32)
- DeviceNet card
- PROFIBUS DP card

### Communication modules

The Altivar 312 drive can be connected to other communication buses and networks via modules that are available as options:

- Modbus TCP network via the Ethernet/Modbus bridge
- Fipio bus via the Fipio/Modbus gateway

(1) To reduce installation costs when replacing the control I/O card **1** with a communication card **2**, ATV 312H●●M2 and ATV 312H●●N4 drives can be ordered without a control I/O card. See page 26.

(2) These two outputs cannot be used at the same time.

#### Functions

All the functions of the Altivar 312 drive can be accessed via the communication buses and networks:

- Control
- Monitoring
- Adjustment
- Configuration

The speed control and reference may come from different control sources:

- Logic input or analog I/O terminals
- Communication bus or network
- Remote display terminal

The advanced functions of the Altivar 312 drive can be used to manage switching of these control sources according to the requirements of the application.

The assignment of the communication periodic I/O data can be selected using the network configuration software.

The Altivar 312 drive is controlled using the CiA 402 native profile.

Communication is monitored according to criteria specific to each protocol.

Regardless of protocol type, the reaction of the drive to a communication fault can be configured as follows:

- Freewheel stop, stop on ramp, fast stop or braked stop
- Maintain the last command received
- Fallback position at a predefined speed
- Ignore the fault

#### Characteristics of the CANopen Daisy chain card VW3 A312 08 (1)

|                  |           |  |
|------------------|-----------|--|
| <b>Structure</b> | Connector | <p>4 connectors:</p> <ul style="list-style-type: none"> <li>■ 1 removable screw terminal block: <ul style="list-style-type: none"> <li>□ 3 logic inputs: L11 to L13</li> <li>□ 2 analog inputs: AI2 and AI3</li> <li>□ 1 relay output: R2</li> </ul> </li> <li>■ 2 RJ45 connectors for daisy-chain connection to the CANopen machine bus</li> <li>■ 1 RJ45 connector for connection to the Modbus serial link</li> </ul> |
|------------------|-----------|--|

(1) The other characteristics of the CANopen Daisy chain card are identical to those of the drive's CANopen protocol. See page 24.

#### Characteristics of the DeviceNet card VW3 A312 09

|                         |                          |   |
|-------------------------|--------------------------|---|
| <b>Structure</b>        | Connector                | <p>3 connectors:</p> <ul style="list-style-type: none"> <li>■ 1 removable screw terminal block: <ul style="list-style-type: none"> <li>□ 3 logic inputs: L11 to L13</li> <li>□ 2 analog inputs: AI2 and AI3</li> <li>□ 1 relay output: R2.</li> </ul> </li> <li>■ 1 five-way screw connector, 5.08 pitch, for connection to the DeviceNet network</li> <li>■ 1 RJ45 connector for connection to the Modbus serial link</li> </ul> |
|                         | Transmission speed       | 125 kbps, 250 kbps or 500 kbps, configurable using switches on the card   |
|                         | Address                  | 1 to 63, configurable using switches on the card  |
| <b>Services</b>         | Periodic variables       | ODVAAC drive type profile 20, 21, 70 and 71<br>ATV 312 native profile (CiA 402) 100 and 101   |
|                         | Exchange mode            | Inputs: by polling, change of state, periodic<br>Outputs: by polling  |
|                         | Auto Device Replacement  | No  |
|                         | Communication monitoring | Can be inhibited<br>Time out can be set via the DeviceNet network configurator  |
| <b>Diagnostics</b>      | Using LEDs               | One two-tone LED on the card: "MNS" (status)  |
| <b>Description file</b> |                          | An eds file is available on our website <a href="http://www.schneider-electric.com">www.schneider-electric.com</a>  |

**Characteristics of the PROFIBUS DP card VW3 A312 07**


|                         |                    |  |
|-------------------------|--------------------|--|
| <b>Structure</b>        | Connector          | 3 connectors:<br><ul style="list-style-type: none"> <li>■ 1 removable screw terminal block:</li> <li>□ 3 logic inputs: LI1 to LI3</li> <li>□ 2 analog inputs: AI2 and AI3</li> <li>□ 1 relay output: R2.</li> <li>■ 1 screw terminal block for connection to the PROFIBUS DP bus</li> <li>■ 1 RJ45 connector for connection to the Modbus serial link</li> </ul> |
|                         | Transmission speed | 9600 bps, 19.2 kbps, 93.75 kbps, 187.5 kbps, 500 kbps, 1.5 Mbps, 3 Mbps, 6 Mbps or 12 Mbps   |
|                         | Address            | 1 to 126, configurable using switches on the card  |
| <b>Services</b>         | Periodic variables | Input: 4 PKW and 2 PZD<br>Output: 4 PKW and 2 PZD  |
|                         | Messaging          | Via PKW periodic variables   |
|                         | Functional profile | IEC 61800-7 (CiA 402)  |
| <b>Diagnostics</b>      | Using LEDs         | 2 LEDs on the card: "ST" (status) and "DX" (data exchange)   |
| <b>Description file</b> |                    | A gsd file is available on our website <a href="http://www.schneider-electric.com">www.schneider-electric.com</a>  |

**Communication card references (1)**


| Designation  | References         | Weight<br>kg |
|--|--------------------|--------------|
| <b>CANopen Daisy chain communication card</b><br>for daisy chaining (see page 60428/6) | <b>VW3 A312 08</b> | 0.200        |
| <b>DeviceNet communication card</b>  | <b>VW3 A312 09</b> | 0.200        |
| <b>PROFIBUS DP communication card</b>  | <b>VW3 A312 07</b> | 0.200        |

(1) To reduce installation costs when replacing the control I/O card with a communication card, ATV 312H●●●M2 and ATV 312H●●●N4 drives can be ordered without a control I/O card. See page 26.




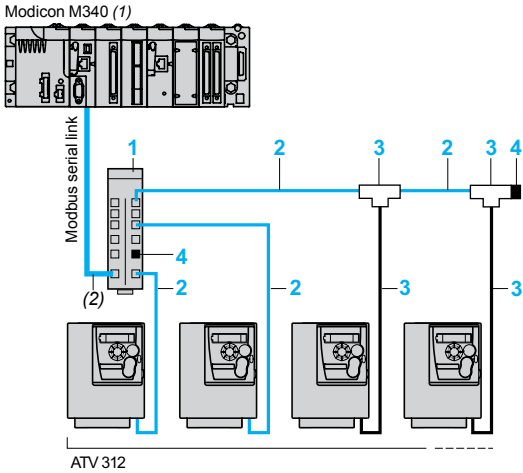

Example of Modbus serial link architecture, connections via splitter boxes and RJ45 connectors

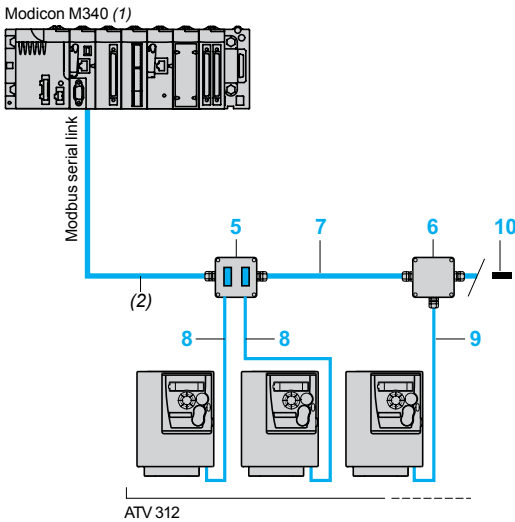

Example of Modbus serial link architecture, connections via tap junctions

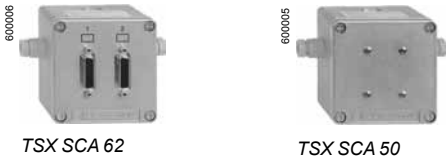

### Modbus serial link

#### Accessories for connection via splitter boxes and RJ45 connectors

| Description   | Item no.  | Length m | Unit reference  | Weight kg     |       |
|---|-----------|----------|-----------------|---------------|-------|
| <b>Modbus splitter box</b><br>10 RJ45 connectors and 1 screw terminal block | 1         | –        | LU9 GC3         | 0.500         |       |
| <b>Cables for Modbus serial link</b><br>equipped with 2 RJ45 connectors     | 2         | 0.3      | VW3 A8 306 R03  | 0.025         |       |
|   | 1         | –        | VW3 A8 306 R10  | 0.060         |       |
|   | 3         | –        | VW3 A8 306 R30  | 0.130         |       |
| <b>Modbus T-connectors</b><br>(with integrated cable)                       | 3         | 0.3      | VW3 A8 306 TF03 | –             |       |
|   | 1         | –        | VW3 A8 306 TF10 | –             |       |
| <b>Modbus line terminators</b><br>for RJ45 connector (3) (4)                | R = 120 Ω | 4        | –               | VW3 A8 306 RC | 0.200 |
|   | C = 1 nf  | 4        | –               | VW3 A8 306 R  | 0.200 |
|   | R = 150 Ω | 4        | –               | VW3 A8 306 R  | 0.200 |

#### Accessories for connection via tap junctions


| Description   | Item no.  | Length m | Unit reference | Weight kg      |       |
|---|-----------|----------|----------------|----------------|-------|
| <b>Modbus subscriber socket</b><br>Two 15-way female SUB-D connectors and 2 screw terminal blocks, RC line terminator<br>To be connected using cable VW3 A8 306 | 5         | –        | TSX SCA 62     | 0.570          |       |
| <b>Modbus junction box</b><br>3 screw terminal blocks, RC line terminator<br>To be connected using cable VW3 A8 306 D30   | 6         | –        | TSX SCA 50     | 0.520          |       |
|   |           |          |                |                |       |
| <b>RS 485 double shielded twisted pair Modbus cables</b><br>Supplied without connector  | 7         | 100      | TSX CSA 100    | –              |       |
|   |           | 200      | TSX CSA 200    | –              |       |
|   |           | 500      | TSX CSA 500    | –              |       |
| <b>Modbus drop cable</b><br>1 RJ45 connector and 1 x 15-way male SUB-D connector for TSX SCA 62   | 8         | 3        | VW3 A8 306     | 0.150          |       |
| <b>Modbus drop cable</b><br>1 RJ45 connector and one stripped end   | 9         | 3        | VW3 A8 306 D30 | 0.150          |       |
| <b>Modbus line terminators</b><br>for screw terminal block (3) (4)  | R = 120 Ω | 10       | –              | VW3 A8 306 DRC | 0.200 |
|   | C = 1 nf  | 10       | –              | VW3 A8 306 DR  | 0.200 |
|   | R = 150 Ω | 10       | –              | VW3 A8 306 DR  | 0.200 |

(1) Please refer to the "M340 Automation platform" catalogue.


(2) Cable dependent on the type of controller or PLC.

(3) Depends on the bus architecture. Please refer to the "Soft starters and variable speed drives" catalogue.

(4) Sold in lots of 2.

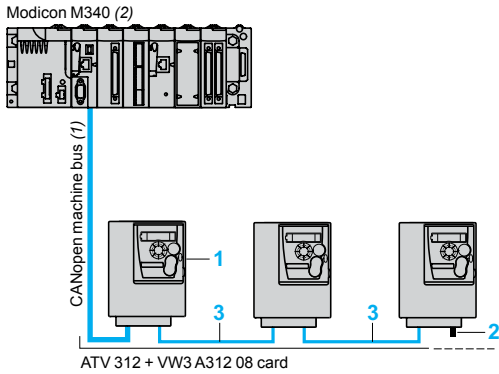

Optimized solution for daisy chain connection to the CANopen machine bus

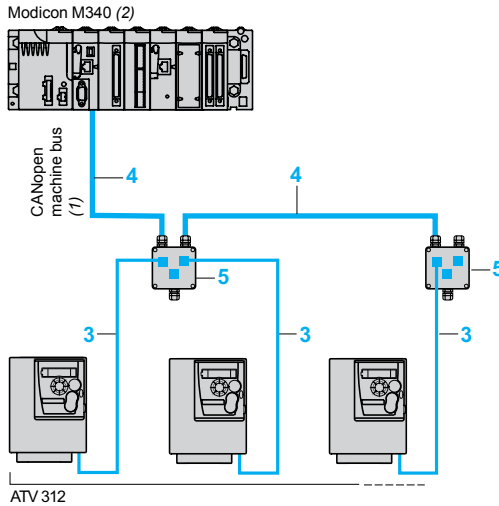

Conventional solution for connection to the CANopen machine bus



TCS CAR013M120

### CANopen machine bus

#### Connection with CANopen Daisy chain communication card (optimized solution for daisy chain connection to the CANopen machine bus)

| Description   | Item no. | Length m | Reference             | Weight kg |
|---|----------|----------|-----------------------|-----------|
| <b>CANopen Daisy chain communication card</b>         | <b>1</b> |          | <b>VW3 A312 08</b>    | 0.200     |
| <b>CANopen line terminator for RJ45 connector (4)</b> | <b>2</b> | –        | <b>TCS CAR013M120</b> | –         |
| <b>CANopen cables fitted with 2 RJ45 connectors</b>   | <b>3</b> | 0.3      | <b>VW3 CAN CARR03</b> | 0.050     |
|   |          | 1        | <b>VW3 CAN CARR1</b>  | 0.500     |

#### Other connection accessories and cables (1)

| Description  | Item no. | Length m | Unit reference       | Weight kg |
|--|----------|----------|----------------------|-----------|
| <b>CANopen cable</b><br>Standard cable, C€ marking<br>Low smoke emission,<br>halogen-free<br>Flame retardant (IEC 60332-1)                     | <b>4</b> | 50       | <b>TSX CAN CA50</b>  | 4.930     |
|  |          | 100      | <b>TSX CAN CA100</b> | 8.800     |
|  |          | 300      | <b>TSX CAN CA300</b> | 24.560    |
| <b>CANopen cable</b><br>Standard cable, UL certification,<br>C€ marking<br>Flame retardant (IEC 60332-2)                                       | <b>4</b> | 50       | <b>TSX CAN CB50</b>  | 3.580     |
|  |          | 100      | <b>TSX CAN CB100</b> | 7.840     |
|  |          | 300      | <b>TSX CAN CB300</b> | 21.870    |
| <b>CANopen cable</b><br>Cable for harsh environments (3) or C€ marking<br>Low smoke emission,<br>halogen-free<br>Flame retardant (IEC 60332-1) | <b>4</b> | 50       | <b>TSX CAN CD50</b>  | 3.510     |
|  |          | 100      | <b>TSX CAN CD100</b> | 7.770     |
|  |          | 300      | <b>TSX CAN CD300</b> | 21.700    |

#### IP20 CANopen junction boxes

- equipped with:
- 2 screw terminal blocks for trunk cable tap link
  - 2 RJ45 connectors for connecting drives
  - 1 RJ45 connector for connecting a PC

#### Daisy chain tap

- equipped with:
- 2 spring terminals for daisy chain connection of the CANopen bus
  - 1 cable equipped with an RJ45 connector for connecting the drive

#### Daisy chain tap

- equipped with:
- 2 RJ45 connectors for daisy chain connection of the CANopen bus
  - 1 cable equipped with an RJ45 connector for connecting the drive

#### CANopen line terminator for screw terminal connector (4)

(1) For other connection accessories, please refer to the "Machine & installations with industrial communication" catalogue.

(2) Please refer to the "M340 Automation platform" catalogue.

(3) Standard environment:

- No particular environmental constraints
- Operating temperature between + 5°C and + 60°C
- Fixed installation

Harsh environment:

- Resistance to hydrocarbons, industrial oils, detergents, solder splashes
- Relative humidity up to 100%
- Saline atmosphere
- Operating temperature between - 10°C and + 70°C
- Significant temperature variations

(4) Sold in lots of 2.



TSX ETG 100



LUF P1

#### Other communication buses and networks

| Description  | Cables to be connected | Reference          | Weight kg |
|--|------------------------|--------------------|-----------|
| <b>Ethernet gateway/router (1)</b><br><b>Modbus</b><br>Class B10<br>For connection to the Modbus TCP network | VW3 A8 306 D30<br>(2)  | <b>TSX ETG 100</b> | –         |
| <b>Fipio/Modbus gateway (3)</b><br>For connection to the Fipio bus   | VW3 A8 306 R●●<br>(2)  | <b>LUF P1</b>      | 0.240     |

(1) Please refer to the "Machine & installations with industrial communication" catalogue.

(2) See page 31.

(3) Please refer to the "TeSys U starter-controllers" catalogue.



Remote display terminal with cover open



Remote display terminal with cover closed

### Remote display terminal (1)

This terminal is used to locate the human-machine interface of the Altivar 312 drive remotely on the door of an enclosure with IP 54 or IP 65 protection.

It is used to:

- Control, adjust and configure the drive remotely
- Display the drive status and faults remotely

Its maximum operating temperature is 50°C.

#### Description

- 1 4-digit display
- 2 Navigation ▲, ▼ and selection ENT, ESC keys
- 3 Motor local control keys:
  - RUN: starts the motor
  - FWD/REV: reverses the direction of rotation of the motor
  - STOP/RESET: stops the motor/resets drive faults
- 4 Operating mode selection key MODE.
- 5 Cover for optional access to the motor local control keys.

#### References

| Description   | Degree of protection | Length m | Reference            | Weight kg |
|---|----------------------|----------|----------------------|-----------|
| <b>Remote display terminals</b><br>A remote cable must be provided, VW3 A1 104R●● | IP 54                | –        | <b>VW3 A1 006</b>    | 0.250     |
|   | IP 65                | –        | <b>VW3 A1 007</b>    | 0.275     |
| <b>Remote cables</b><br>equipped with 2 RJ45 connectors                           |                      | 1        | <b>VW3 A1 104R10</b> | 0.050     |
|   |                      | 3        | <b>VW3 A1 104R30</b> | 0.150     |

### Remote graphic display terminal (2)

This graphic display terminal, common to all the variable speed drive ranges, provides a user-friendly interface for configuration, debugging and maintenance. Its main functions are as follows:

- The graphic screen displays 8 lines of 24 characters of plain text
- The navigation button provides quick and easy access to the drop-down menus
- It is supplied with six languages installed as standard (Chinese, English, French, German, Italian and Spanish). The available languages can be modified using the Multi-Loader configuration tool (VW3 A8 121).

The maximum operating temperature of the terminal is 60°C and it has IP 54 protection.

#### Description

- 1 Graphic display:
  - 8 lines of 24 characters, 240 x 160 pixels, large digit display
- 2 Function keys (not operational on the Altivar 312)
- 3 **Navigation button:** rotate ±: goes to the next/previous line, increases/decreases the value - press: saves the current value (ENT).  
**ESC key:** aborts a value, a parameter or a menu to return to the previous selection.
- 4 Motor local control keys:
  - RUN: starts the motor
  - STOP/RESET: stops the motor/resets drive faults
  - FWD/REV: reverses the motor direction of rotation
- 5 Remote graphic display terminal
- 6 Remote cable
- 7 Female/female RJ45 adaptor

#### References

| Description   | Item no. | Length m | Reference             | Weight kg |
|---|----------|----------|-----------------------|-----------|
| <b>Remote graphic display terminal</b><br>A remote cable, VW3 A1 104R●●●, and an RJ45 adaptor, VW3 A1 105, must be provided | <b>5</b> | –        | <b>VW3 A1 101</b>     | –         |
| <b>Remote cables</b><br>equipped with 2 RJ45 connectors   | <b>6</b> | 1        | <b>VW3 A1 104R10</b>  | 0.050     |
|   |          | 3        | <b>VW3 A1 104R30</b>  | 0.150     |
|   |          | 5        | <b>VW3 A1 104R50</b>  | 0.250     |
|   |          | 10       | <b>VW3 A1 104R100</b> | 0.500     |
| <b>Female/female RJ45 adaptor</b>   | <b>7</b> | –        | <b>VW3 A1 105</b>     | 0.010     |

(1) If an Altivar 31 drive is replaced by an Altivar 312 drive, the remote display terminal VW3 A1 101 can be used. Please consult the quick reference guide for this terminal, which is available on our website [www.schneider-electric.com](http://www.schneider-electric.com).

(2) The software version of the graphic display terminal must be ≥ V1.1.IE19. It can be updated using the Multi-Loader configuration tool (VW3 A8 121). See page 35.



Graphic display terminal  
+  
female/female RJ45 adaptor  
+  
remote cable



Configuration with Simple Loader configuration tool connected to the ATV 312



Configuration with Multi-Loader configuration tool connected to the ATV 312

### SoMove setup software

SoMove setup software for PC is used to prepare drive configuration files. The PC can be connected to the drive:

- Directly, using the USB/RJ45 cable (TCSM CNAM 3M002P)
- Using a Bluetooth® wireless connection, via the Modbus Bluetooth® adaptor (VW3 A8 114)

See page 36.

### Simple Loader and Multi-Loader configuration tools

The Simple Loader tool enables one powered-up drive's configuration to be duplicated on another powered-up drive. It is connected to the drive's RJ45 communication port.

The Multi-Loader tool enables several configurations to be copied from a PC or a powered-up drive and loaded on another powered-up drive.

It is connected to:

- A PC via a USB port
- The drive's RJ45 communication port

### References

| Description   | Reference         | Weight kg |
|---|-------------------|-----------|
| <b>Simple Loader configuration tool</b><br>Supplied with a connection cable equipped with 2 RJ45 connectors.  | <b>VW3 A8 120</b> | –         |
| <b>Multi-Loader configuration tool</b><br>Supplied with: <ul style="list-style-type: none"> <li>- 1 cable equipped with 2 RJ45 connectors</li> <li>- 1 cable equipped with one type A USB connector and one mini B USB connector</li> <li>- 1 x 2 GB SD memory card</li> <li>- 1 x female/female RJ 45 adaptor</li> <li>- 4 AA/LR6 1.5 V batteries</li> </ul> | <b>VW3 A8 121</b> | –         |





SoMove start page

## Presentation

SoMove is user-friendly setup software for PC designed for configuring the following Schneider Electric motor control devices:

- ATV 12, ATV 312, ATV 31, ATV 32, ATV 61 and ATV 71 drives
- ATS 22 and ATS 48 soft starters
- TeSys U starter-controllers
- TeSys T motor management system
- Lexium 32 servo drives
- Lexium 32i integrated servo drives

SoMove software incorporates various functions for the device setup phases, such as:

- Configuration preparation
- Start-up
- Maintenance

To facilitate setup and maintenance, SoMove software can use a direct USB/RJ45 cable link or a Bluetooth® wireless link.

SoMove software is also compatible with the Multi-Loader configuration tool.

This can save a significant amount of time when loading, duplicating or editing configurations on a device.

SoMove software and the DTMs (Device Type Managers) associated with the devices can be downloaded from our website [www.schneider-electric.com](http://www.schneider-electric.com).

## Functions


### Configuration preparation in disconnected mode

SoMove software has a genuine disconnected mode which provides access to the device parameters. This mode can be used to generate the device configuration. The configuration can be saved, printed and exported to office automation software.

SoMove software also checks the consistency of the parameters, validating the configurations created in disconnected mode.

A large number of functions are available in disconnected mode, in particular:

- The device configuration software wizard
- The configuration comparison function
- Saving, copying, printing and creating configuration files for export to Multi-Loader, or Microsoft Excel® tools, and sending configurations by e-mail

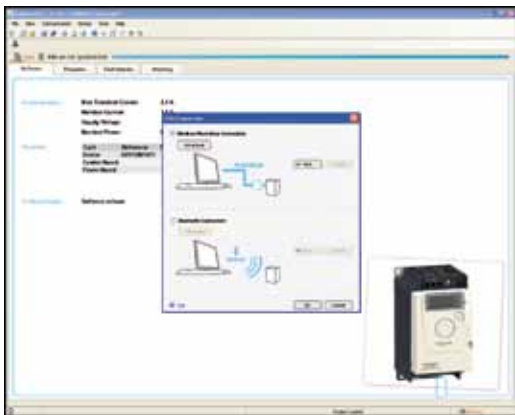

Example of connecting SoMove software to an ATV 12 drive

### Setup


When the PC is connected directly to the device or to the communication bus (1), SoMove software can be used for:

- Transferring the generated configuration onto the device
- Adjustment and monitoring, which includes such functions as:
  - The oscilloscope
  - Display of communication parameters
- Easy control via the control panel user interface
- Saving the final configuration

### Maintenance


In order to simplify maintenance operations, SoMove software can be used to:

- Compare the configuration of a device currently being used with a configuration saved on the PC
- Transfer a configuration to a device
- Compare oscilloscope curves
- Save oscilloscope curves and faults

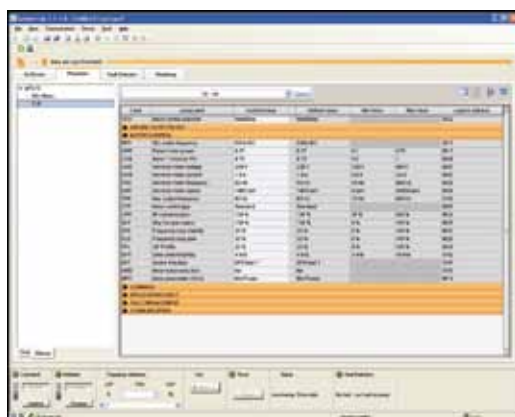


SoMove control panel

(1) Requires a specific connection accessory. For further information, please consult our Customer Care Centre.

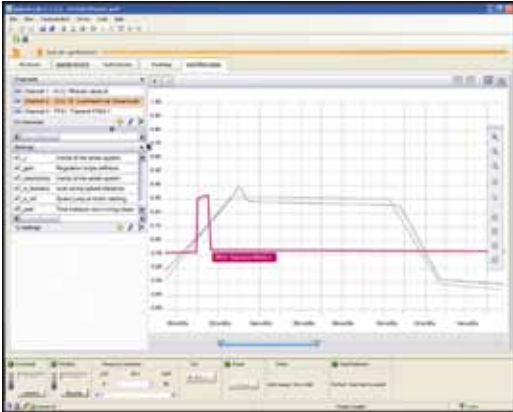

SoMove oscilloscope function

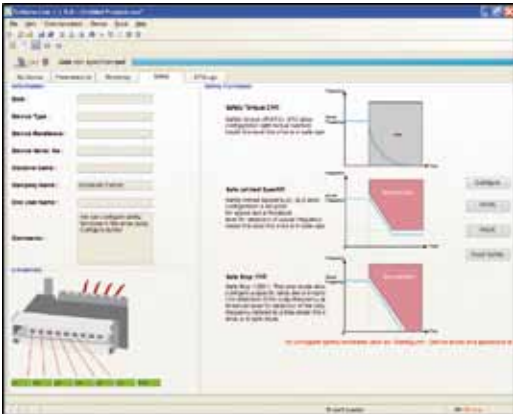

SoMove Safety function

## Functions (continued)

### User interface

SoMove software provides fast, direct access to information on the device via five tabs:

- **My Device:** Displays the device information (type, reference, software versions, option cards, etc.)
- **Parameters:** Displays the device adjustment parameters, shown in a table or in the form of diagrams
- **Faults:** Displays a list of the faults that may be encountered with the device, the fault log and any current faults or alarms
- **Monitoring:** Provides a realtime display of the device status, its I/O and the monitoring parameters. It is possible to create your own control panel by selecting your parameters and how they are to be represented.
- **Oscilloscope:** Provides a high-speed oscilloscope (for recording traces in the device) or low-speed oscilloscope (for recording traces in the software for devices that do not have an integrated oscilloscope)

SoMove's user interface automatically adapts to the specific configured device by offering additional tabs:

- **Safety:** For configuring the Safety functions on ATV 32 variable speed drives and Lexium 32 servo drives. It can also be used to:
  - Display the I/O
  - Compile and print a report
- **ATVLogic:** For accessing the ATV 32 drive's programmable function blocks. It can also be used to:
  - Develop a program and transfer it to the drive
  - Display and debug the program already on the drive
- **Auto-tuning:** For accessing the servo control settings for the three different operating modes of the Lexium 32 servo drive's auto-tuning function:
  - Automatic mode for quick setup, designed for simple applications
  - Semi-automatic mode for quick setup, with the option of optimizing the servo drive/servo motor combination (access to the mechanical and dynamic behaviour parameters)
  - Expert mode for optimizing the adjustment parameters, designed for complex applications

### Connections

#### Modbus serial link

The PC running SoMove software can be connected directly via the RJ45 connector on the device and the USB port on the PC using the USB/RJ45 cable.

See the product references on page 38.

#### Bluetooth® wireless link

SoMove software can communicate via Bluetooth® wireless link with any Bluetooth® enabled device.

If the device is not Bluetooth® enabled, use the Modbus-Bluetooth® adaptor (1). This adaptor is connected to the terminal port or the Modbus network port on the device. It has a 20 m/65 ft range (class 2).

If the PC does not have Bluetooth® technology, use the USB-Bluetooth® adaptor.

(1) See the list of the available devices on page 38.



SoMove setup software



TCSWAAC13FB:  
Bluetooth® adaptor

## References

| Description  | Reference      | Weight<br>kg/lb |
|--|----------------|-----------------|
| <b>SoMove Lite setup software</b><br>Includes:<br>■ SoMove setup software for PC in English, French, German, Italian, Spanish and Chinese<br>■ DTMs (Device Type Managers) and technical documentation for variable speed drives, starters and servo motors  | (1)            | –               |
| <b>USB/RJ45 cable</b><br>Used to connect a PC to the device.<br>This cable is 2.5 m long and has a USB connector (PC end) and an RJ45 connector (device end).  | TCSMCNAM3M002P | –               |
| <b>Modbus/Uni-Telway-Bluetooth® adaptor</b><br>Used to enable any non-Bluetooth® device to communicate via Bluetooth® wireless link (2).<br><br>Includes:<br>■ 1 Bluetooth® adaptor (range 20 m, class 2) with an RJ45 connector<br>■ For SoMove: 1 x 0.1 m cordset with 2 x RJ45 connectors<br>■ For TwidoSuite: 1 x 0.1 m cordset with 1 RJ45 connector and 1 mini DIN connector | TCSWAAC13FB    | 0.032/<br>0.071 |
| <b>USB-Bluetooth® adaptor for PC</b><br>Used to enable any non-Bluetooth® PC to communicate via Bluetooth® wireless link (3).<br>It connects to a USB port on the PC.<br>Range 10 m, class 2   | VW3A8115       | 0.290/<br>0.639 |

(1) Available on our website [www.schneider-electric.com](http://www.schneider-electric.com).

(2) Available only for the following devices:

- ATV 12, ATV 312, ATV 31, ATV 61 and ATV 71 drives
- ATS 22 and ATS 48 soft starters
- TeSys U starter-controllers
- TeSys T motor management system
- Lexium 32 servo drives

(3) Check the manufacturer's specification.

### Compatibility of SoMove software with specific devices

| Device                  | Range                   | Version of software on the device |
|-------------------------|-------------------------|-----------------------------------|
| Variable speed drive    | ATV 12, ATV 312, ATV 32 | ≥ 1.0                             |
|                         | ATV 31                  | ≥ 1.1                             |
|                         | ATV 61, ATV 71          | ≥ 1.6                             |
| Soft starter            | ATS 22                  | ≥ 1.0                             |
|                         | ATS 48                  | ≥ 1.5                             |
| Starter-controller      | TeSys U                 | ≥ 1.0                             |
| Motor management system | TeSys T                 | ≥ 1.0                             |
| Servo drive             | Lexium 32               | ≥ 1.0                             |
| Integrated servo drive  | Lexium 32i              | ≥ 1.0                             |

### Environments

SoMove operates in the following PC environments and configurations:

- Microsoft Windows® 7 Professional
- Microsoft Windows® XP Professional SP3
- Microsoft Windows® Vista Business SP2
- Pentium IV (or equivalent), 1 GHz, hard disk with 1 GB available space, 1 GB of RAM (minimum configuration)

### Presentation

The resistor enables the Altivar 312 drive to operate while braking to a standstill or during slowdown braking, by dissipating the braking energy.

Two types of resistor are available:

- Enclosed model (IP 20 casing) designed to comply with the EMC standard and protected by a temperature-controlled switch or thermal overload relay.

This model enables maximum transient braking torque.

The resistors are designed to be mounted on the outside of the enclosure, but should not inhibit natural cooling. Air inlets and outlets must not be obstructed in any way. The air must be free of dust, corrosive gas and condensation.

- Non-protected model (IP 00) for lower power ratings only.

### Applications


Machines with high inertia, driving loads and machines with fast cycles.

### General characteristics

| Type of braking resistor                           |                             |    | VW3 A7 723 to VW3 A7 725  | VW3 A7 701 to VW3 A7 705                           |
|--|-----------------------------|----|---|--|
| Ambient air temperature around the device          | Operation                   | °C | 40  | 0...+ 50   |
|  | Storage                     | °C | - 25...+ 70   |  |
| Degree of protection of the casing                 |                             |    | IP 00   | IP 20  |
| Thermal protection                                 |                             |    | None  | Via temperature-controlled switch or via the drive |
| Temperature controlled switch (1)                  | Tripping temperature        | °C | –   | 120  |
|  | Max. voltage - max. current |    | –   | 250 V ~ - 1 A                                      |
|  | Min. voltage - min. current |    | –   | 24 V ~ - 0.1 A                                     |
|  | Maximum switch resistance   | mΩ | –   | 60   |
| Operating factor for the dynamic brake transistors |                             |    | The average power that can be dissipated at 40°C from the resistor into the casing is determined for a load factor during braking that corresponds to most common applications.<br>The dynamic brake transistor is sized so that it can tolerate:<br>- The nominal motor power continuously<br>- 150% of the nominal motor power for 60 s |  |

(1) The switch must be connected in the sequence (use for signalling or in line contactor control).

### Load factor and determining the nominal power



Load factor:  $\frac{t}{T}$

t: braking time in s

T: cycle time in s

#### Chart 1

Graph of the average power as a function of the braking torque for a load factor

#### Example:

Motor power Pm = 4 kW

Motor efficiency η = 0.85

Braking torque Tb = 0.6 Tn


Braking time t = 10 s

Cycle time T = 50 s

Load factor fm = 20%

Use chart 1 to determine coefficient K1 corresponding to a braking torque of 0.6 Tn and a load factor of 20%:

K1 = 0.06

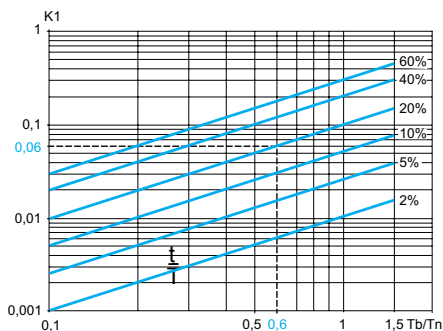

The average power that can be dissipated at 40°C from the resistor into the casing is determined for a load factor during braking that corresponds to most common applications. This load factor is defined in the table above.

For a specific application (example: handling), the nominal power of the resistor must be redefined incorporating the new load factor.

#### Chart 2


Permissible resistor overload as a function of time (characteristic curve)

Use chart 2 to determine coefficient K2 corresponding to a braking time of 10 seconds.

K2 = 7

The nominal power of the resistor (Pn) must be greater than:

$$P_n = P_m \times K_1 \times \eta \left( 1 + \frac{1}{K_2 \times f_m} \right) = 4.10^3 \times 0,06 \times 0,8 \left( 1 + \frac{1}{7 \times 0,2} \right) = 350 \text{ W}$$

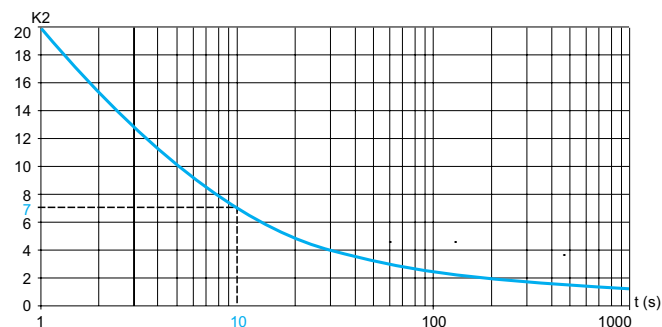



VW3 A7 723



VW3 A7 701

| For drives                             | Minimum resistor value (1) | Ohmic value | Average power available at |      | Reference  | Weight |
|--|----------------------------|-------------|----------------------------|------|------------|--------|
|  |                            |             | 40°C (2)                   | 50°C |            |        |
|  | Ω                          | Ω           | W                          | W    |            | kg     |
| <b>Non-protected braking resistors</b> |                            |             |                            |      |            |        |
| ATV 312H018M2...H075M2                 | 40                         | 100         | 32                         | 28   | VW3 A7 723 | 0.600  |
| ATV 312HU11M2, HU15M2                  | 27                         |             |                            |      |            |        |
| ATV 312H018M3...H075M3                 | 40                         |             |                            |      |            |        |
| ATV 312HU11M3, HU15M3                  | 27                         |             |                            |      |            |        |
| ATV 312H037N4...H075N4                 | 80                         |             |                            |      |            |        |
| ATV 312HU11N4...HU22N4                 | 54                         |             |                            |      |            |        |
| ATV 312H075S6                          | 96                         |             |                            |      |            |        |
| ATV 312HU15S6, HU22S6                  | 64                         |             |                            |      |            |        |
| ATV 312HU30N4                          | 55                         | 100         | 40                         | 35   | VW3 A7 725 | 0.850  |
| ATV 312HU40N4                          | 36                         |             |                            |      |            |        |
| ATV 312HU40S6                          | 44                         |             |                            |      |            |        |
| ATV 312HU22M2, ATV 312HU22M3           | 25                         | 68          | 32                         | 30   | VW3 A7 724 | 0.600  |
| ATV 312HU30M3                          | 16                         |             |                            |      |            |        |
| <b>Protected braking resistors</b>     |                            |             |                            |      |            |        |
| ATV 312H018M2...H075M2                 | 40                         |             | 58                         | 50   | VW3 A7 701 | 2.000  |
| ATV 312HU11M2, HU15M2                  | 27                         |             |                            |      |            |        |
| ATV 312H018M3...H075M3                 | 40                         |             |                            |      |            |        |
| ATV 312HU11M3, HU15M3                  | 27                         |             |                            |      |            |        |
| ATV 312H037N4...H075N4                 | 80                         |             |                            |      |            |        |
| ATV 312HU11N4...HU22N4                 | 54                         |             |                            |      |            |        |
| ATV 312HU22M2, ATV 312HU22M3           | 25                         | 60          | 115                        | 100  | VW3 A7 702 | 2.400  |
| ATV 312HU30M3                          | 16                         |             |                            |      |            |        |
| ATV 312HU30N4                          | 55                         | 100         | 58                         | 50   | VW3 A7 701 | 2.000  |
| ATV 312HU40N4                          | 36                         |             |                            |      |            |        |
| ATV 312HU55N4                          | 29                         | 60          | 115                        | 100  | VW3 A7 702 | 2.400  |
| ATV 312HU75N4                          | 19                         |             |                            |      |            |        |
| ATV 312HU55S6                          | 34                         |             |                            |      |            |        |
| ATV 312HU75S6                          | 23                         |             |                            |      |            |        |
| ATV 312HU40M3                          | 16                         | 28          | 231                        | 200  | VW3 A7 703 | 3.500  |
| ATV 312HD11M4, HU15N4                  | 20                         |             |                            |      |            |        |
| ATV 312HD11S6, HD15S6                  | 24                         |             |                            |      |            |        |
| ATV 312HU55M3, HU75M3                  | 8                          | 15          | 1154                       | 1000 | VW3 A7 704 | 11.000 |
| ATV 312HD11M3, HD15M3                  | 5                          | 10 (3)      | 1154                       | 1000 | VW3 A7 705 | 11.000 |

(1) Depends on the drive rating.

(2) Power that can be dissipated by the resistor at the maximum temperature of 115°C, corresponding to a maximum temperature rise of 75°C in a 40°C environment.

(3) Ohmic value obtained as a function of the connection described in the resistor operating instructions.

For Export Only - Not CSA Approved



**Presentation**

Line chokes provide improved protection against overvoltages on the line supply and reduce harmonic distortion of the current produced by the drive.

The recommended chokes limit the line current.

They have been developed in line with standard IEC 61800-5-1 (VDE 0160 level 1 high-energy overvoltages on the line supply).

The inductance values are defined for a voltage drop between 3% and 5% of the nominal line voltage. Values higher than this will cause loss of torque.

The use of line chokes is recommended in particular for ATV 312H...M3 and ATV 312H...N4 drives under the following circumstances:

- Line supply with significant disturbance from other equipment (reference, overvoltages)
- Line supply with voltage imbalance between phases (in excess of nominal voltage)
- Drive supplied by a line with very low impedance (in the vicinity of a power transformer 10 times more powerful than the drive)
- Installation of a large number of frequency inverters on the same line
- Reduction of overloads on the cos φ correction capacitors, if the installation includes a power factor correction unit

The use of line chokes is mandatory for ATV 312H...S6 drives.

The prospective short-circuit current at the drive connection point must not exceed the maximum value indicated in the reference tables. The use of chokes allows connection to the following line supplies:

- Max. Isc 22 kA for 200/240 V
- Max. Isc 65 kA for 400/500 V and 525/600V


**Characteristics**

| Type of line choke      | VZ1 L004<br>M010  | VZ1 L018<br>UM20 | VW3<br>A4 551 | VW3<br>A4 552 | VW3<br>A4 553 | VW3<br>A4 554 | VW3<br>A4 555 |     |    |
|-------------------------|---|------------------|---------------|---------------|---------------|---------------|---------------|-----|----|
| Conformity to standards | IEC 61800-5-1 (VDE 0160 level 1 high-energy overvoltages on the line supply)                      |                  |               |               |               |               |               |     |    |
| Voltage drop            | Between 3% and 5% of the nominal line voltage. Values higher than this will cause loss of torque. |                  |               |               |               |               |               |     |    |
| Degree of protection    | Choke<br>IP 00<br>Terminals<br>IP 20  |                  |               |               |               |               | IP 10         |     |    |
| Inductance value        | 10  | 5                | 2             | 10            | 4             | 2             | 1             | 0.5 |    |
| Nominal current         | 4   | 7                | 18            | 4             | 10            | 16            | 30            | 60  |    |
| Losses                  | W   | 17               | 20            | 30            | 45            | 65            | 75            | 90  | 80 |

# Variable speed drives

Altivar 312

Option: line chokes

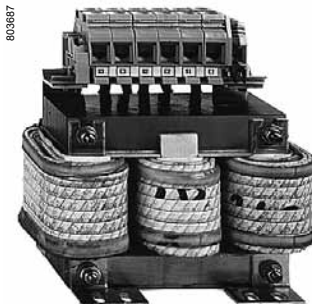

VW3 A4 55●

| Line chokes  |                            |               |                         |               |              |        |
|--|----------------------------|---------------|-------------------------|---------------|--------------|--------|
| Altivar 312  |                            |               |                         |               | Choke        | Weight |
|  | Line current without choke |               | Line current with choke |               | Reference    |        |
|  | U min.<br>(1)              | U max.<br>(1) | U min.<br>(1)           | U max.<br>(1) |              |        |
|  | A                          | A             | A                       | A             |              |        |
| <b>Single-phase supply voltage: 200...240 V 50/60 Hz</b> |                            |               |                         |               |              |        |
| ATV 312H018M2  | 3.0                        | 2.5           | 2.1                     | 1.8           | VZ1 L004M01  | 0.630  |
| ATV 312H037M2  | 5.3                        | 4.4           | 3.9                     | 3.3           |              |        |
| ATV 312H055M2  | 6.8                        | 5.8           | 5.2                     | 4.3           | VZ1 L007L 50 | 0.880  |
| ATV 312H075M2  | 8.9                        | 7.5           | 7.0                     | 5.9           |              |        |
| ATV 312HU11M2  | 12.1                       | 10.2          | 10.2                    | 8.6           | VZ1 L011UM20 | 1.990  |
| ATV 312HU15M2  | 15.8                       | 13.3          | 13.4                    | 11.4          |              |        |
| ATV 312HU22M2  | 21.9                       | 18.4          | 19.2                    | 16.1          |              |        |
| <b>Three-phase supply voltage: 200...240 V 50/60 Hz</b>  |                            |               |                         |               |              |        |
| ATV 312H018M3  | 2.1                        | 1.9           | 1                       | 1             | VW3 A4 551   | 1.500  |
| ATV 312H037M3  | 3.8                        | 3.3           | 1.9                     | 1.6           |              |        |
| ATV 312H055M3  | 4.9                        | 4.2           | 2.5                     | 2.2           |              |        |
| ATV 312H075M3  | 6.4                        | 5.5           | 3.5                     | 2.9           |              |        |
| ATV 312HU11M3  | 8.5                        | 7.4           | 4.8                     | 4.2           | VW3 A4 552   | 3.000  |
| ATV 312HU15M3  | 11.1                       | 9.5           | 6.4                     | 5.6           |              |        |
| ATV 312HU22M3  | 14.1                       | 12.1          | 9.2                     | 8             | VW3 A4 553   | 3.500  |
| ATV 312HU30M3  | 19.1                       | 16.6          | 12.3                    | 10.7          |              |        |
| ATV 312HU40M3  | 24.2                       | 21.1          | 16.1                    | 14            | VW3 A4 554   | 6.000  |
| ATV 312HU55M3  | 32.3                       | 28            | 21.7                    | 19            |              |        |
| ATV 312HU75M3  | 46.8                       | 40.9          | 29                      | 25.2          |              |        |
| ATV 312HD11M3  | 63.5                       | 55.6          | 41.6                    | 36.5          | VW3 A4 555   | 11.000 |
| ATV 312HD15M3  | 82.1                       | 71.9          | 55.7                    | 48.6          |              |        |
| <b>Three-phase supply voltage: 380...500 V 50/60 Hz</b>  |                            |               |                         |               |              |        |
| ATV 312H037N4  | 2.2                        | 1.7           | 1.1                     | 0.9           | VW3 A4 551   | 1.500  |
| ATV 312H055N4  | 2.8                        | 2.2           | 1.4                     | 1.2           |              |        |
| ATV 312H075N4  | 3.6                        | 2.7           | 1.8                     | 1.5           |              |        |
| ATV 312HU11N4  | 4.9                        | 3.7           | 2.6                     | 2             |              |        |
| ATV 312HU15N4  | 6.4                        | 4.8           | 3.4                     | 2.6           |              |        |
| ATV 312HU22N4  | 8.9                        | 6.7           | 5                       | 4.1           | VW3 A4 552   | 3.000  |
| ATV 312HU30N4  | 10.9                       | 8.3           | 6.5                     | 5.2           |              |        |
| ATV 312HU40N4  | 13.9                       | 10.6          | 8.5                     | 6.6           |              |        |
| ATV 312HU55N4  | 21.9                       | 16.5          | 11.7                    | 9.3           | VW3 A4 553   | 3.500  |
| ATV 312HU75N4  | 27.7                       | 21            | 15.4                    | 12.1          |              |        |
| ATV 312HD11N4  | 37.2                       | 28.4          | 22.5                    | 18.1          | VW3 A4 554   | 6.000  |
| ATV 312HD15N4  | 48.2                       | 36.8          | 29.6                    | 23.3          |              |        |
| <b>Three-phase supply voltage: 525...600 V 50/60 Hz</b>  |                            |               |                         |               |              |        |
| ATV 312H075S6 (2)  | -                          | -             | 1.4                     | 1.4           | VW3 A4 551   | 1.500  |
| ATV 312HU15S6 (2)  | -                          | -             | 2.4                     | 2.3           |              |        |
| ATV 312HU22S6 (2)  | -                          | -             | 3.8                     | 3.6           |              |        |
| ATV 312HU40S6 (2)  | -                          | -             | 6                       | 5.8           | VW3 A4 552   | 3.000  |
| ATV 312HU55S6 (2)  | -                          | -             | 7.8                     | 7.5           |              |        |
| ATV 312HU75S6 (2)  | -                          | -             | 11                      | 10.7          | VW3 A4 553   | 3.500  |
| ATV 312HD11S6 (2)  | -                          | -             | 15                      | 14.4          |              |        |
| ATV 312HD15S6 (2)  | -                          | -             | 21.1                    | 20.6          | VW3 A4 554   | 6.000  |

(1) Nominal supply voltage:

| For drives    | Nominal voltage |        |
|---------------|-----------------|--------|
|               | U min.          | U max. |
| ATV 312H●●●M2 | 200             | 240    |
| ATV 312H●●●M3 |                 |        |
| ATV 312H●●●N4 | 380             | 500    |
| ATV 312H●●●S6 | 525             | 600    |

(2) Line choke mandatory for ATV 312H●●●S6 drives.

# Variable speed drives

## Altivar 312

Integrated EMC filters and optional additional EMC filters

### Presentation

#### Integrated filters

Altivar 312 drives, apart from ATV 312H...M3 and ATV312H...S6, have integrated radio interference input filters to comply with the EMC standard for variable speed electrical power drive "products" IEC 61800-3, categories C2 or C3, and to comply with the European EMC (electromagnetic compatibility) directive.

#### Additional EMC input filters

Additional EMC input filters (1) enable drives to meet more stringent requirements. They are designed to reduce conducted emissions on the line supply below the limits of standard IEC 61800-3 category C1 or C2.

These additional EMC filters can be mounted beside or under the drive. They act as a support for the drives and are attached to them via slotted holes.

#### Use according to the type of line supply

Additional EMC filters can only be used on TN (neutral connection) and TT (neutral to earth) type systems.

Standard IEC 61800-3, appendix D2.1, states that on IT systems (isolated or impedance earthed neutral), filters can cause permanent insulation monitors to operate in a random manner.

The effectiveness of additional filters on this type of system depends on the type of impedance between neutral and earth, and therefore cannot be predicted. If a machine has to be installed on an IT system, one solution is to insert an isolation transformer and connect the machine locally on a TN or TT system.

### Characteristics

|  |                              |    |  |
|--|------------------------------|----|--|
| <b>Conformity to standards</b>                   |                              |    | EN 15000   |
| <b>Degree of protection</b>                      |                              |    | IP 20 and IP 41 on upper part  |
| <b>Maximum relative humidity</b>                 |                              |    | 95% non-condensing, no dripping water conforming to IEC 60068-2-3      |
| <b>Ambient air temperature around the device</b> | Operation                    | °C | - 10...+ 60  |
|  | Storage                      |    | - 25...+ 70  |
| <b>Maximum operating altitude</b>                | Without derating             |    | 1000 (above this, derate the current by 1% for every additional 100 m) |
| <b>Vibration resistance</b>                      | Conforming to IEC 60068-2-27 |    | 1.5 mm peak to peak from 3 to 13 Hz<br>1 gn peak from 13 to 150 Hz     |
| <b>Shock resistance</b>                          | Conforming to IEC 60068-2-27 |    | 15 gn for 11 ms  |
| <b>Maximum nominal voltage</b>                   | 50/60 Hz single-phase        | V  | 240 + 10%  |
|  | 50/60 Hz three-phase         | V  | 240 + 10%<br>500 + 10%   |

(1) Not available for ATV 312H...S6 drives

## Variable speed drives

Altivar 312

Option: additional EMC input filters

106586



VW3 A31405

## Additional EMC input filters

| For drives  | Filter                               |             |        |            |           |            | Weight |
|---|--------------------------------------|-------------|--------|------------|-----------|------------|--------|
| Reference   | Maximum length of shielded cable (1) | In (2)      | II (3) | Losses (4) | Reference | Weight     |        |
|   | IEC 61800-3 (5)                      |             |        |            |           |            |        |
|   | Category C2                          | Category C1 | A      | mA         | W         | kg         |        |
|   | m                                    | m           |        |            |           |            |        |
| <b>Single-phase supply voltage: 200...240 V 50/60 Hz</b>                          |                                      |             |        |            |           |            |        |
| ATV 312H018M2<br>ATV 312H037M2<br>ATV 312H055M2<br>ATV 312H075M2                  | 50                                   | 20          | 9      | 100        | 3.7       | VW3 A31405 | 0.600  |
| ATV 312HU11M2<br>ATV 312HU15M2  | 50                                   | 20          | 16     | 150        | 6.5       | VW3 A31403 | 0.775  |
| ATV 312HU22M2   | 50                                   | 20          | 25     | 35         | 15.8      | VW3 A31405 | 1.130  |
| <b>Three-phase supply voltage: 200...240 V 50/60 Hz</b>                           |                                      |             |        |            |           |            |        |
| ATV 312H018M3<br>ATV 312H037M3<br>ATV 312H055M3<br>ATV 312H075M3                  | 5                                    | –           | 7      | 7          | 2.6       | VW3 A31402 | 0.650  |
| ATV 312HU11M3<br>ATV 312HU15M3<br>ATV 312HU22M3                                   | 5                                    | –           | 15     | 15         | 9.9       | VW3 A31404 | 1.000  |
| ATV 312HU30M3<br>ATV 312HU40M3  | 5                                    | –           | 25     | 35         | 15.8      | VW3 A31406 | 1.650  |
| ATV 312HU55M3<br>ATV 312HU75M3  | 5                                    | –           | 47     | 45         | 19.3      | VW3 A31407 | 3.150  |
| ATV 312HD11M3<br>ATV 312HD15M3  | 5                                    | –           | 83     | 15         | 35.2      | VW3 A31408 | 5.300  |
| <b>Three-phase supply voltage: 380...500 V 50/60 Hz</b>                           |                                      |             |        |            |           |            |        |
| ATV 312H037N4<br>ATV 312H055N4<br>ATV 312H075N4<br>ATV 312HU11N4<br>ATV 312HU15N4 | 50                                   | 20          | 15     | 15         | 9.9       | VW3 A31404 | 1.000  |
| ATV 312HU22N4<br>ATV 312HU30N4<br>ATV 312HU40N4                                   | 50                                   | 20          | 25     | 35         | 15.8      | VW3 A31406 | 1.650  |
| ATV 312HU55N4<br>ATV 312HU75N4  | 50                                   | 20          | 47     | 45         | 19.3      | VW3 A31407 | 3.150  |
| ATV 312HD11N4<br>ATV 312HD15N4  | 50                                   | 20          | 49     | 45         | 27.4      | VW3 A31409 | 4.750  |

(1) The filter selection tables give the maximum lengths for shielded cables connecting motors to drives for a switching frequency of 2 to 16 kHz. These maximum lengths are given as examples only, as they vary depending on the stray capacitance of the motors and the cables used. If motors are connected in parallel, the sum of the cable lengths must be taken into account.

(2) In: nominal filter current.

(3) II: maximum earth leakage current at 50 Hz.

(4) Via heat dissipation, at the nominal filter current (In).

(5) Standard IEC 61800-3: EMC immunity and conducted and radiated EMC emissions:

- Category C1: public power supply (residential)

- Category C2: industrial power supply

# Variable speed drives

## Altivar 312

Options: output filters, motor chokes and ferrite suppressors

### Presentation

Output filters and motor chokes can be inserted between the Altivar 312 drive and the motor to:

- Limit the dv/dt at the motor terminals (500 to 1500 V/μs), for cables longer than 50 m
- Filter interference caused by opening a contactor placed between the filter and the motor
- Reduce the motor earth leakage current

The output filter range comprises LR filter cells.


Ferrite suppressors are necessary on ATV 312H●●●M2 and ATV 312H018M3...HU22M3 drives when an output contactor is used.

#### LR filter cell

This cell comprises 3 high-frequency chokes and 3 resistors.

The LR filter cell is particularly suitable for:


- Reducing the dv/dt at the motor terminals
- Using long motor cables

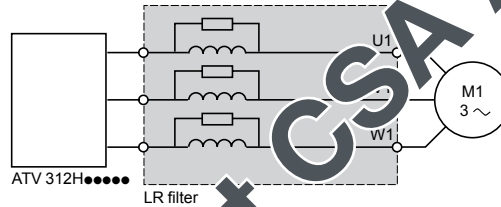

#### Motor choke


The motor choke is particularly suitable for:

- Reducing the dv/dt at the motor terminals (see length of motor cable in characteristics table page 60427/3)
- Minimizing the current wave, thus reducing motor noise

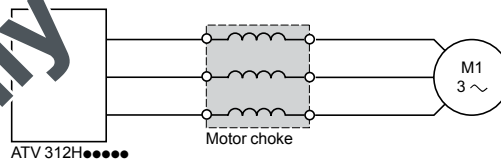

#### Ferrite suppressors for downstream contactor opening

Ferrite suppressors for downstream contactor opening are inserted on the motor cable between ATV 312H●●●M2 or ATV 312H018M3...HU22M3 drives and the output contactor.

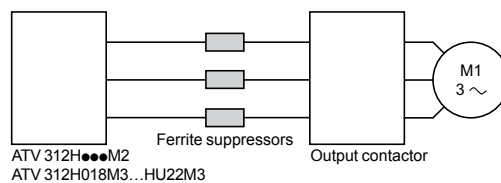

| Characteristics (1)       |                   |     |                     |                     |            |
|---------------------------|-------------------|-----|---------------------|---------------------|------------|
|                           |                   |     | LR filter cells (2) | Motor chokes        |            |
|                           |                   |     | VW3 A5845           | VW3 A4 552...A4 555 | VW3 A4 556 |
| Drive switching frequency |                   | kHz | 0.5...4             | 4                   |            |
| Length of motor cable     | Shielded cables   | m   | ≤ 100               | ≤ 100               |            |
|                           | Unshielded cables | m   | ≤ 200               | ≤ 200               |            |
| Degree of protection      |                   |     | IP 20               | IP 20               | IP 00      |

| References      |  |        |                 |            |        |
|-----------------|--|--------|-----------------|------------|--------|
| LR filter cells |  |        |                 |            |        |
| Designation     | For drives   | Losses | Nominal current | Reference  | Weight |
|                 |  | W      | A               |            | kg     |
| LR filter cells | ATV 312H018M2...HU15M2<br>ATV 312H018M3...HU15M3<br>ATV 312H037N4...HU40N4<br>ATV 312H075S6...HU55S6 | 150    | 10              | VW3 A58451 | 7.400  |
|                 | ATV 312HU22M2<br>ATV 312HU22M3, HU30M3<br>ATV 312HU55N4<br>ATV 312HU75S6                             | 180    | 16              | VW3 A58452 | 7.400  |
|                 | ATV 312HU40M3...HU75M3<br>ATV 312HU75N4...HD15N4<br>ATV 312HD11S6, HD15S6                            | 220    | 30              | VW3 A58453 | 12.500 |

| Motor chokes |  |        |                 |            |        |
|--------------|--|--------|-----------------|------------|--------|
| Designation  | For drives   | Losses | Nominal current | Reference  | Weight |
|              |  | W      | A               |            | kg     |
| Motor chokes | ATV 312HU22N4...HU40N4<br>ATV 312HU40S6, HU55S6                          | 65     | 10              | VW3 A4 552 | 3.000  |
|              | ATV 312HU22M2<br>ATV 312HU22M3, HU30M3<br>ATV 312HU55N4<br>ATV 312HU75S6 | 75     | 16              | VW3 A4 553 | 3.500  |
|              | ATV 312HU40M3...HU75M3<br>ATV 312HU75N4, HD11N4<br>ATV 312HD11S6, HD15S6 | 100    | 30              | VW3 A4 554 | 6.000  |
|              | ATV 312HD15N4  | 80     | 60              | VW3 A4 555 | 11.000 |
|              | ATV 312HD11M3, HD15M3  | –      | 100             | VW3 A4 556 | 16.000 |

| Ferrite suppressors for downstream contactor opening |  |                 |                |        |
|--|--|-----------------|----------------|--------|
| Designation  | For drives                                       | Sold in lots of | Unit reference | Weight |
|  |  |                 |                | kg     |
| Ferrite suppressors for downstream contactor opening | ATV 312H018M2                                    | 3               | VW3 A31451     | 0.300  |
|  | ATV 312H037M2<br>ATV 312H018M3, H037M3           | 3               | VW3 A31452     | 0.200  |
|  | ATV 312H055M2...HU22M2<br>ATV 312H055M3...HU22M3 | 3               | VW3 A31453     | 0.100  |

(1) Filter performance is ensured if the cable lengths between the motor and the drive, given in the above table, are not exceeded. For an application with several motors connected in parallel, the cable length must include all cabling. If a cable longer than that recommended is used, the filters may overheat.  
 (2) For other LR filter configurations, please consult your Customer Care Centre.



**Short-Circuit Current Ratings (SCCR ) and branch circuit protection.**  
The table shows recommended fuse ratings for UL and CSA requirements.  
The components are for use together in accordance with standard UL508

| ATV312 Drive                                    |                          |                   |                         |                        |                          |                               |                 |   |     |
|---|--------------------------|-------------------|-------------------------|------------------------|--------------------------|-------------------------------|-----------------|---|-----|
| Input Voltage<br>10% / -15%<br>60Hz<br>Y        |                          | (kW)              | (HP)                    | Reference <sup>6</sup> | Input AIC<br>Rating (kA) | Minimum<br>Inductance<br>(mH) | KDR LOW-Z<br>3% | Output<br>Interrupt<br>Ratings: (kA) <sup>1</sup> |     |
| <b>Three-phase with or without line reactor</b> |                          |                   |                         |                        |                          |                               |                 |   |     |
| 208/230 V<br>Three-phase                        | Without line<br>reactor  | 0.18              | 0.25                    | ATV312H018M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 0.37              | 0.5                     | ATV312H037M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 0.55              | 0.75                    | ATV312H055M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 0.75              | 1                       | ATV312H075M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 1.1               | 1.5                     | ATV312HU11M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 1.5               | 2                       | ATV312HU15M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 2.2               | 3                       | ATV312HU22M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 3                 | -                       | ATV312HU30M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 4                 | 5                       | ATV312HU40M3           | 5                        | -                             | -               | 100   |     |
|   |                          | 5.5               | 7.5                     | ATV312HU55M3           | 22                       | -                             | -               | 100   |     |
|   |                          | 7.5               | 10                      | ATV312HU75M3           | 22                       | -                             | -               | 100   |     |
|   |                          | 11                | 15                      | ATV312HD11M3           | 22                       | -                             | -               | 100   |     |
|   |                          | 15                | 20                      | ATV312HD15M3           | 22                       | -                             | -               | 100   |     |
|   |                          | With line reactor | 0.18                    | 0.25                   | ATV312H018M3             | 5                             | 3               | KDRA54L   | 100 |
|   | 0.37                     |                   | 0.5                     | ATV312H037M3           | 5                        | 3                             | KDRA53L         | 100   |     |
|   | 0.55                     |                   | 0.75                    | ATV312H055M3           | 5                        | 3                             | KDRA25L         | 100   |     |
|   | 0.75                     |                   | 1                       | ATV312H075M3           | 5                        | 3                             | KDRA26L         | 100   |     |
|   | 1.1                      |                   | 1.5                     | ATV312HU11M3           | 5                        | 1.5                           | KDRA27L         | 100   |     |
|   | 1.5                      |                   | 2                       | ATV312HU15M3           | 5                        | 1.5                           | KDRB28L         | 100   |     |
|   | 2.2                      |                   | 3                       | ATV312HU22M3           | 5                        | 1.25                          | KDRB22L         | 100   |     |
|   | 3                        |                   | -                       | ATV312HU30M3           | 5                        | 1.25                          | KDRB23L         | 100   |     |
|   | 4                        |                   | 5                       | ATV312HU40M3           | 5                        | 1.25                          | KDRB23L         | 100   |     |
|   | 5.5                      |                   | 7.5                     | ATV312HU55M3           | 22                       | 0.5                           | KDRD24L         | 100   |     |
|   | 7.5                      |                   | 10                      | ATV312HU75M3           | 22                       | 0.4                           | KDRD26L         | 100   |     |
|   | 11                       |                   | 15                      | ATV312H D11 M3         | 22                       | 0.3                           | KDRC22L         | 100   |     |
|   | 15                       |                   | 20                      | ATV312HD15M3           | 22                       | 0.2                           | KDRF24L         | 100   |     |
|   | 400/480 V<br>Three-phase |                   | Without line<br>reactor | 0.37                   | 0.5                      | ATV312H037N4                  | 5               | -   | -   |
|   |                          | 0.55              |                         | 0.75                   | ATV312H055N4             | 5                             | -               | -   | 100 |
| 0.75  |                          | 1                 |                         | ATV312H075N4           | 5                        | -                             | -               | 100   |     |
| 1.1   |                          | 1.5               |                         | ATV312HU11N4           | 5                        | -                             | -               | 100   |     |
| 1.5   |                          | 2                 |                         | ATV312HU15N4           | 5                        | -                             | -               | 100   |     |
| 2.2   |                          | 3                 |                         | ATV312HU22N4           | 5                        | -                             | -               | 100   |     |
| 3   |                          | -                 |                         | ATV312HU30N4           | 5                        | -                             | -               | 100   |     |
| 4   |                          | 5                 |                         | ATV312HU40N4           | 5                        | -                             | -               | 100   |     |
| 5.5   |                          | 7.5               |                         | ATV312HU55N4           | 22                       | -                             | -               | 100   |     |
| 7.5   |                          | 10                |                         | ATV312HU75N4           | 22                       | -                             | -               | 100   |     |
| 11  |                          | 15                |                         | ATV312HD11N4           | 22                       | -                             | -               | 100   |     |
| 15  |                          | 20                |                         | ATV312HD15N4           | 22                       | -                             | -               | 100   |     |
| With line reactor                               |                          | 0.37              |                         | 0.5                    | ATV312H037N4             | 5                             | 12              | KDRA8L  | 100 |
|   |                          | 0.55              |                         | 0.75                   | ATV312H055N4             | 5                             | 12              | KDRA9L  | 100 |
|   |                          | 0.75              | 1                       | ATV312H075N4           | 5                        | 12                            | KDRA9L          | 100   |     |
|   |                          | 1.1               | 1.5                     | ATV312HU11N4           | 5                        | 6.5                           | KDRA1L          | 100   |     |
|   |                          | 1.5               | 2                       | ATV312HU15N4           | 5                        | 6.5                           | KDRA2L          | 100   |     |
|   |                          | 2.2               | 3                       | ATV312HU22N4           | 5                        | 5                             | KDRA3L          | 100   |     |
|   |                          | 3                 | -                       | ATV312HU30N4           | 5                        | 3                             | KDRA3L          | 100   |     |
|   |                          | 4                 | 5                       | ATV312HU40N4           | 5                        | 3                             | KDRA4L          | 100   |     |
|   |                          | 5.5               | 7.5                     | ATV312HU55N4           | 22                       | 2.5                           | KDRB2L          | 100   |     |
|   |                          | 7.5               | 10                      | ATV312HU75N4           | 22                       | 1.5                           | KDRB2L          | 100   |     |
|   |                          | 11                | 15                      | ATV312HD11N4           | 22                       | 1.2                           | KDRB1L          | 100   |     |
|   |                          | 15                | 20                      | ATV312HD15N4           | 22                       | 0.8                           | KDRD1L          | 100   |     |

| Short-Circuit Current Ratings                   |                             |  |           |                                 |                               |
|---|-----------------------------|--|-----------|---------------------------------|-------------------------------|
| With Circuit Breaker                            |                             | With GV•P                              |           | With Fuses                      |                               |
| PowerPact<br>Z1, Z2                             | SCCR (kA) <sup>3</sup><br>X | GV2P/3P TypeE <sup>3,4</sup><br>Z1, Z2 | SCCR (kA) | Fuse (A) <sup>5</sup><br>Z1, Z2 | SCCR (kA) <sup>2,3</sup><br>X |
| <b>Three-phase with or without line reactor</b> |                             |  |           |                                 |                               |
| HxL36015  | 22                          | -                                      | -         | 3                               | 22                            |
| HxL36015  | 22                          | -                                      | -         | 6                               | 22                            |
| HxL36015  | 22                          | -                                      | -         | 10                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 10                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 15                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 15                              | 22                            |
| HxL36020  | 22                          | -                                      | -         | 20                              | 22                            |
| HxL36020  | 22                          | -                                      | -         | 25                              | 22                            |
| HxL36030  | 22                          | -                                      | -         | 35                              | 22                            |
| HxL36040  | 22                          | -                                      | -         | 50                              | 22                            |
| HxL36060  | 22                          | -                                      | -         | 60                              | 22                            |
| HxL36070  | 22                          | -                                      | -         | 80                              | 22                            |
| HxL36090  | 22                          | -                                      | -         | 110                             | 22                            |
| HxL36015  | 65                          | GV2P07                                 | 65        | 3                               | 22                            |
| HxL36015  | 65                          | GV2P08                                 | 65        | 6                               | 22                            |
| HxL36015  | 65                          | GV2P10                                 | 65        | 10                              | 22                            |
| HxL36015  | 65                          | GV2P10                                 | 65        | 10                              | 22                            |
| HxL36015  | 65                          | GV2P14                                 | 65        | 15                              | 22                            |
| HxL36015  | 65                          | GV2P14                                 | 65        | 15                              | 22                            |
| HxL36020  | 65                          | GV3P18/13                              | 65        | 20                              | 22                            |
| HxL36020  | 65                          | GV3P18                                 | 65        | 25                              | 22                            |
| HxL36030  | 65                          | GV3P25                                 | 65        | 35                              | 22                            |
| HxL36040  | 65                          | GV3P40/32                              | 65        | 50                              | 22                            |
| HxL36060  | 65                          | GV3P50                                 | 65        | 60                              | 22                            |
| HxL36070  | 65                          | GV3P65                                 | 65        | 80                              | 22                            |
| HxL36090  | 65                          | -                                      | -         | 110                             | 22                            |
| HxL36015  | 22                          | -                                      | -         | 3                               | 22                            |
| HxL36015  | 22                          | -                                      | -         | 6                               | 22                            |
| HxL36015  | 22                          | -                                      | -         | 6                               | 22                            |
| HxL36015  | 22                          | -                                      | -         | 10                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 10                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 15                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 15                              | 22                            |
| HxL36015  | 22                          | -                                      | -         | 20                              | 22                            |
| HxL36020  | 22                          | -                                      | -         | 30                              | 22                            |
| HxL36030  | 22                          | -                                      | -         | 35                              | 22                            |
| HxL36035  | 22                          | -                                      | -         | 50                              | 22                            |
| HxL36050  | 22                          | -                                      | -         | 70                              | 22                            |
| HxL36015  | 65                          | GV2P07                                 | 65        | 3                               | 100                           |
| HxL36015  | 65                          | GV2P07                                 | 65        | 6                               | 100                           |
| HxL36015  | 65                          | GV2P08                                 | 65        | 6                               | 100                           |
| HxL36015  | 65                          | GV2P08                                 | 65        | 10                              | 100                           |
| HxL36015  | 65                          | GV2P10                                 | 65        | 10                              | 100                           |
| HxL36015  | 65                          | GV2P14                                 | 65        | 15                              | 100                           |
| HxL36015  | 65                          | GV2P14                                 | 65        | 15                              | 100                           |
| HxL36015  | 65                          | GV3P13                                 | 65        | 20                              | 100                           |
| HxL36020  | 65                          | GV3P18                                 | 65        | 30                              | 100                           |
| HxL36030  | 65                          | GV3P25                                 | 65        | 35                              | 100                           |
| HxL36035  | 65                          | GV3P32                                 | 65        | 50                              | 100                           |
| HxL36050  | 65                          | GV3P40                                 | 65        | 70                              | 100                           |

| ATV312 Drive                                    |                         |      |      |                        |                          |                               |                 |   |
|---|-------------------------|------|------|------------------------|--------------------------|-------------------------------|-----------------|---|
| Input Voltage<br>10% / -15%<br>60Hz<br>Y        |                         | (kW) | (HP) | Reference <sup>6</sup> | Input AIC<br>Rating (kA) | Minimum<br>Inductance<br>(mH) | KDR LOW-Z<br>3% | Output<br>Interrupt<br>Ratings: (kA) <sup>1</sup> |
| <b>Three-phase with or without line reactor</b> |                         |      |      |                        |                          |                               |                 |   |
| 575/600 V<br>Three-phase                        | With line reactor       | 0.75 | 1    | ATV312H075S6           | 5                        | 20                            | KDRA51L         | 100   |
|   |                         | 1.5  | 2    | ATV312HU15S6           | 5                        | 9                             | KDRA52L         | 100   |
|   |                         | 2.2  | 3    | ATV312HU22S6           | 5                        | 6.5                           | KDRA47L         | 100   |
|   |                         | 4    | 5    | ATV312HU40S6           | 5                        | 5                             | KDRA48L         | 100   |
|   |                         | 5.5  | 7.5  | ATV312HU55S6           | 22                       | 2.5                           | KDRB45L         | 100   |
|   |                         | 7.5  | 10   | ATV312HU75S6           | 22                       | 2.5                           | KDRB44L         | 100   |
|   |                         | 11   | 15   | ATV312HD11S6           | 22                       | 1.5                           | KDRB43L         | 100   |
|   |                         | 15   | 20   | ATV312HD15S6           | 22                       | 1.2                           | KDRD42L         | 100   |
| <b>Single-phase with line reactor</b>           |                         |      |      |                        |                          |                               |                 |   |
| 208/230 V<br>Single-phase                       | Without line<br>reactor | 0.18 | 0.25 | ATV312H018M2           | 1                        | -                             | -               | 100   |
|   |                         | 0.37 | 0.5  | ATV312H037M2           | 1                        | -                             | -               | 100   |
|   |                         | 0.55 | 0.75 | ATV312H055M2           | 1                        | -                             | -               | 100   |
|   |                         | 0.75 | 1    | ATV312H075M2           | 1                        | -                             | -               | 100   |
|   |                         | 1.1  | 1.5  | ATV312HU11M2           | 1                        | -                             | -               | 100   |
|   |                         | 1.5  | 2    | ATV312HU15M2           | 1                        | -                             | -               | 100   |
|   |                         | 2.2  | 3    | ATV312HU22M2           | 1                        | -                             | -               | 100   |

Suitable for use on a circuit capable of delivering not more than    X\_rms symmetrical kiloAmperes,    Y \_\_ Volts maximum, when protected by    Z1 \_\_ with a maximum rating of    Z2 \_\_ .

<sup>1</sup> The Altivar 312 has a 100k SCC rating on the output of the drive as many other drives are rated. In addition to providing a rating based on shorting the output of the drive, these short-circuit rating have been obtained by testing the weakest point internal to the ATV312 per UL508C. These ratings allow proper coordination of short-circuit protection. The amp rating of the short-circuit protection devices in the table are maximum values. Smaller amp sizes may be used.

<sup>2</sup> Ratings also apply to ATV312 Type 1 product, ie: an ATV312 fitted with a conduit box.


<sup>3</sup> Ratings apply to an ATV312 mounted in a non-ventilated Type 1, 3R, 4(X) or 12 rated enclosure. Minimum enclosure volume is 3.375 times the drive volume.

<sup>4</sup> 480 V ratings are for Wye connected electrical distribution systems. GV2P\*\* self protected manual combination starter must be used with GV2GH7 insulating barrier to meet UL 508 Type E rating. GV3P \*\* must be used with GV3G66 and GVAM11 in order to meet UL508 rating.

<sup>5</sup> Fuse type can be Class J, fast acting or time delay, or Class CC.

<sup>6</sup> Available also for B products. Example: ATV312H018M3B


| Short-Circuit Current Ratings                   |                             |  |           |                                 |                               |
|---|-----------------------------|--|-----------|---------------------------------|-------------------------------|
| With Circuit Breaker                            |                             | With GV-P                              |           | With Fuses                      |                               |
| PowerPact Z1, Z2                                | SCCR (kA) <sup>3</sup><br>X | GV2P/3P TypeE <sup>3,4</sup><br>Z1, Z2 | SCCR (kA) | Fuse (A) <sup>5</sup><br>Z1, Z2 | SCCR (kA) <sup>2,3</sup><br>X |
| <b>Three-phase with or without line reactor</b> |                             |  |           |                                 |                               |
| FAL36015  | 22                          | -                                      | -         | 6                               | 22                            |
| FAL36015  | 22                          | -                                      | -         | 6                               | 22                            |
| FAL36015  | 22                          | -                                      | -         | 10                              | 22                            |
| FAL36025  | 22                          | -                                      | -         | 15                              | 22                            |
| FAL36040  | 22                          | -                                      | -         | 20                              | 22                            |
| FAL36050  | 22                          | -                                      | -         | 25                              | 22                            |
| FAL36070  | 22                          | -                                      | -         | 35                              | 22                            |
| FAL36080  | 22                          | -                                      | -         | 45                              | 22                            |
| -   | -                           | -                                      | -         | 6                               | 22                            |
| -   | -                           | -                                      | -         | 10                              | 22                            |
| -   | -                           | -                                      | -         | 10                              | 22                            |
| -   | -                           | -                                      | -         | 15                              | 22                            |
| -   | -                           | -                                      | -         | 20                              | 22                            |
| -   | -                           | -                                      | -         | 20                              | 22                            |
| -   | -                           | -                                      | -         | 30                              | 22                            |

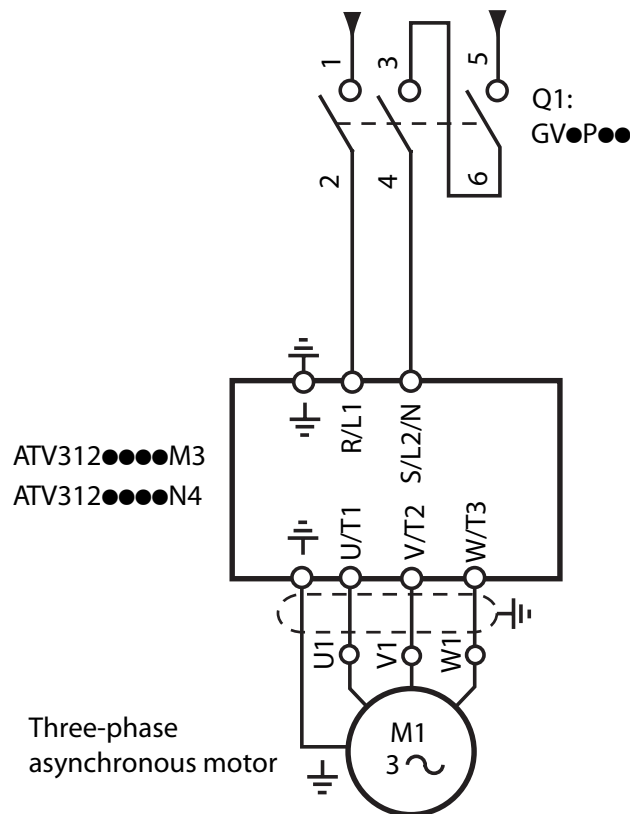

Drives

ATV 312H018M2...H075M2, ATV 312H018M3...H075M3


EMC mounting plate (supplied with the drive)

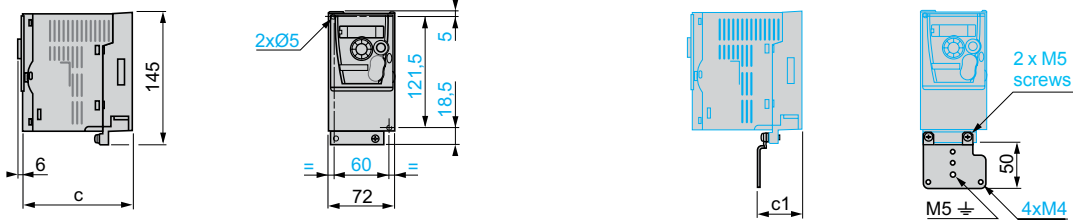

| ATV 312        | c   | c1   |
|----------------|-----|------|
| H018M2, H037M2 | 132 | 61.5 |
| H055M2, H075M2 | 142 | 61.5 |
| H018M3, H037M3 | 122 | 51.5 |
| H055M3, H075M3 | 132 | 51.5 |

ATV 312HU11M2...HU22M2, ATV 312HU11M3...HU40M3, ATV 312H037N4...HU40N4, ATV 312H075S6...HU40S6

EMC mounting plate (supplied with the drive)

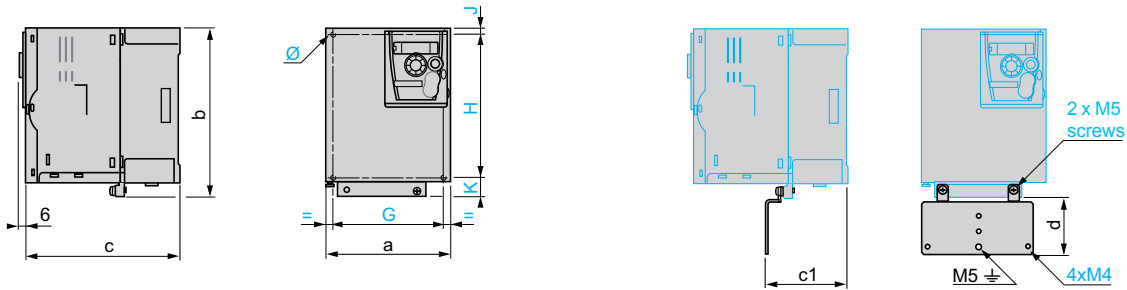


| ATV 312         | a   | b   | c   | c1   | d  | G   | H     | J   | K    | Ø    |
|-----------------|-----|-----|-----|------|----|-----|-------|-----|------|------|
| HU11M3, HU15M3  | 105 | 143 | 132 | 67.3 | 49 | 93  | 121.5 | 5   | 16.5 | 2xØ5 |
| HU11M2, HU15M2  | 107 | 143 | 152 | 67.3 | 49 | 93  | 121.5 | 5   | 16.5 | 2xØ5 |
| HU22M3          |     |     |     |      |    |     |       |     |      |      |
| H037N4...HU15N4 |     |     |     |      |    |     |       |     |      |      |
| H075S6, HU15S6  |     |     |     |      |    |     |       |     |      |      |
| HU22M2          | 142 | 184 | 152 | 88.8 | 48 | 126 | 157   | 6.5 | 20.5 | 4xØ5 |
| HU30M3, HU40M3  |     |     |     |      |    |     |       |     |      |      |
| HU22N4...HU40N4 |     |     |     |      |    |     |       |     |      |      |
| HU22S6, HU40S6  |     |     |     |      |    |     |       |     |      |      |

**Drives (continued)**


ATV 312HU55M3, HU75M3, ATV 312HU55N4, HU75N4, ATV 312HU55S6, HU75S6

EMC mounting plate (supplied with the drive)

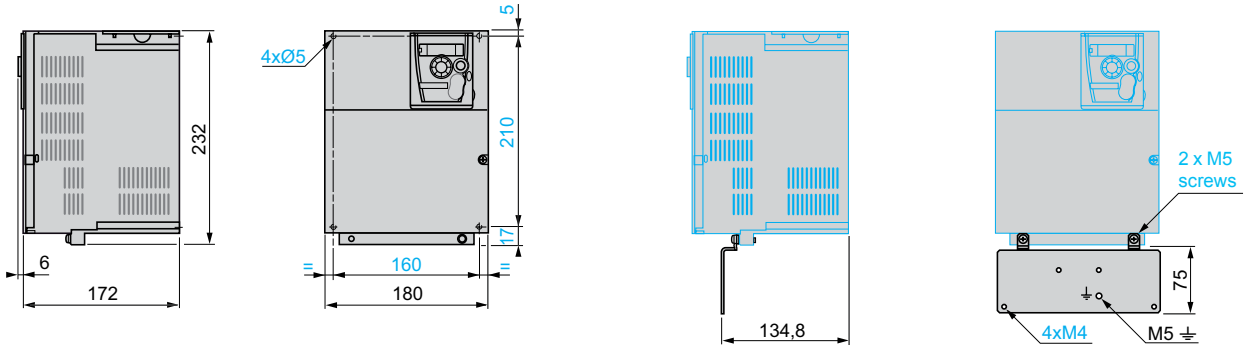

ATV 312HD11M3, HD15M3, ATV 312HD11N4, HD15N4, ATV 312HD11S6, HD15S6

EMC mounting plate (supplied with the drive)

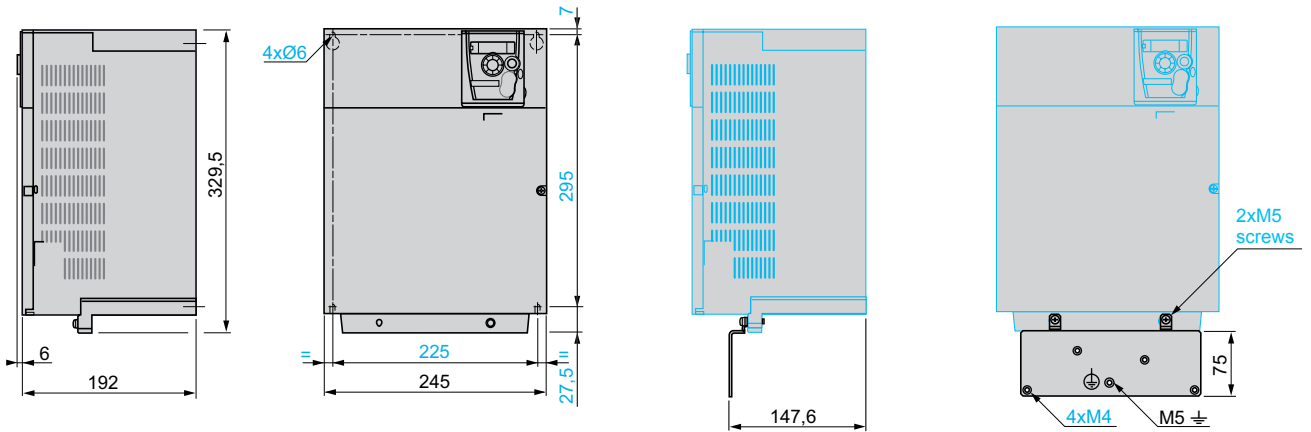





#### Accessories

##### Plates for mounting on rail


VW3 A9 804

VW3 A9 805

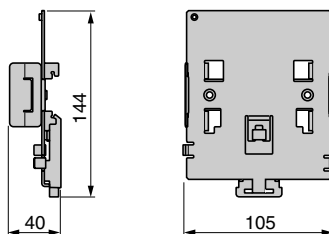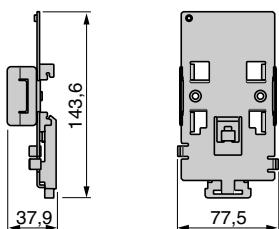

##### UL Type 1 conformity kits

VW3 A31 811...817

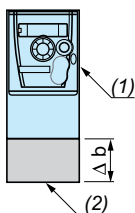

| VW3               | Δ b |
|-------------------|-----|
| A31 811...A31 815 | 68  |
| A31 816           | 96  |
| A31 817           | 99  |

- (1) Drive
- (2) VW3 A31 811...817 kit

#### Options

##### IP 54 remote display terminal




VW3 A1 006

##### IP 65 remote display terminal

VW3 A1 007

Cut-outs and drill holes

Cut-outs and drill holes

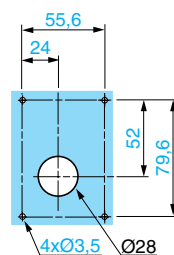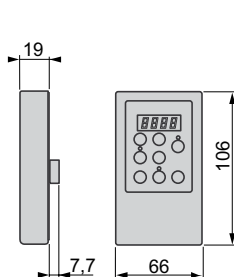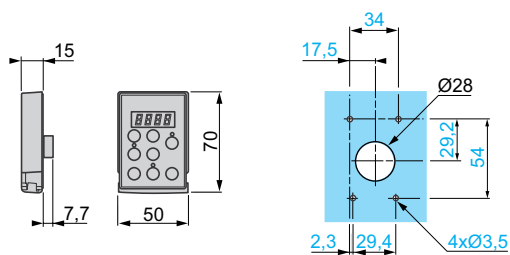

### Options (continued)



#### Non-protected braking resistors

VW3 A7 723, 724

2-wire output, length 0.5 m

VW3 A7 725



2-wire output, length 0.5 m

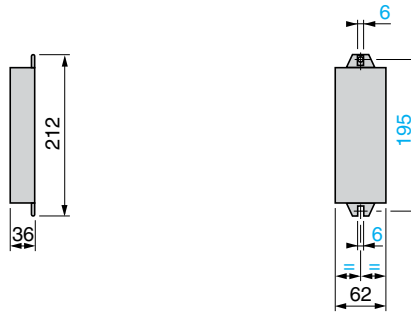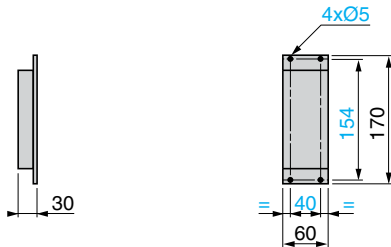

#### Protected braking resistors

VW3 A7 701...703



#### Installation recommendations

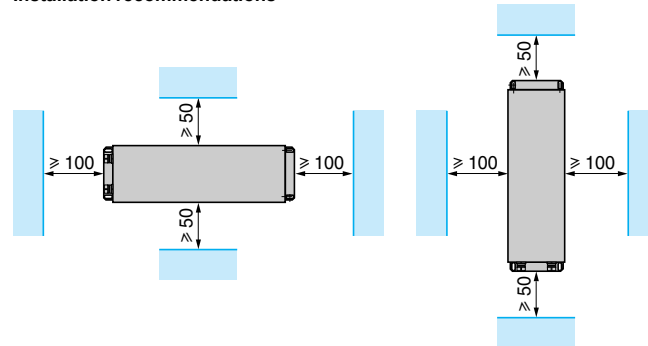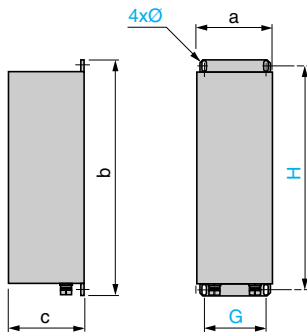

| VW3    | a   | b   | c   | G   | H   | Ø      |
|--------|-----|-----|-----|-----|-----|--------|
| A7 701 | 95  | 295 | 95  | 70  | 275 | 6 x 12 |
| A7 702 | 95  | 395 | 95  | 70  | 375 | 6 x 12 |
| A7 703 | 140 | 395 | 120 | 120 | 375 | 6 x 12 |

VW3 A7 704, 705


#### Installation recommendations

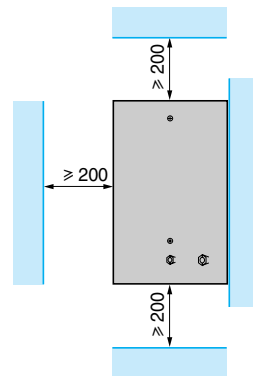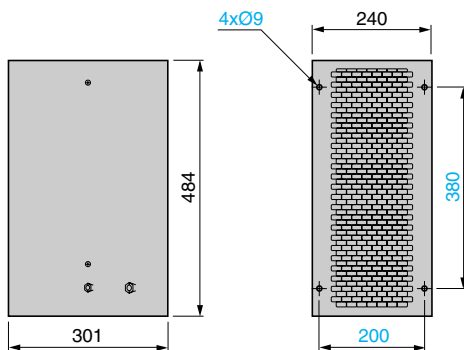

**Options (continued)**

**Line chokes**

VZ1 L004M010, L007UM50, L018UM20

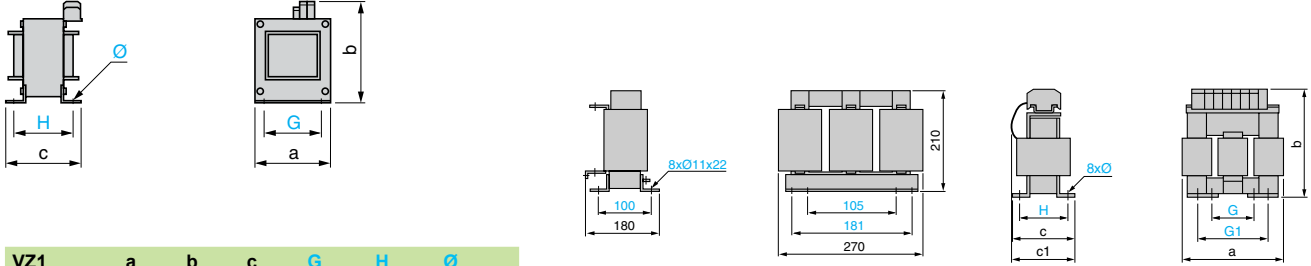


| VZ1      | a  | b   | c   | G  | H  | Ø      |
|----------|----|-----|-----|----|----|--------|
| L004M010 | 60 | 100 | 80  | 50 | 44 | 4 x 9  |
| L007UM50 | 60 | 100 | 95  | 50 | 60 | 4 x 9  |
| L018UM20 | 85 | 120 | 105 | 70 | 70 | 5 x 11 |

**Line chokes and motor chokes**

VW3 A4 551...555

VW3 A4 556

| VW3         | a   | b   | c   | c1  | G  | G1   | H   | Ø      |
|-------------|-----|-----|-----|-----|----|------|-----|--------|
| A4 551      | 100 | 135 | 55  | 60  | 40 | 60   | 42  | 6 x 9  |
| A4 552, 553 | 130 | 155 | 85  | 90  | 60 | 80.5 | 62  | 6 x 12 |
| A4 554      | 155 | 170 | 115 | 135 | 75 | 107  | 90  | 6 x 12 |
| A4 555      | 180 | 210 | 125 | 165 | 85 | 122  | 105 | 6 x 12 |

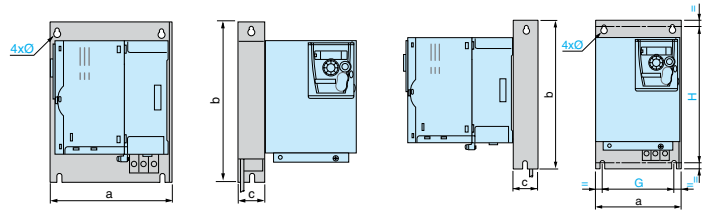

**Additional EMC input filters**

Mounting the filter under the drive

Mounting the filter next to the drive

View from the front

View from the front

| VW3         | a   | b   | c  | G   | H   | Ø   |
|-------------|-----|-----|----|-----|-----|-----|
| A31401, 402 | 72  | 195 | 37 | 52  | 180 | 4.5 |
| A31403      | 107 | 195 | 35 | 85  | 180 | 4.5 |
| A31404      | 107 | 195 | 42 | 85  | 180 | 4.5 |
| A31405      | 140 | 235 | 35 | 120 | 215 | 4.5 |
| A31406      | 140 | 235 | 50 | 120 | 215 | 4.5 |
| A31407      | 180 | 305 | 60 | 140 | 285 | 5.5 |
| A31408      | 245 | 395 | 80 | 205 | 375 | 5.5 |
| A31409      | 245 | 395 | 60 | 205 | 375 | 5.5 |

**Options (continued)**

**LR filter cells**


VW3 A58451...453

| VW3    | a     | b     | c     | G   | H   |
|--------|-------|-------|-------|-----|-----|
| A58451 | 169.5 | 340   | 123   | 150 | 315 |
| A58452 |       |       |       |     |     |
| A58453 | 239   | 467.5 | 139.5 | 212 | 444 |

**Ferrite suppressors for downstream contactor opening**


VW3 A31451...453

| VW3    | a    | b    | c    | ∅  |
|--------|------|------|------|----|
| A31451 | 33.5 | 33   | 33   | 13 |
| A31452 | 33   | 21.5 | 22.5 | 9  |
| A31453 | 30   | 19   | 19   | 6  |

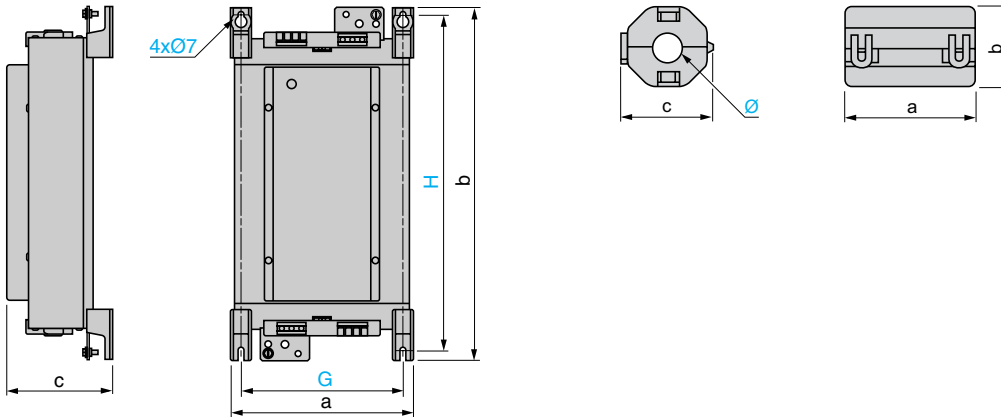


### ATV 312H●●●M2

#### Single-phase power supply

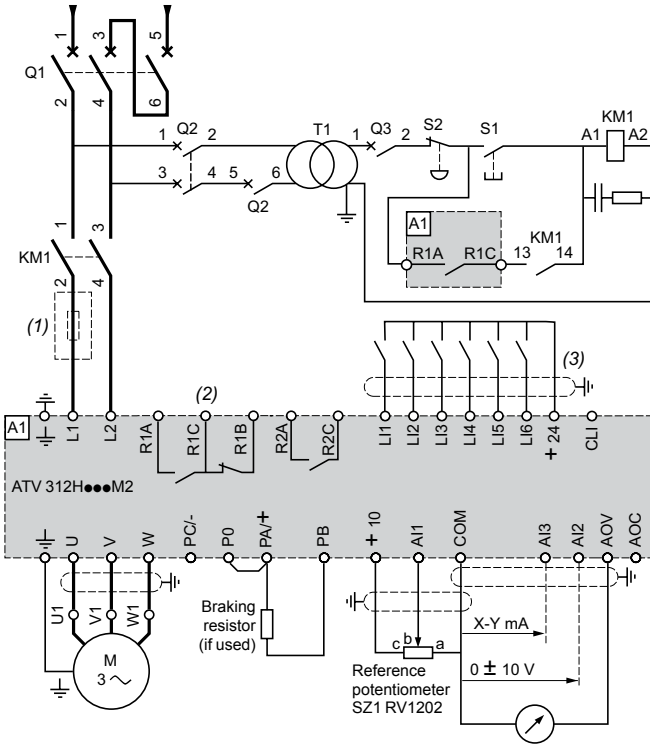

### ATV 312H●●●M3, ATV 312H●●●N4, ATV 312H●●●S6

#### Three-phase power supply

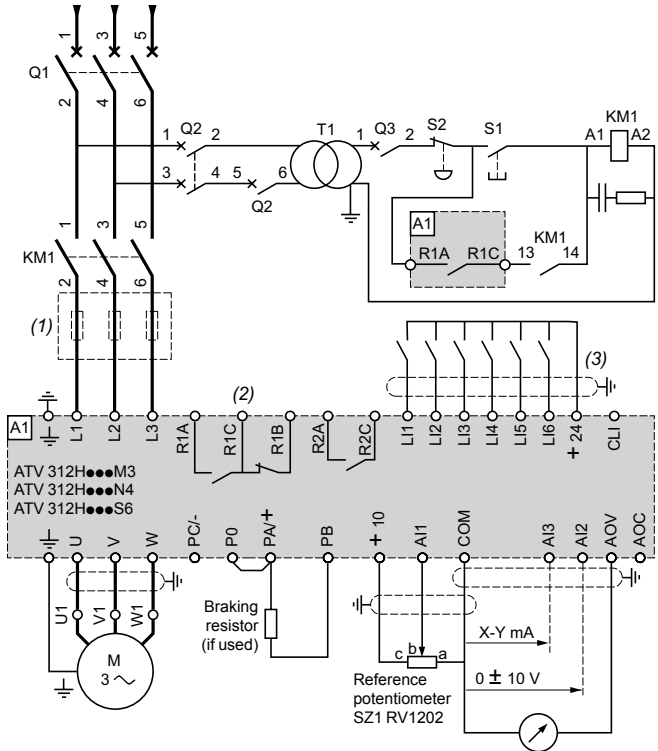

- (1) Line choke (single-phase or three-phase).
- (2) Fault relay contacts. Used for remote signalling of the drive status.
- (3) Connection of the common for the logic inputs depends on the position of the switch (see schemes below).

**Note:** All terminals are located at the bottom of the drive.


Install interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

**Compatible components** (for a complete list of references, please refer to the "Motor starter solutions - Control and protection components" catalogue).


| Item no. | Designation   |
|----------|---|
| KM1      | Line contactor LC1 ●●● + suppressor module LA4 DA2U (see page 62)               |
| Q1       | GV2 L magnetic circuit-breaker or Compact NS circuit-breaker (see page 62)      |
| Q2       | GV2 L magnetic circuit-breaker rated at twice the nominal primary current of T1 |
| Q3       | GB2 CB05 thermal magnetic circuit breaker                                       |
| S1, S2   | XB4 B or XB5 A pushbuttons  |
| T1       | 100 VA transformer 220 V secondary  |

#### Examples of recommended schemes


##### Logic input switches

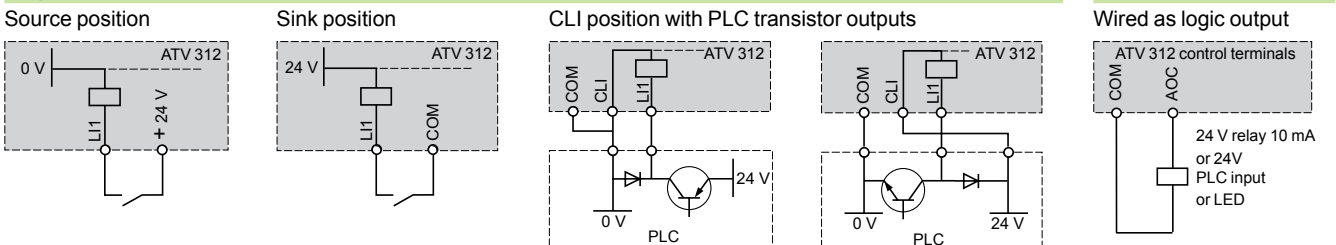


##### 2-wire control

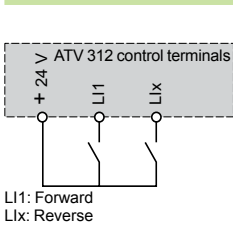


##### 3-wire control

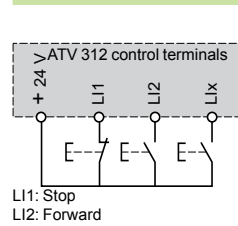

##### Voltage analog inputs

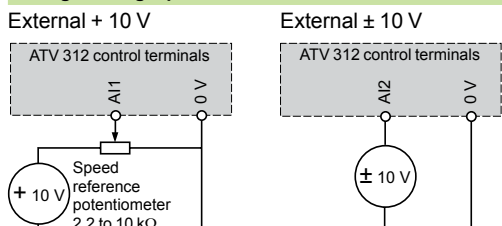


##### Current analog input

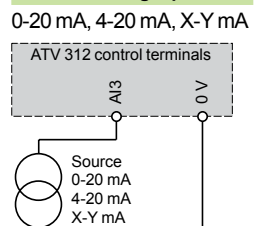


**Additional EMC input filters VW3 A31 40●**

**Single-phase power supply**

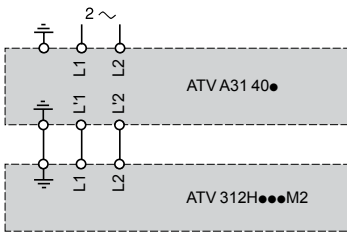

**Three-phase power supply**

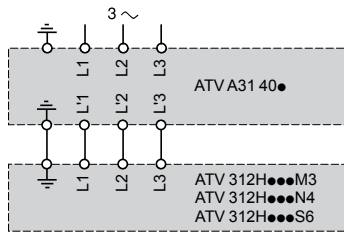


**Connections ensuring conformity to EMC standards**

**Principle**

- Earths between the drive, motor and cable shielding must have “high-frequency” equipotentiality.
- Use shielded cables with the shielding connected to earth throughout 360° at both ends for the motor cable, the braking resistor cable and the control-signal cables. Metal conduit or ducting can be used for part of the shielding length provided that there is no break in the continuity of the earth connection.
- Ensure maximum separation between the power supply cable and the motor cable.

**Installation diagram**

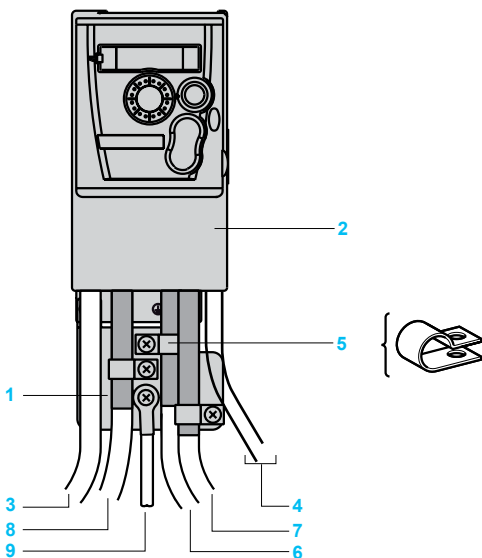

- 1 Steel plate to be mounted on the drive (earthed casing)
- 2 Altivar 312 drive
- 3 Unshielded power supply wires or cable
- 4 Unshielded wires or cable for the output of the fault relay contacts
- 5 Attach and earth the shielding of cables 6, 7 and 8 as close as possible to the drive:
  - Strip the cable to expose the shielding
  - Attach the cable to the plate 1, attaching the clamp on the stripped part of the shielding.
 The shielding must be clamped tightly enough to the metal sheet to ensure good contact.  
 For cables 6, 7 and 8, the shielding must be connected to earth at both ends. The shielding must be continuous, and if intermediate terminals are used, they must be placed in EMC shielded metal boxes.
- 6 Shielded cable for connecting the motor
- 7 Shielded cable for connecting the control-signal wiring. For applications requiring several conductors, use cables with a small cross-section (0.5 mm<sup>2</sup>).
- 8 Shielded cable for connecting the braking resistor
- 9 PE cable (green-yellow)

**Note:** The HF equipotential earth connection between the drive, motor and cable shielding does not remove the need to connect the PE conductors (green-yellow) to the appropriate terminals on each device. If using an additional EMC input filter, it must be mounted under the drive and connected directly to the line supply via an unshielded cable. Link 3 on the drive is then via the filter output cable.

**Operation on an IT system (isolated or impedance earthed neutral)**

Use a permanent insulation monitor compatible with non-linear loads, such as the Schneider Electric XM200 (please consult our website [www.schneider-electric.com](http://www.schneider-electric.com) or contact your Customer Care Center).

ATV 312H...M2 and ATV 312H...N4 drives have integrated EMC filters. For use on an IT system, these filters can be disconnected by removing their earth connection:

- For ATV 312H018M2...HU22M2 and H037N4...HU40N4 drives, remove a jumper to disconnect the filter.
- For ATV 312HU55N4...HD15N4 drives, move the wire with the cable tag to disconnect the filter.




## Installation recommendations


Depending on the conditions in which the drive is to be used, its installation will require certain precautions and the use of appropriate accessories.

Install the unit vertically, at  $\pm 10^\circ$ :


- Do not place it close to heating elements
- Leave sufficient free space to ensure that the air required for cooling purposes can circulate from the bottom to the top of the unit

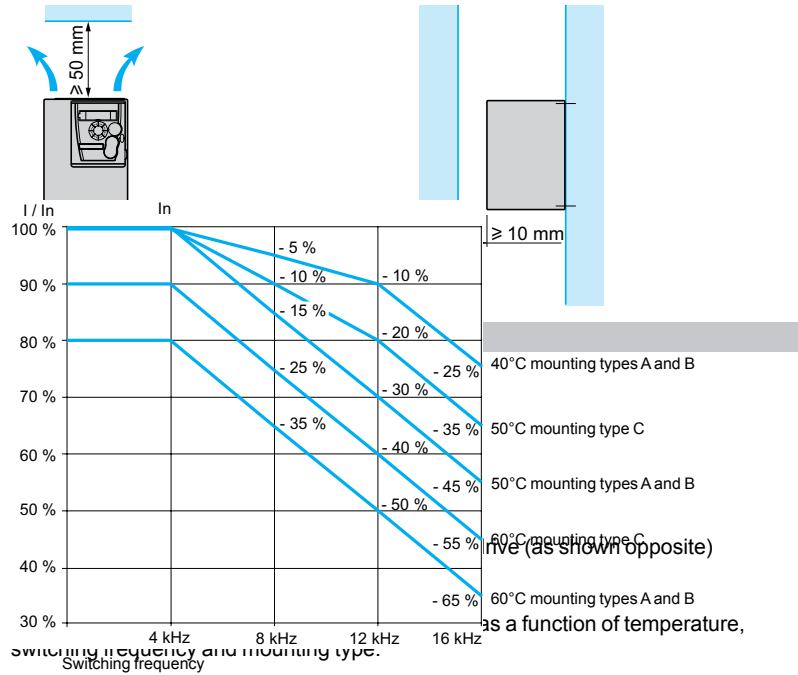

For intermediate temperatures (for example, 55°C), interpolate between 2 curves.

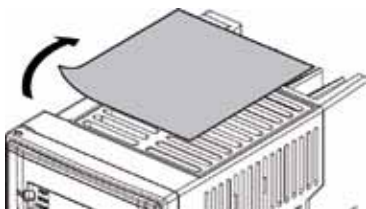

Removing the protective cover

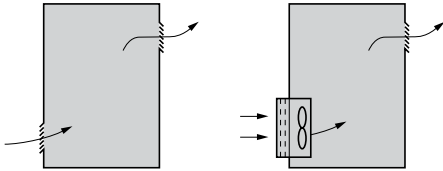

### Specific recommendations for mounting in an enclosure

Follow the mounting recommendations on the opposite page.

To ensure proper air circulation in the drive:

- Install ventilation grilles
- Ensure that there is sufficient ventilation. If there is not, install a forced ventilation unit with a filter. The openings and/or fans must provide a flow rate at least equal to that of the drive fans (see below).
- Use special filters with IP 54 protection
- Remove the protective cover from the top of the drive

### Fan flow rate depending on the drive rating

| ATV 312   | Flow rate m <sup>3</sup> /min |
|---|-------------------------------|
| H018M2...H055M2<br>H018M3...H055M3<br>H037N4...HU11N4<br>H075S6, HU15S6 | 0.3                           |
| H075M2...HU15M2<br>H075M3...HU15M3<br>HU15N4, HU22N4<br>HU22S6, HU40S6  | 0.55                          |
| HU22M2<br>HU22M3...HU40M3<br>HU30N4, HU40N4<br>HU55S6, HU75S6           | 1.55                          |
| HU55M3<br>HU55N4, HU75N4<br>HD11S6                                      | 1.7                           |
| HU75M3, HD11M3<br>HD11N4, HD15N4<br>HD15S6                              | 2.8                           |
| HD15M3  | 3.6                           |

### Metal dust and damp proof wall-mounted or floor-standing enclosure (IP 54 degree of protection)

The drive must be mounted in a dust and damp proof enclosure in certain environmental conditions: dust, corrosive gases, high humidity with risk of condensation and dripping water, splashing liquid, etc. This enables the drive to be used in an enclosure where the maximum internal temperature can reach 50°C.

### Calculating the dimensions of the enclosure

#### Maximum thermal resistance Rth (°C/W)

$$R_{th} = \frac{\theta^{\circ} - \theta_e}{P}$$

$\theta^{\circ}$  = maximum temperature inside the enclosure in °C  
 $\theta_e$  = maximum external temperature in °C  
 $P$  = total power dissipated in the enclosure in W

Power dissipated by drive: see page 26.

Add the power dissipated by the other components of the device.

#### Useful heat exchange area of enclosure S (m<sup>2</sup>)

(sides + top + front panel if wall-mounted)

$$S = \frac{K}{R_{th}}$$

K = thermal resistance per m<sup>2</sup> of the enclosure

For metal enclosures:

- K = 0.12 with internal fan
- K = 0.15 without fan

**Note:** Do not use insulated enclosures, as they have a poor level of conductivity.

# Variable speed drives

## Altivar 312 Motor starters

### Applications

The combinations listed below can be used to assemble a complete motor starter comprising a circuit-breaker, a contactor and an Altivar 312 variable speed drive. The circuit-breaker provides protection against accidental short-circuits, disconnection and, if necessary, isolation. The contactor controls and manages any safety features and isolates the motor on stopping.

The Altivar 312 drive is protected electronically against short-circuits between phases and between phase and earth. It therefore ensures continuity of service and thermal protection of the motor.

### Motor starters

| Standard power rating of 50/60 Hz 4-pole motors (1) |      | Drive         | Circuit-breaker | Contactor (2)                            |
|---|------|---------------|-----------------|--|
| Reference   |      | Reference     | Rating          | Stage reference to obtain full reference |
| kW  | HP   |               |                 |  |
| <b>Single-phase supply voltage: 200...240 V</b>     |      |               |                 |  |
| 0.18  | 0.25 | ATV 312H018M2 | GV2 L08         | 4 LC1 D09●●                              |
| 0.37  | 0.5  | ATV 312H037M2 | GV2 L10         | 6.3 LC1 D09●●                            |
| 0.55  | 0.75 | ATV 312H055M2 | GV2 L14         | 10 LC1 D09●●                             |
| 0.75  | 1    | ATV 312H075M2 | GV2 L14         | 10 LC1 D09●●                             |
| 1.1   | 1.5  | ATV 312H11M2  | GV2 L16         | 14 LC1 D09●●                             |
| 1.5   | 2    | ATV 312H15M2  | GV2 L20         | 18 LC1 D09●●                             |
| 2.2   | 3    | ATV 312H22M2  | GV2 L22         | 25 LC1 D09●●                             |
| <b>Three-phase supply voltage: 200...240 V</b>      |      |               |                 |  |
| 0.18  | 0.25 | ATV 312H018M3 | GV2 L07         | 2.5 LC1 D09●●                            |
| 0.37  | 0.5  | ATV 312H037M3 | GV2 L08         | 4 LC1 D09●●                              |
| 0.55  | 0.75 | ATV 312H055M3 | GV2 L10         | 6.3 LC1 D09●●                            |
| 0.75  | 1    | ATV 312H075M3 | GV2 L14         | 10 LC1 D09●●                             |
| 1.1   | 1.5  | ATV 312HU11M3 | GV2 L14         | 10 LC1 D09●●                             |
| 1.5   | 2    | ATV 312HU15M3 | GV2 L16         | 14 LC1 D09●●                             |
| 2.2   | 3    | ATV 312HU22M3 | GV2 L20         | 18 LC1 D09●●                             |
| 3   | –    | ATV 312HU30M3 | GV2 L22         | 25 LC1 D09●●                             |
| 4   | 5    | ATV 312HU40M3 | GV2 L22         | 25 LC1 D09●●                             |
| 5.5   | 7.5  | ATV 312HU55M3 | GV3 L40         | 40 LC1 D32●●                             |
| 7.5   | 10   | ATV 312HU75M3 | GV3 L50         | 50 LC1 D32●●                             |
| 11  | 15   | ATV 312HD11M3 | GV3 L65         | 65 LC1 D50●●                             |
| 15  | 20   | ATV 312HD15M3 | NS100HMA        | 100 LC1 D80●●                            |
| <b>Three-phase supply voltage: 380...500 V</b>      |      |               |                 |  |
| 0.37  | 0.5  | ATV 312H037N4 | GV2 L07         | 2.5 LC1 D09●●                            |
| 0.55  | 0.75 | ATV 312H055N4 | GV2 L08         | 4 LC1 D09●●                              |
| 0.75  | 1    | ATV 312H075N4 | GV2 L08         | 4 LC1 D09●●                              |
| 1.1   | 1.5  | ATV 312HU11N4 | GV2 L10         | 6.3 LC1 D09●●                            |
| 1.5   | 2    | ATV 312HU15N4 | GV2 L14         | 10 LC1 D09●●                             |
| 2.2   | 3    | ATV 312HU22N4 | GV2 L14         | 10 LC1 D09●●                             |
| 3   | –    | ATV 312HU30N4 | GV2 L16         | 14 LC1 D09●●                             |
| 4   | 5    | ATV 312HU40N4 | GV2 L16         | 14 LC1 D09●●                             |
| 5.5   | 7.5  | ATV 312HU55N4 | GV2 L22         | 25 LC1 D09●●                             |
| 7.5   | 10   | ATV 312HU75N4 | GV2 L32         | 32 LC1 D18●●                             |
| 11  | 15   | ATV 312HD11N4 | GV3 L40         | 40 LC1 D25●●                             |
| 15  | 20   | ATV 312HD15N4 | GV3 L50         | 50 LC1 D32●●                             |

(1) The values expressed in HP conform to the NEC (National Electrical Code).

(2) Composition of contactors LC1-D09/D18/D25/D32/D50/D80:

3 poles + 1 N/O auxiliary contact + 1 N/C auxiliary contact.

(3) Replace ●● with the control circuit voltage reference indicated in the table below:

### AC control circuit

|       | Volts ~  | 24 | 48 | 110 | 220 | 230 | 230/240 |
|-------|----------|----|----|-----|-----|-----|---------|
| LC1-D | 50/60 Hz | B7 | E7 | F7  | M7  | P7  | U7      |

For other voltages between 24 V and 660 V, or a DC control circuit, please refer to the "Motor starter solutions - Control and protection components" catalogue.



For Export Only - NOT CSA Approved



GV3 L40  
+  
LC1 D25  
+  
ATV 312HD15S6

**Motor starters (continued)**

| Standard power rating of 50/60 Hz 4-pole motors (1) |     | Drive         | Circuit-breaker |        | Contactor (2)   |
|---|-----|---------------|-----------------|--------|---|
|   |     | Reference     | Reference       | Rating | Add voltage reference to basic reference to obtain full reference (3) |
| kW  | HP  |               |                 | A      |   |
| <b>Three-phase supply voltage: 525...600 V</b>      |     |               |                 |        |   |
| 0.75  | 1   | ATV 312H075S6 | GV2 L08         | 4      | LC1 D09●●   |
| 1.5   | 2   | ATV 312HU15S6 | GV2 L10         | 6.3    | LC1 D09●●   |
| 2.2   | 3   | ATV 312HU22S6 | GV2 L14         | 10     | LC1 D09●●   |
| 4   | 5   | ATV 312HU40S6 | GV2 L16         | 14     | LC1 D09●●   |
| 5.5   | 7.5 | ATV 312HU55S6 | GV2 L20         | 18     | LC1 D09●●   |
| 7.5   | 10  | ATV 312HU75S6 | GV2 L22         | 25     | LC1 D09●●   |
| 11  | 15  | ATV 312HD11S6 | GV2 L32         | 32     | LC1 D18●●   |
| 15  | 20  | ATV 312HD15S6 | GV3 L40         | 40     | LC1 D25●●   |

(1) The values expressed in HP conform to the NEC (National Electrical Code).

(2) Composition of contactors LC1-D09/D18/D25:

3 poles + 1 N/O auxiliary contact + 1 N/C auxiliary contact.


(3) Replace ●● with the control circuit voltage reference indicated in the table below:

| AC control circuit |          | 24 | 110 | 220 | 230 | 230/240 |
|--------------------|----------|----|-----|-----|-----|---------|
| LC1-D              | Volts ~  | B7 | F7  | M7  | P7  | U7      |
|                    | 50/60 Hz |    |     |     |     |         |


For other voltages between 24 V and 230 V, or a DC control circuit, please refer to the "Motor starter solutions - Control and protection components" catalogue.

For Export Only - Not CSA Approved


|   |         |
|---|---------|
| <b>Summary of functions</b>   |         |
| <b>Drive factory configuration</b>  |         |
| Presentation  | page 65 |
| <b>Human-Machine Interface (HMI)</b>  |         |
| Description   | page 65 |
| <b>Application functions</b>  |         |
| Operating speed range   | page 66 |
| Acceleration and deceleration ramp times  | page 66 |
| Acceleration and deceleration ramp profiles                                     | page 66 |
| Ramp switching  | page 67 |
| Automatic adaptation of deceleration ramp                                       | page 67 |
| Voltage/frequency ratio   | page 68 |
| Auto-tuning   | page 68 |
| Switching frequency, noise reduction  | page 68 |
| Skip frequencies  | page 69 |
| Speed reference   | page 69 |
| Analog inputs   | page 69 |
| Preset speeds   | page 69 |
| +/- speed   | page 70 |
| Save reference  | page 70 |
| Jog operation   | page 71 |
| Command and reference channels  | page 71 |
| Reference switching   | page 71 |
| Summing inputs  | page 71 |
| PI regulator  | page 72 |
| Current limit switching   | page 72 |
| Limiting low speed operating time   | page 72 |
| Motor switching   | page 72 |
| Control mode switching  | page 73 |
| 2-wire control  | page 73 |
| 3-wire control  | page 73 |
| Forced local mode   | page 73 |
| Freewheel stop  | page 73 |
| Fast stop   | page 73 |
| DC injection stop   | page 73 |
| Brake control   | page 74 |
| Limit switch management   | page 74 |
| Monitoring  | page 74 |
| Fault management  | page 75 |
| Fault reset   | page 75 |
| General reset (disables all faults)   | page 75 |
| Controlled stop on loss of line supply  | page 75 |
| Stop mode in the event of a fault   | page 75 |
| Automatic catching of a spinning load with speed detection ("catch on the fly") | page 76 |
| Automatic restart   | page 76 |
| Derated operation in the event of an undervoltage                               | page 76 |
| Fault relay, unlocking  | page 76 |
| Resetting operating time to zero  | page 76 |
| Motor thermal protection  | page 77 |
| Drive thermal protection  | page 77 |
| R1, R2 relay configuration  | page 77 |
| AOC/AOV analog outputs  | page 78 |
| Saving and retrieving the configuration   | page 78 |
| <b>Function compatibility table</b>   |         |
| Presentation  | page 79 |

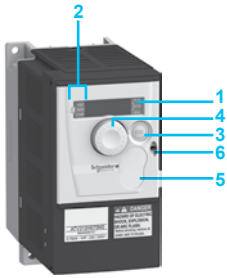


ATV 312H075M2 with front panel door closed, with cover 5: STOP/RESET and RUN keys not accessible

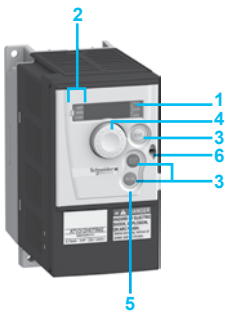

ATV 312H075M2 with front panel door closed, without cover 5: STOP/RESET and RUN keys accessible

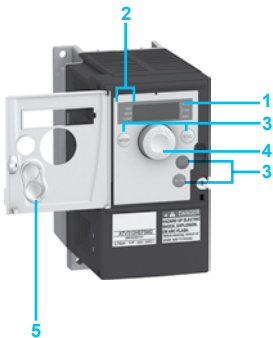

ATV 312H075M2 with front panel door open

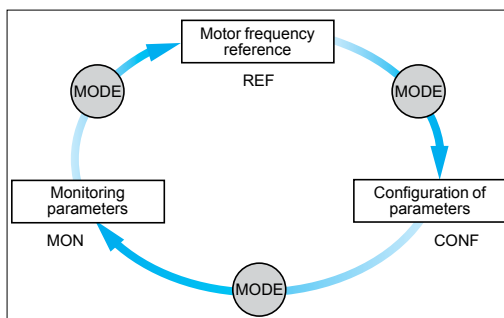

3 operating modes: REF, MON and CONF

### Drive factory configuration

The Altivar 312 drive is configured to allow a quick start-up for most applications. Factory configuration:

- Nominal motor frequency: 50 Hz
- Motor voltage: 230 V (ATV 312H●●●M2, ATV 312H●●●M3), 400 V (ATV 312H●●●N4) or 600 V (ATV 312H●●●S6)
- Linear ramp times: 3 seconds
- Low speed (LSP): 0 Hz/High speed (HSP): 50 Hz
- Normal stop mode on deceleration ramp
- Stop mode in the event of a fault: freewheel
- Motor thermal current = nominal drive current
- Standstill injection braking current = 0.7 x nominal drive current, for 0.5 seconds
- Constant torque operation with sensorless flux vector control
- Logic inputs:
  - 2 directions of operation (LI1, LI2), 2-wire control
  - 4 preset speeds (LI3, LI4): LSP (low speed), 10 Hz, 15 Hz, 20 Hz
- Analog inputs:
  - AI1 speed reference (0 +10 V)
  - AI2 (0 ± 10 V) summing of AI1
  - AI3 (4-20 mA) not configured
- Relay R1: fault relay
- Relay R2: not assigned
- Analog output AOC: 0-20 mA, image of the motor frequency
- Automatic adaptation of the deceleration ramp in the event of overbraking
- Switching frequency 4 kHz, random frequency

### Human-Machine Interface (HMI)



#### Description

- 1 Display:
  - 4-digit display
  - Display of numeric values and codes
  - Indication of the unit of the displayed value
- 2 Display of the drive status:
  - **REF**: Reference mode. This mode is used to display the motor frequency reference of the active reference channel (terminals, local mode, remote display terminal or Modbus serial link). In local mode, the reference can be modified using the navigation button 4, if the function is configured.
  - **MON**: Monitoring mode. This mode is used to display the monitoring parameters when the drive is running.
  - **CONF**: Configuration mode. This mode is used to configure the drive parameters. These parameters can be modified using the SoMove setup software.
- 3 Use of the keys:
  - **MODE** is used to access one of the following modes:
    - Reference mode REF
    - Monitoring mode MON
    - Configuration mode CONF
  - Note**: This key cannot be accessed if the front panel door is closed.
  - **ESC**: Aborts a value, a parameter or a menu to return to the previous selections
  - **STOP/RESET**: Local motor stop command, clears drive faults (key active in factory configuration)
  - **RUN**: Local motor run command, if its activation is programmed
- 4 Use of the navigation button:
  - Rotate: Increases or decreases the value, or goes to the next value
  - Press: Saves the current value or selects the value
  - The button can be used as a potentiometer in local mode
- 5 Cover that can be removed for access to the RUN and STOP/RESET keys.
- 6 It is possible to lock the front panel door with a lead seal.

### Application functions

#### ■ Operating speed range


This function is used to determine the 2 frequency limits which define the speed range permitted by the machine under actual operating conditions for all applications with or without overspeed.

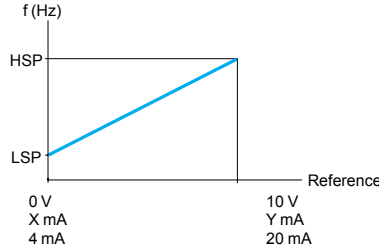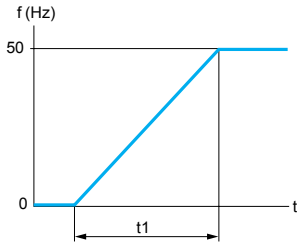

LSP: low speed, from 0 to HSP, factory setting 0  
 HSP: high speed, from LSP to f max., factory setting 50 Hz  
 X: configurable between 0 and 20 mA, factory setting 4 mA  
 Y: configurable between 4 and 20 mA, factory setting 20 mA

#### ■ Acceleration and deceleration ramp times

This function is used to define acceleration and deceleration ramp times according to the application and the machine dynamics.

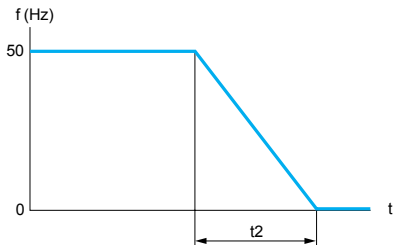

Linear acceleration ramp

Linear deceleration ramp

t1: acceleration time

t2: deceleration time

t1 and t2 can be set independently between 0.1 and 999.9 s, factory setting: 3 s

#### ■ Acceleration and deceleration ramp profiles

These enable a gradual change in the output frequency starting from a speed reference, following a linear profile or a preset profile.

##### □ S ramps


For applications such as material handling, packaging and passenger transport, the use of S ramps takes up mechanical backlash, eliminates jolts, and limits "non-following" of speed during rapid transient operation of high-inertia machines.

##### □ U ramps

U ramps are specifically for pumping applications, for example an installation with centrifugal pump and non-return valve. They provide better control of closing of the non-return valve.


Selecting linear, S, U or customized profiles assigns both the acceleration and deceleration ramps.

### S ramps

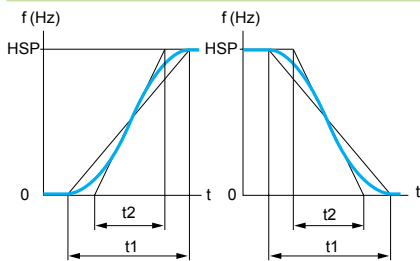


HSP: high speed  
 t1: ramp time set  
 $t2 = 0.6 \times t1$   
 The rounding coefficient is fixed.

### U ramps

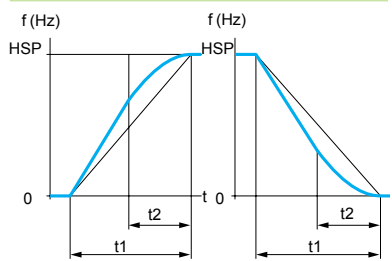


HSP: high speed  
 t1: ramp time set  
 $t2 = 0.5 \times t1$   
 The rounding coefficient is fixed.

### Customized ramps

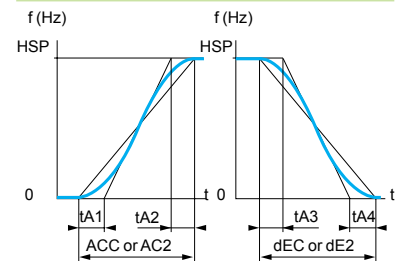

HSP: high speed  
 tA1: adjustable between 0 and 100% (of ACC or AC2)  
 tA2: can be set between 0 and (100% - tA1) (of ACC or AC2)  
 tA3: can be set between 0 and 100% (of dEC or dE2)  
 tA4: can be set between 0 and (100% - tA3) (of dEC or dE2)  
 ACC: acceleration ramp 1 time  
 AC2: acceleration ramp 2 time  
 dEC: deceleration ramp 1 time  
 dE2: deceleration ramp 2 time



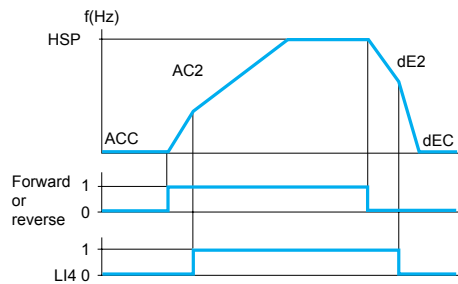

Acceleration 1 (ACC) and deceleration 1 (dEC):  
 - Adjustment 0.1 to 999.9 s  
 - Factory setting 3 s  
 Acceleration 2 (AC2) and deceleration 2 (dE2):  
 - Adjustment 0.1 to 999.9 s  
 - Factory setting 5 s  
 HSP: high speed

### ■ Ramp switching

This function is used to switch two acceleration and deceleration ramp times, which can be adjusted separately.

Ramp switching can be enabled by:

- A logic input
- A frequency threshold
- A combination of logic input and frequency threshold

This function is suitable for:

- Material handling with smooth starting and approach
- Machines with fast steady state speed correction

*Example of switching using logic input LI4*

### ■ Automatic adaptation of deceleration ramp

This function is used to automatically adapt the deceleration ramp if the initial setting is too low for the inertia of the load. It avoids the drive locking in the event of an **overbraking** fault.

The function is suitable for all applications which do require precise stopping and do not use braking resistors.

Automatic adaptation must be cancelled if the machine has position control with stopping on a ramp and a braking resistor installed. It is automatically disabled if the brake sequence is configured.

■ **Voltage/frequency ratio**

□ Motor and power supply characteristics

This function is used to determine the limit values for the voltage/frequency ratio according to the characteristics of the line supply, motor and application.

The following values should be set for constant or variable torque applications with or without overspeed:


- The base frequency corresponding to the line supply
- The nominal motor frequency (in Hz) given on the motor rating plate
- The nominal motor voltage (in V) given on the motor rating plate
- The maximum output frequency of the drive (in Hz)

□ Type of voltage/frequency ratio

This is used to adapt the voltage/frequency ratio to the application in order to optimize performance for the following applications:

- Constant torque applications (machines with average loads operating at low speed) with motors connected in parallel or special motors (e.g. resistive cage motor): ratio **L**
- Variable torque applications (pumps, fans): ratio **P**
- Machines with heavy loads operating at low speed, machines with fast cycles, with (sensorless) flux vector control: ratio **n**
- Energy saving, for machines with slow torque and speed variations: ratio **nLd**.

The voltage is automatically reduced to minimum according to the necessary torque.

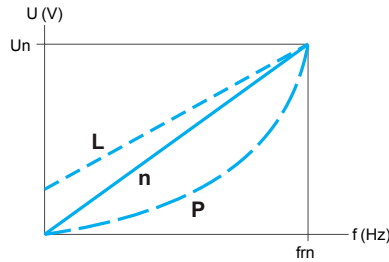

Un: nominal motor voltage  
fn: nominal motor frequency

■ **Auto-tuning**

Auto-tuning can be performed:

- Voluntarily by the operator using dialogue tools via local control or the serial link
- Each time the drive is switched on
- On each run command
- By enabling a logic input

Auto-tuning is used to optimize application performance.

■ **Switching frequency, noise reduction**

Adjusting the switching frequency setting reduces the noise generated by the motor. The switching frequency is modulated randomly in order to avoid resonance. This function can be disabled if it causes instability.

High frequency switching of the intermediate DC voltage can be used to supply the motor with a current wave that has little harmonic distortion. The switching frequency can be adjusted during operation to reduce the noise generated by the motor.

Value: 2 to 16 kHz. Factory setting 4 kHz

For all applications which require low motor noise.

### ■ Skip frequencies

This function suppresses one or two critical speeds that may cause mechanical resonance.

It is possible to prohibit prolonged operation of the motor on 1 or 2 frequency bands ( $\pm 1$  Hz), around an adjustable frequency on the speed range.

This function is suitable for lightweight machines, bulk product conveyors with an unbalanced motor, fans and centrifugal pumps.

### ■ Speed reference

The speed reference can come from different sources, depending on the drive configuration:

- References provided by 3 analog inputs
- The navigation button reference
- The +/- speed function via logic input, using the keypad or remote display terminal keys
- The remote display terminal reference
- Speed references provided by the communication bus or networks

These sources are managed by programming the reference functions and channels.

### ■ Analog inputs

There are 3 analog inputs:

- 2 voltage inputs:
  - 0-10 V (AI1)
  - $\pm 10$  V (AI2)
- 1 current input:
  - X-Y mA (AI3), where X is configurable between 0 and 20 mA, and Y is configurable between 4 and 20 mA

### ■ Preset speeds

This function is used to switch preset speed references.


Choose between 2, 4, 8 or 16 preset speeds.

Enabled by means of 1, 2, 3 or 4 logic inputs.

The preset speeds are adjustable in increments of 0.1 Hz from 0 Hz to 500 Hz.

This function is suitable for material handling and machines with several operating speeds.

Example of operation with 4 preset speeds and 2 logic inputs

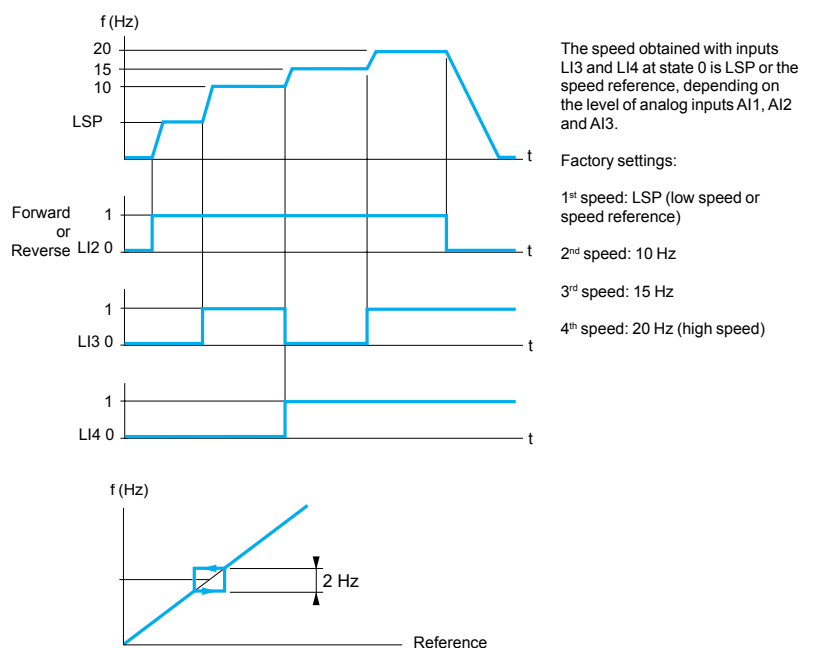

Motor speed change depending on the skip frequency reference

### ■ +/- speed

This function is used to increase or decrease a speed reference by means of 1 or 2 logic inputs, with or without the last reference being saved (motorized potentiometer function).

This function is suitable for centralized control of a machine with several sections operating in one direction or for control by a pendant control station of a material handling crane with two operating directions.

Two types of operation are available:


- Use of single-action buttons: two logic inputs are required in addition to the operating direction(s).

The input assigned to the + speed command increases the speed, the input assigned to the - speed command decreases the speed.

*Example of +/- speed with 2 logic inputs, single-action buttons and reference saving*

- Use of double-action buttons (only one logic input assigned to + speed is necessary).

Logic inputs:

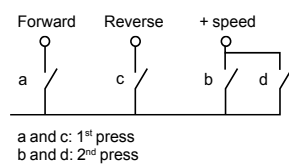

|                | Released (- speed) | 1 <sup>st</sup> press (speed maintained) | 2 <sup>nd</sup> press (+ speed) |
|----------------|--------------------|--|---------------------------------|
| Forward button | -                  | a  | a and b                         |
| Reverse button | -                  | c  | c and d                         |



*Example with double-action buttons and 1 logic input*

**Note:** This type of +/- speed control is incompatible with 3-wire control.


### ■ Save reference

This function is associated with +/- speed control.

It enables the last speed reference prior to the loss of the run command or line supply to be read and saved. The saved reference is applied to the next run command.

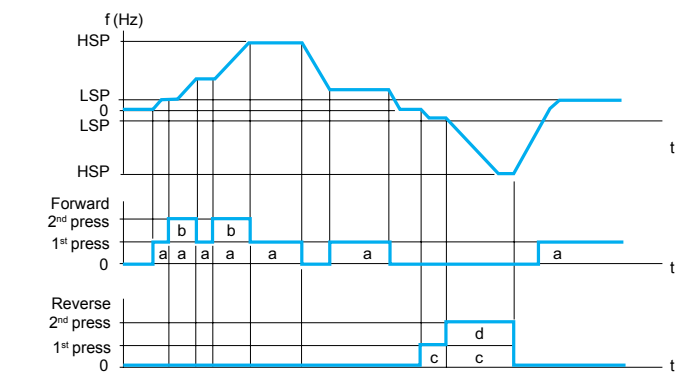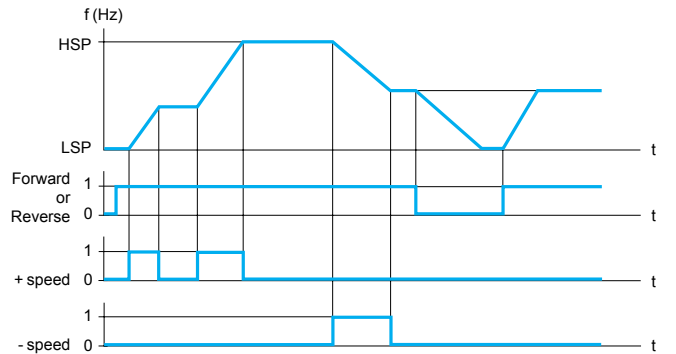

LSP: low speed; HSP: high speed

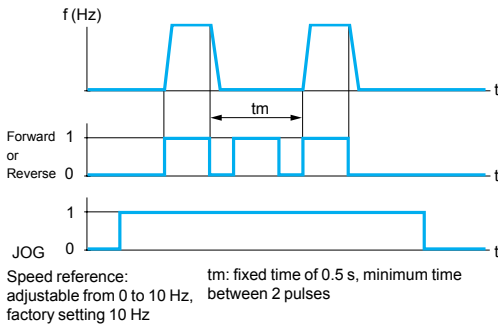

Example of jog operation

### ■ Jog operation

This function is used for pulse operation with minimum ramp times (0.1 s), a limited speed reference and minimum time between 2 pulses. It is enabled by 1 logic input and pulses given by the operating direction command.

This function is suitable for machines with product insertion in manual mode (e.g. gradual movement of the mechanism during maintenance operations).


### ■ Command and reference channels

There are several command and reference channels, which can be independent. Commands (forward, reverse, etc.) and speed references can be given via the following channels:

- Terminals (logic inputs and analog I/O)
- Local mode (STOP/RESET and RUN keys and navigation button)
- Remote display terminal
- Serial link:
  - Remote display terminal
  - Modbus control word
  - CANopen control word

The command channels and speed reference channels can be separate. E.g. speed reference issued by CANopen and command issued by the remote display terminal.


**Note:** The STOP/RESET keys on the Human-Machine interface keypad and the remote display terminal can retain their priority. The Summing inputs and PI regulator functions only apply to one reference channel.

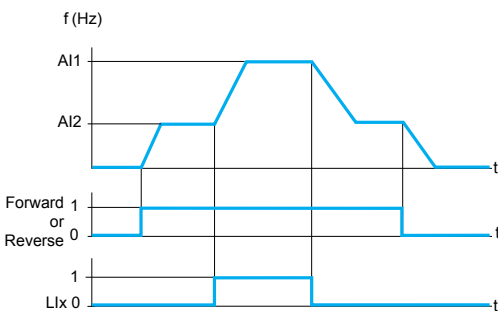

Example of reference switching

### ■ Reference switching

Switching between 2 speed references can be enabled via:

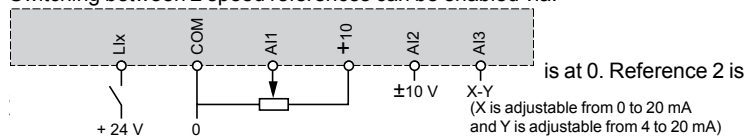


Connection diagram for reference switching

### ■ Summing inputs

This function is used to add together 2 to 3 speed references from different sources. The references to be added together are selected from all the possible types of speed reference.

- E.g.
- Reference 1 from AI1
  - Reference 2 from AI2
  - Reference 3 from AIP
- Drive speed reference** = reference 1 + reference 2 + reference 3.

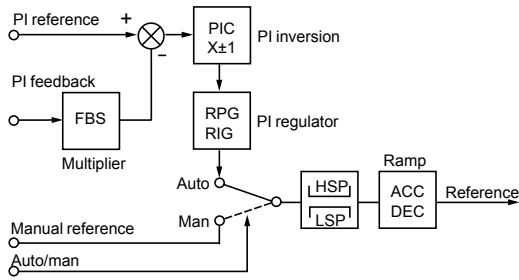

ACC: Acceleration  
 DEC: Deceleration  
 FBS: PI feedback multiplication coefficient  
 HSP: High speed  
 PIC: Reversal of the direction of correction of the PI regulator  
 LSP: Low speed  
 RIG: PI regulator integral gain  
 RPG: PI regulator proportional gain

PI feedback

### ■ PI regulator

This function is used for simple control of a flow rate or a pressure with a sensor supplying a feedback signal adapted to the drive. It is suitable for pumping and ventilation applications.

#### □ PI reference:

- Internal regulator reference, adjustable from 0 to 100
- Regulation reference selected from all the possible types of regulation reference
- Preset PI references
- **2 or 4 preset PI references** adjustable from 0 to 100, require the use of 1 or 2 logic inputs respectively

#### □ Manual reference

- Speed reference selected from all the possible types of speed reference

#### □ PI feedback:

- Analog input AI1, AI2 or AI3

#### □ Auto/Man:

- Logic input LI for switching operation to speed reference (Man) or PI regulation (Auto)

During operation in automatic mode, the process feedback can be adapted to correct inverse PI, adjust the proportional and integral gain, or apply a ramp (time = ACC - DEC) for establishing the PI action on starting and stopping. The motor speed is limited to between LSP and HSP.

**Note:** The PI function is incompatible with the Preset speeds and JOG functions. The PI reference can also be transmitted on line via the Modbus RS 485 serial link or via the CANopen bus.

### ■ Current limit switching

A second current limit can be configured between 0.25 and 1.5 times the nominal drive current.

This function limits the torque and the temperature rise of the motor.

Switching between the two current limits can be enabled via:

- A logic input
- A bit in a Modbus or CANopen control word

### ■ Limiting low speed operating time

The motor is stopped automatically after a period of operation at low speed (LSP) with a zero reference and a run command present.

This time can be set between 0.1 and 999.9 seconds (0 corresponds to an unlimited time). Factory setting: 0 s. The motor restarts automatically on the ramp when the reference reappears or if the run command is interrupted and then re-established.

This function is suitable for automatic stopping/starting of pressure-regulated pumps.

### ■ Motor switching

This function allows two motors with different powers to be supplied alternately by the same drive. Switching must take place with the drive stopped and locked, using an appropriate sequence at the drive output.

The function can be used to adapt the motor parameters. The following parameters are switched automatically:


- Nominal motor voltage
- Nominal motor frequency
- Nominal motor current
- Nominal motor speed
- Motor cosine Phi (power factor)
- Selection of the type of voltage/frequency ratio for motor 2
- IR compensation, motor 2
- Motor frequency loop gain
- Motor stability
- Motor slip compensation

Motor thermal protection is disabled by this function.


Motor switching can be enabled by:

- A logic input
- A bit in a Modbus or CANopen control word


With hoisting applications, this function enables a single drive to be used for vertical and horizontal movements.

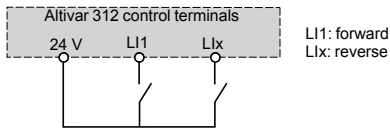

Wiring diagram for 2-wire control

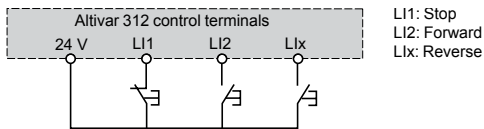

Wiring diagram for 3-wire control

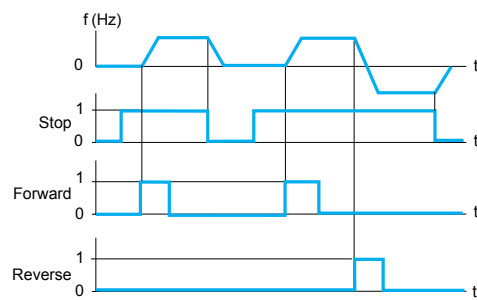

Example of 3-wire control operation

### ■ Control mode switching

Switching the command channel provides a choice of 2 control modes. Switching is enabled by:

- A logic input
- A bit in a Modbus or CANopen control word

### ■ 2-wire control

This function is used to control the direction of operation by means of a stay-put contact. It is enabled by means of 1 or 2 logic inputs (one or two directions of operation).

This function is suitable for all non-reversing and reversing applications.

Three operating modes are possible:

- Detection of the state of the logic inputs
- Detection of a change of state of the logic inputs
- Detection of the state of the logic inputs with forward operation having priority over reverse

### ■ 3-wire control

This function is used to control the operating direction and stopping by means of pulsed contacts.

It is enabled by means of 2 or 3 logic inputs (1 or 2 directions of operation).

It is suitable for all non-reversing and reversing applications.

### ■ Forced local mode

Forced local mode imposes control via the terminals or display terminal and disables all other control modes.

The following references and commands are available for forced local mode:

- References AI1, or AI2, or AI3 and command via logic inputs
- Reference and command via RUN and STOP/RESET keys and the navigation button
- Reference and command via the remote display terminal

The changeover to forced local mode is enabled by a logic input.

### ■ Freewheel stop

This stops the motor by resistive torque if the motor power supply is cut.

A freewheel stop is achieved by:

- Configuring a normal stop command as a freewheel stop (on disappearance of a run command or appearance of a stop command)
- Enabling a logic input

### ■ Fast stop

This is used to achieve a braked stop with a deceleration ramp time (divided by 2 to 10) that is acceptable for the drive/motor unit without locking on an overbraking fault. It is used for conveyors with electrical emergency stop braking.

A fast stop is achieved by:

- Configuring a normal stop as a fast stop (on disappearance of a run command or appearance of a stop command)
- By enabling a logic input

### ■ DC injection stop


This function is used for low speed braking of high-inertia fans, or for maintaining torque when stopping fans located in an airflow.

A DC injection stop is achieved by:

- Configuring a normal stop as a DC injection stop (on disappearance of a run command or appearance of a stop command)
- Enabling a logic input

The DC value and the standstill braking time are adjustable.



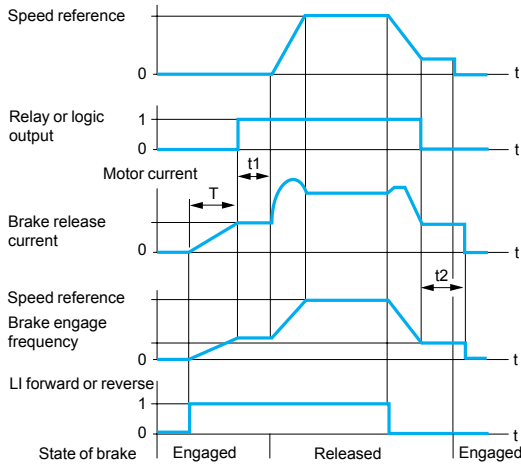

Accessible settings:  
 t1: brake release time delay  
 t2: brake engage time delay

**Brake control**

■ **Brake control**

This function is used to manage control of an electromagnetic brake in synchronization with starting and stopping the motor to avoid jolts and speed errors. The brake control sequence is managed by the drive. Adjustable values for releasing the brake: current threshold and time delay. Adjustable values for engaging the brake: frequency threshold and time delay. Enabled by: relay logic output R2 or logic output AOC assigned to brake control. This function is suitable for material handling applications with movements equipped with electromagnetic brakes (hoisting) and machines requiring holding brake control (unbalanced machines).

□ **Principle:**

- Vertical hoisting movement: Maintains motor torque in an upward direction when the brake is being released and engaged, in order to hold the load and start smoothly as soon as the brake is released.
- Horizontal hoisting movement: Synchronizes brake release with the build-up of torque during starting and brake engage at zero speed on stopping, to prevent jolting. The recommended brake control settings for vertical hoisting applications are as follows (for horizontal hoisting applications, set the current threshold to zero):
  - Brake release current: Set the brake release current to the nominal current indicated on the motor. If, during testing, the torque is insufficient, increase the brake release current (the maximum value is imposed by the drive).
  - Acceleration time: For hoisting applications it is advisable to set the acceleration ramps to more than 0.5 seconds. Ensure that the drive does not change to current limiting.

The same recommendation applies for deceleration.

Note: For a hoisting movement, a braking resistor should be used. Ensure that the selected settings and configurations will not result in dropping or loss of control of the load being lifted.

- Brake release time delay t1: Adjust according to the type of brake. It is the time required for the mechanical brake to release.
- Brake engage frequency: Set to twice the nominal slip, then adjust according to the result.
- Brake engage time delay t2: Adjust according to the type of brake. It is the time required for the mechanical brake to engage.

■ **Limit switch management**

This function is used to manage the operation of one or two limit switches (with 1 or 2 operating directions).

Each limit (forward, reverse) is associated with a logic input. The type of stop that occurs on detection of a limit is configurable as normal, freewheel or fast stop. Following a stop, the motor is permitted to restart in the opposite direction only.

■ **Monitoring**

The following data can be displayed:

- Frequency reference
- Internal PI reference
- Frequency reference (absolute value)
- Output frequency applied to the motor (value signed in two's complement)
- Output frequency in customer units
- Current in the motor
- Motor power: 100% = nominal power
- Line voltage
- Motor thermal state:
  - 100%: nominal thermal state, 118%: motor overload threshold
- Drive thermal state:
  - 100%: nominal thermal state, 118%: drive overload threshold
- Motor torque: 100% = nominal torque
- Last detected fault
- Operating time
- Auto-tuning status
- Configuration and state of logic inputs
- Configuration of analog inputs

### ■ Fault management

There are various operating modes in the event of resettable faults:

- Freewheel stop
- The drive switches to the fallback speed
- The drive maintains the speed at which it was operating when the fault occurred, until the fault disappears
- Stop on ramp
- Fast stop

The following resettable faults are detected:

- Drive overheating
- Motor overheating
- CANopen bus fault
- Modbus serial link failure
- External faults
- Loss of 4-20 mA signal

### ■ Fault reset

This function is used to clear the last fault by means of a logic input.

The restart conditions after a reset are the same as those for a normal power-up. Resets the following faults: overvoltage, overspeed, external fault, drive overheating, output phase loss, DC bus overvoltage, loss of 4-20 mA reference, load slipping, motor overload if the thermal state is less than 100%, serial link fault.

Line supply undervoltage and input phase loss faults are reset automatically when the line supply is restored.

This function is suitable for applications where the drives are difficult to access, for example on moving parts or in material handling systems.

### ■ General reset (disables all faults)

This function disables all faults, including thermal protection (forced operation), and can result in irreparable damage to the drive.

**This invalidates the warranty.**

This function is suitable for applications where restarting may be crucial (conveyor in an oven, smoke extraction system, machines with solidifying products that need to be removed).

The function is enabled by a logic input.

Fault monitoring is active if the logic input is at state 1.

All faults are reset on a change of state  $\uparrow$  of the logic input.

### ■ Controlled stop on loss of line supply

This function is used to control motor stopping on a loss of line supply.

It is suitable for material handling, machines with high inertia, continuous product processing machines.

Possible types of stop:

- Locking of the drive and freewheel stop
- Stop which uses the mechanical inertia to maintain the drive power supply as long as possible
- Stop on ramp
- Fast stop (depends on the inertia and the braking ability of the drive)

### ■ Stop mode in the event of a fault

The type of stop that occurs on detection of a fault is configurable as normal, freewheel or fast for the following faults:

- External fault (detection enabled by a logic input or a bit in a Modbus or CANopen control word)
- Motor phase loss fault

If an output contactor is being used between the drive and the motor, the motor phase loss fault should be disabled.

### ■ Automatic catching of a spinning load with speed detection ("catch on the fly")

This function is used to restart the motor smoothly after one of the following events, provided the run command is still present:

- Loss of line supply or power off
- Fault reset or automatic restart
- Freewheel stop

On disappearance of the event, the rms speed of the motor is detected in order to restart on a ramp from this speed and return to the reference speed. Speed detection can take up to 1 s depending on the initial deviation.

This function is automatically disabled if the brake sequence is configured.

It is suitable for machines for which the motor speed loss is negligible during the loss of line supply (such as machines with high inertia, fans and pumps driven by a residual flow, etc.).

### ■ Automatic restart

This function enables the drive to be restarted automatically after it has locked in fault mode, provided the fault has disappeared and the other operating conditions permit a restart.

This restart is performed by a series of automatic attempts separated by increasingly longer waiting periods of 1 s, 5 s, 10 s, then 1 minute for subsequent periods.

The restart procedure can last between 5 minutes and an unlimited time.

If the drive has not restarted after the configured time, it will lock and the procedure is abandoned until it has been powered off and on again.

The faults which permit this type of restart are:

- Line overvoltage
- Motor thermal overload
- Drive thermal overload
- DC bus overvoltage
- Loss of one input phase
- External fault
- Loss of 4-20 mA reference
- CANopen bus fault
- Modbus serial link fault
- Line voltage too low. For this fault, the function is always active, even if it is not configured.

For these faults, the relay configured as a fault relay remains activated if the function is configured. The speed reference and direction of operation must be maintained for this function.

This function is suitable for machines or installations which are in continuous operation or are not monitored, and where a restart will not endanger equipment or personnel in any way.

### ■ Derated operation in the event of an undervoltage

The line voltage monitoring threshold is lowered to 50% of the motor voltage.

In this case, a line choke must be used and the performance of the drive cannot be guaranteed.

### ■ Fault relay, unlocking

The fault relay is energized when the drive is powered up and is not faulty.

It contains an N/C contact and an N/O contact with common point.

The drive is unlocked after a fault in one of the following ways:

- By powering down until the ON LED goes out, then switching the drive back on
- By assigning a logic input to the External faults function
- By the Automatic restart function, if it has been configured

### ■ Resetting operating time to zero

The drive operating time can be reset to zero.

### ■ Motor thermal protection

The theoretical temperature rise of the motor is continuously calculated to provide indirect thermal protection. Thermal protection is adjustable from 0.2 to 1.5 times the nominal drive current. This function is suitable for all applications with self-cooled motors.

### ■ Drive thermal protection


Thermal protection, by a PTC probe mounted on the heatsink or integrated in the power module, ensures that the drive is protected in the event of poor ventilation or excessive ambient temperatures. Locks the drive in the event of a fault.

#### Drive thermal protection curves


### ■ R1/R2 relay configuration

The following states are signalled when the relay is powered on:

- Drive fault
- Drive running
- Frequency threshold reached
- High speed reached
- Current threshold reached
- Frequency reference reached
- Motor thermal threshold reached
- Brake sequence (R2 only)

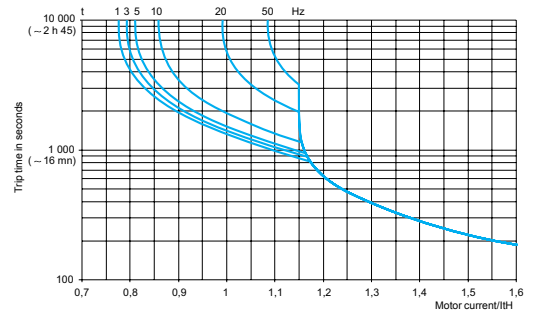

Motor thermal protection curves

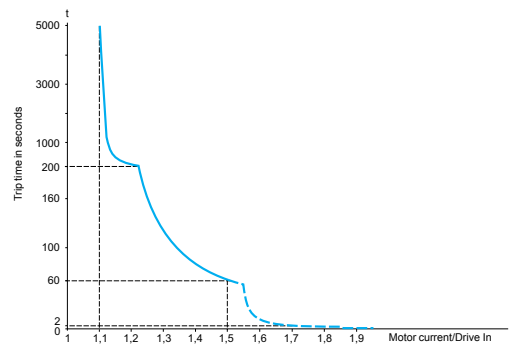

### ■ AOC/AOV analog outputs

The same data is available on analog outputs AOC and AOV.

The following assignments are possible:

- Motor current
- Motor frequency
- Motor torque
- Power supplied by the drive
- Drive fault
- Frequency threshold reached
- High speed reached
- Current threshold reached
- Frequency reference reached
- Motor thermal threshold reached
- Brake sequence

Adjusting analog outputs AOC/AOV modifies the characteristics of the current analog output AOC or the voltage analog output AOV.

AOC: can be set as 0-20 mA or 4-20 mA

AOV: can be set as 0-10 V

### ■ Saving and retrieving the configuration

It is possible to save a configuration. This function is used to store a drive configuration in addition to the current configuration.

Retrieving this configuration clears the current configuration.

### Function compatibility table

■ **Configurable I/O**

Functions which are not listed in this table are fully compatible. Stop functions have priority over run commands.

The selection of functions is limited by:

- The number of drive I/O
- The incompatibility of certain functions with one another

| Functions               | Summing inputs | +/- speed | Limit switch management | Preset speeds | PI regulator | Jog operation | Brake sequence | DC injection stop | Fast stop | Freewheel stop |
|-------------------------|----------------|-----------|-------------------------|---------------|--------------|---------------|----------------|-------------------|-----------|----------------|
| Summing inputs          |                | ⊖         |                         | ↑             | ⊖            | ↑             |                |                   |           |                |
| +/- speed               | ⊖              |           |                         | ⊖             | ⊖            | ⊖             |                |                   |           |                |
| Limit switch management |                |           |                         |               | ⊖            |               |                |                   |           |                |
| Preset speeds           | ←              | ⊖         |                         |               | ⊖            | ↑             |                |                   |           |                |
| PI regulator            | ⊖              | ⊖         | ⊖                       | ⊖             |              | ⊖             | ⊖              |                   |           |                |
| Jog operation           | ←              | ⊖         |                         | ←             | ⊖            |               | ⊖              |                   |           |                |
| Brake sequence          |                |           |                         |               | ⊖            | ⊖             |                | ⊖                 |           |                |
| DC injection stop       |                |           |                         |               |              |               | ⊖              |                   |           | ↑              |
| Fast stop               |                |           |                         |               |              |               |                |                   |           | ↑              |
| Freewheel stop          |                |           |                         |               |              |               | ←              | ←                 |           |                |

|   |                        |
|---|------------------------|
| ⊖ | Incompatible functions |
| ⬢ | Compatible functions   |
| ⬜ | Not applicable         |


**Priority functions** (functions which cannot be active at the same time)

|   |   |
|---|---|
| ← | The arrow indicates which function has priority                               |
| ↑ | Example: the Freewheel stop function has priority over the Fast stop function |

**Schneider Electric Canada, Inc.**

5985 McLaughlin Road  
Mississauga, ON L5R 1B8  
Tel: 1-800-565-6699  
[www.schneider-electric.com](http://www.schneider-electric.com)

Document Number DIA2ED2090404EN\_CA14 R0



April 2014 SF